Samsung GALAXY RUGBY PRO™

RUGGEDIZED 4G LTE SMARTPHONE

User Manual

Please read this manual before operating your phone, and keep it for future reference.

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the “Phone System”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product, including but not limited to 'PowerTOP' and 'e2fsprogs', incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit: http://opensource.samsung.com.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING

THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY.

Samsung Telecommunications America (STA), LLC

Headquarters:	Customer Care Center:
1301 E. Lookout Drive	1000 Klein Rd.
Richardson, TX 75082	Plano, TX 75074
Toll Free Tel:	1.888.987.HELP (4357)

Internet Address: http://www.samsungusa.com

©2012 Samsung Telecommunications America, LLC. Samsung is a registered trademark of Samsung Electronics Co., Ltd.

Do you have questions about your Samsung Mobile Phone? For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at: http://www.samsung.com/us/support.

Nuance®, VSuite™, T9® Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

The Bluetooth® word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Openwave® is a registered Trademark of Openwave, Inc.

SRS CS Headphone and SRS WOW HD are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under license from SRS Labs, Inc.

DIVX HD, DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu (tap **Apps > Settings > About device > Legal information > License settings > DivX® VOD > Register**). Go to vod.divx.com for more information on how to complete your registration.

Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Mail, Google Maps, Google Music, Google Talk, Picasa, YouTube and other marks are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Swype and the Swype logos are trademarks of Swype, Inc. © 2010 Swype, Inc. All rights reserved.

Devices purchased for use on AT&T's system are designed for use exclusively on AT&T's system. You agree that you won't make any modifications to the Equipment or programming to enable the Equipment to operate on any other system. A voice plan is required on all voice-capable devices, unless specifically noted otherwise in the terms governing your agreement. Some devices or plans may require you to subscribe to a data plan.

Your phone is designed to make it easy for you to access a wide variety of content. For your protection, AT&T wants you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, AT&T offers privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, AT&T's privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected.

Your phone may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

AT&T may collect certain types of information from your device when you use AT&T services to provide customer support and to improve its services. For more information on AT&T's Privacy Policy, visit http://www.att.com/privacy.

Your phone features earSmart™, an intelligent voice processor that delivers a clear voice experience, allowing you to **hear and be heard**™ in nearly any environment. earSmart technology uses the science of human hearing to distinguish sounds, identify your voice and suppress surrounding noise, for clear conversations just about anywhere.

How Does It Work?

- The earSmart voice processor in your phone captures your voice and all the sounds around you.
- Working like the human ear, it processes and distinguishes these sounds, isolates your voice conversation, and removes background noise - from both ends of a call.
- It also automatically equalizes and adjusts voice volume so you can hear and talk naturally, even in the noisiest places.
- With earSmart technology, you can talk where you want, and have clear conversations for mobile calls, video chats, even speakerphone calls, without worrying about surrounding noise.

Table of Contents

Section 1: Getting Started 6
- Setting Up Your Phone 6
- Charging a Battery 10
- Switching the Phone On or Off 12
- Locking and Unlocking the Touch Screen 12
- Setting up your Phone with Ready2Go 12
- Creating a Samsung Account 13
- Creating a New Google Account 13
- Retrieving your Google Account Password 14
- Setting Up Your Voice Mail 14
- Troubleshooting 14

Section 2: Understanding Your Phone 15
- Features of Your Phone 15
- Front View of Your Phone 16
- Top, Bottom, and Side Views 17
- Rear View of Your Phone 18
- Display Layout 19
- Menu Navigation 29
- Customizing Your Home Screen 34
- Notification Bar 40
- Memory Card 41

Section 3: Call Functions 43
- Displaying Your Phone Number 43
- Making a Call 43
- Making Emergency Calls 44
- Making a Call Using Speed Dial 45
- Making a Call from the Address Book 45
- Answering a Call 46
- Dialing Options 47
- Call Log 47
- Call Duration 50
- Options During a Call 50
- Call Settings 54

Section 4: Entering Text 60
- Text Input Methods 60
- Entering Text Using the Samsung Keyboard 60
- Changing the Text Input Mode - Keypad 61
- Using ABC Mode 61
- Using Symbol/Numeric Mode 62
- Predictive Text 62

Samsung Keyboard Settings 63
Using the Google Voice Typing Feature 63
Entering Text Using Swype 63
Section 5: Contacts and Your Address Book 65
AT&T Address Book Activation 65
Adding a New Contact 66
Editing an Existing Contact 68
Using Contacts 68
Joining Contacts 70
Synchronizing Accounts 71
Address Book Options 72
Groups 74
Address Book Favorites 75
Managing Address Book Contacts 76
Section 6: Multimedia 78
AT&T Locker 78
Music Player 78
Using Playlists 80
Google Play Music 81
Video Player 82
Play Movies & TV 83
Live TV 83
Gallery 84
Camera 86
Using the Camera 86
Camera Options 87
Using the Camcorder 90
Camcorder Options 91
Section 7: Messaging 93
Types of Messages 93
Creating and Sending Messages 93
Message Options 94
Viewing New Received Messages 96
Deleting Messages 97
Message Search 98
Messaging Settings 98
Using Email 100
Using Gmail 102
Google Talk 103
Google + ... 103
Messenger 104
Messages App 104

Section 8: Changing Your Settings 106
Accessing Settings 106
Wi-Fi Settings 106
Bluetooth settings 107
Data Usage 107
More Settings 108
Home screen mode 114
Blocking Mode 114
Sound Settings 115
Display Settings 116
Customizable key 117
Storage 117
Power Saving Mode 118
Battery 119
Application manager 119
Location Services 120
Lock Screen Settings 121
Security 122
Language and Input 125
Backup and Reset 130
Add Account 131
Motion 132
Accessory Settings 132
Date and Time 133
Accessibility 133
Developer Options 134
About Device 136
Section 9: Connections 138
Internet 138
Wi-Fi 145
NFC 149
Bluetooth 149
PC Connections 153
NFC 154
Section 10: Applications 155
AllShare Play 155
Amazon Kindle 158
AT&T Code Scanner 158
AT&T DriveMode 159
AT&T FamilyMap 159
AT&T Locker 160
AT&T Navigator 160
AT&T Ready2Go 161
AT&T Smart Wi-Fi 161

Browser 161
Calculator 161
Calendar 162
Camera 163
Clock 163
Contacts 166
DeviceHelp 166
Downloads 166
Email 167
Facebook 167
Gallery 167
Gmail 167
Google 167
Google + ... 168
Kies air 168
Live TV 168
Local 168
Maps 168
Memo 170
Messages 171
Messaging 171
Messenger 171
Mobile Hotspots 171
Music Player 171
My Files 171
myAT&T 172
Navigation 173
Phone 175
Play Books 175
Play Magazines 175
Play Movies & TV 175
Play Music 176
Play Store 176
S Voice 176
Settings 177
Talk 177
Video Player 177
Voice Recorder 177
Voice Search 178
YouTube 179
YPmobile 180

Section 11: Health and Safety Information 182
Exposure to Radio Frequency (RF) Signals 182
Specific Absorption Rate (SAR) Certification Information 187
FCC Part 15 Information to User 188
Smart Practices While Driving 189
Battery Use and Safety 190
Samsung Mobile Products and Recycling 192
UL Certified Travel Charger 193
Display / Touch-Screen 194
GPS 194
Emergency Calls 195
Care and Maintenance 196
Responsible Listening 197
Operating Environment 199
FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices 201
Restricting Children's Access to Your Mobile Device 202
FCC Notice and Cautions 203
Other Important Safety Information 203

Section 12: Warranty Information 205
Standard Limited Warranty 205
End User License Agreement for Software ... 210

Section 13: Samsung Product Registration 218

Index 219

Section 1: Getting Started

This section explains how to start using your phone by first configuring your hardware, activating your service, and then setting up your voice mail.

Setting Up Your Phone

Prior to use it is necessary to install both the battery and SIM into their corresponding internal compartments. The microSD™ card slot is also located in this same internal area.

1. Use a coin or other object inserted in the slot on the back cover and turn it counter-clockwise to unlock the battery cover.

2. Remove the back cover by inserting a fingernail into the slot on the top of your phone (1).

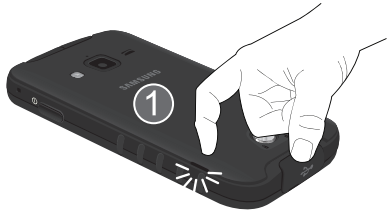

3. Lift the cover up (2) and away from the phone (3).

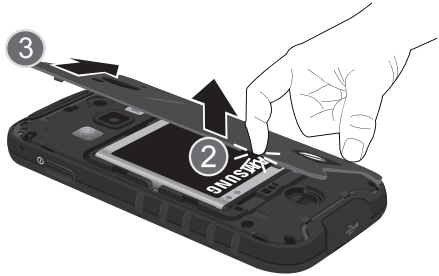

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, available optional services, and many others features.

Important! The plug-in SIM card information and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

- Carefully slide the SIM card into the SIM card socket (as shown) until the card locks into place.
  - Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown.

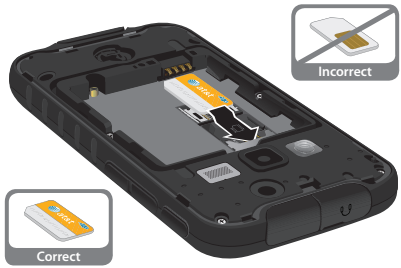

Note: If the card is not inserted correctly, the phone will not detect the SIM card. Re-orient the card back into the slot if the SIM is not detected.

Installing the Battery

1. Insert the battery into the opening on the back of the phone, making sure the connectors align (1).
2. Gently press down to secure the battery (2).

Removing and Installing the Memory Card

You can use a microSD™ (SD) or microSDHC™ card to expand available memory space if you desire. This secure digital card enables you to exchange images, music, and data between SD-compatible devices. This type of memory card is designed for use with this mobile phone and other devices.

Note: Your phone has been tested to support up to a 32GB memory card.

Installing the Memory Card

1. Push the microSD card into the slot until it slides under the small silver bar (1).
   - Make sure the microSD's gold contact pins face downward and the card is securely inserted.

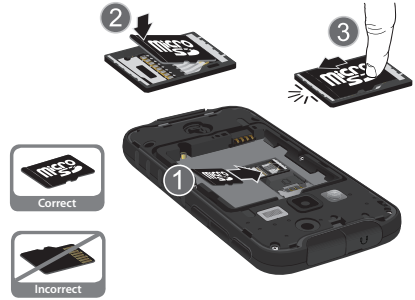

2. Press down on the microSD card (2).
3. Slide the microSD card in the opposite direction so that it becomes captive under the other silver bar (3).
4. To remove the microSD card, reverse the procedure.

For more information on Memory Cards, see *"Memory Card"* on page 41.

Installing the Back Cover

1. Place the battery cover onto the back of the phone (1) and press down (2).

2. Press along the edge of the back cover (3) until you have a secure seal

Important! When placing the cover back on the phone, press down firmly along the edges to ensure that the cover is flush with the phone. This will ensure that the battery compartment is pressurized and that the phone is waterproof.

3. Use a coin or other object inserted in the slot on the back cover (A) and turn it clockwise to lock the battery cover (B).



Note: Make sure the battery is properly installed before switching on the phone.

Charging a Battery

Your device is powered by a rechargeable Li-ion battery. The Travel Charger that is used to charge the battery, is included with your device. Use only Samsung-approved batteries and chargers.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 4 hours.

Note: Long backlight settings, searching for service, vibrate mode, web browser use, and other variables may reduce the battery's talk and standby times.

Although you can use the phone while the battery is charging, doing so will require additional charging time.

Using the Travel Charger

Important! Verify that the handset battery is installed prior to connection. If the battery is not properly installed and the wall charger is connected, the handset may power off and on continuously, preventing proper operation.

1. Plug the flat end of the Travel Charger into the Power/ Accessory Interface connector and the other end into a standard AC wall outlet.
2. When charging is finished, remove the flat end from the interface connector jack on the phone.

Warning! If your handset has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty. For more information, refer to *"Standard Limited Warranty"* on page 205.

Note: Failure to unplug the wall charger before you remove the battery, can cause damage to the phone.

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, the battery icon ( ) blinks and the device sounds a warning tone at regular intervals. In this condition, your phone conserves its remaining battery power, not by turning off the backlight, but by entering the dimming mode. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your device's display. Solid color ( ) indicates a full charge.

When the battery level becomes too low, the phone automatically turns off.

Switching the Phone On or Off

1. Press and hold [Power] until the phone switches on.

2. Sweep your finger across the screen to unlock the phone.

Note: The display language is preset to English at the factory. To change the language, use the Language menu. For more information, refer to *"Changing Your Settings"* on page 106.

3. To switch off the phone, press and hold [Power], until the **Device options** screen displays.
4. Tap **Power off** to switch off the phone.
5. At the **Power off** prompt, tap **OK**.

Locking and Unlocking the Touch Screen

1. Press [Power] to lock the touch screen.
2. Press [Power] again to display the main screen then sweep your finger across the screen to unlock.

Setting up your Phone with Ready2Go

When you turn on your phone for the first time, you will be prompted to setup the AT&T Ready2Go feature.

AT&T Ready2Go allows you to quickly and easily setup your phone by using the web browser on your PC. You can set-up email accounts, import contacts, set wallpaper, configure Wi-Fi and many more features.

1. When the **Fast & Easy Phone Set-Up** screen displays, tap **Select Language** if you want to change the default language (English).
2. Touch **Get Started** to begin.

– or –

Touch **Cancel** to set up your phone later. You can access Ready2Go by tapping **Applications** → **AT&T Ready2Go**.

3. Read and follow the instructions on each screen.

Creating a Samsung Account

An active Samsung account is required to begin accessing applications such as ChatON and AllShare Play.

1. From the home screen, touch and hold the Notification Bar until the pull-down displays, then drag down vertically. For more information, refer to *"Notification Bar"* on page 40.
2. Tap **Samsung account**.
3. Tap **Create new account**.
4. Tap **Terms and conditions** to read them and tap **OK**.
5. Tap the **I accept all the terms above** checkbox.
6. Tap **Privacy policy** and read the policy and tap **OK**.
7. Tap **Agree**.
8. Enter the required information and tap **Sign up**.
9. At the Welcome screen, tap **Next**.
10. Follow the on-screen instructions to verify your email address and activate your account.

Creating a New Google Account

In order to utilize your device to the fullest extent, you will need to create a Google™ Account when you first use your device. With a Google Account, Google applications will always be in sync between your phone and computer.

If you did not create a new account during the setup procedure when you first turned your phone on, follow these steps:

1. From the Home screen, tap → **Gmail**.
   The **Add a Google Account** screen displays.
2. Tap **New** to create a new Google account.
   – or –
   If you already have a Google account, tap **Existing** to sign in and add the account to your phone.
3. Follow the on-screen instructions to add a Google Account.

Note: Once you have created a Google account, you only need to sign in.

Retrieving your Google Account Password

A Google account password is required for Google applications. If you misplace or forget your Google Account password, follow these instructions to retrieve it:

1. From your computer, use an Internet browser and navigate to http://google.com/accounts.
2. Click on the **Can't access your account?** link.
3. Tap the **I don't know my password** radio button.
4. Enter your Email address and click **Continue**.
5. Follow the password recovery procedure.

Setting Up Your Voice Mail

1. From the Home screen, tap , then tap .
2. Follow the tutorial to create a password, record a greeting, and record your name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail

1. From the Home screen, tap , then tap . You may be prompted to enter a password.
2. When connected, follow the voice prompts from the voice mail center.

Accessing Your Voice Mail From Another Phone

1. Dial your wireless phone number.
2. When you hear your voicemail greeting, press the asterisk key on the phone you are using.
3. Enter your password.

Troubleshooting

If your device has fatal errors, hangs up, or freezes, you may need to reset the device to regain functionality.

- If your device is frozen and unresponsive, press and hold the Power/Lock Key for 8 to 10 seconds.

Section 2: Understanding Your Phone

This section outlines some key features of your phone and describes the screen and the icons that appear when the phone is in use. It also shows how to navigate through the phone and provides information on using a memory card.

Features of Your Phone

Your phone is lightweight, easy-to-use and offers many useful features. The following list outlines a few of the features included in your phone.

- 4G LTE network with 1.5 gigahertz dual core processor
- Android v 4.1.1 Jelly Bean Platform
- Touch screen provides quick response to a variety of in-phone menus and options including applications and up to seven home screens
- Virtual (on-screen) QWERTY keyboard
- Ready access to the Internet
- Built-in Bluetooth 4.0 and advanced Wi-Fi® technology
- USB Tethering-capable
- Mobile Hotspot Capability
- Brilliant 4" Super AMOLED display
- NFC (Near Field Communication) and S Beam
- 5 Megapixel camera and camcorder with 1.3 Megapixel Front Facing camera
- AT&T GPS Navigation functionality provides real-time navigation
- HSDP+ 21 mbps high speed download capability
- 8 GB built-in memory (on-board)
- Up to 32 GB expandable memory slot
- Corporate and Personal Email
- Sync and update social network applications
- Over 450,000 Apps available to download
- Full Integration of Google Mobile™ Services (Gmail, YouTube, Google Maps, Google Voice Search)
- Multiple Messaging Options: Text/Picture/Video Messaging, AT&T Messages, Google+, Google Messenger, and Google Talk
- AllShare™ to share your media content across DLNA certified devices

Front View of Your Phone

1. **Front facing camera**: allows you to take pictures of yourself when you set the camera shooting mode to Self shot.
2. **Proximity sensors**: If the light path is blocked, for example, when holding the phone close to your ear, the touch screen will turn off. Also used for some Camera settings.
3. **Application icons**: you can place shortcuts to your favorite applications on the Home screen.
4. **Primary shortcuts**: allows quick access to important features such as Phone, Contacts, Messaging, Browser, and Apps. For more information, refer to *"Primary Shortcuts"* on page 19.
5. **Menu key**: allows you to access sub-menus with additional options for different features and applications such as Home screen, Phone, Contacts, Messaging, and Browser.
6. **Home key**: allows you to return to the main Home screen from any Home screen or menu. Press and hold to display Task Manager. Quickly press twice to activate the S Voice application.

7. **Back key**: allows you step backwards when navigating a menu or web page.
8. **Home screen indicator**: shows which Home screen is presently displayed.
9. **Google Quick Search bar**: a shortcut to Google Search that allows you to search for items on the internet.
10. **AccuWeather screen**: displays Time, Day, Date, Temperature and weather conditions for your area.
11. **Indicator icons**: shows the information needed to operate your phone, such as the received signal strength, phone battery level, time, unread Emails, missed calls, etc.
12. **External speaker**: allows you to hear the caller.

Top, Bottom, and Side Views

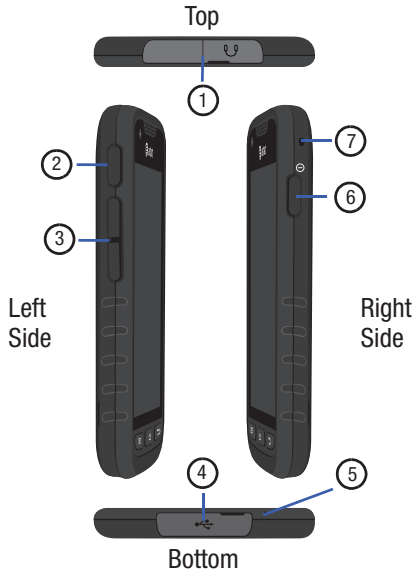

1. **3.5mm Headset jack**: allows you to plug in headphones.
2. **Customizable key**: allows you to quickly a function on your phone that you have set up. For more information, refer to *"Customizable key"* on page 117.
3. **Volume keys**: allow you to adjust the ringer volume while in standby mode or adjust the voice volume during a call. When receiving an incoming call, briefly press down either volume key (▬▬) to mute the ring tone. Adjusts text size when reading a message or using the browser in the Apps folder.
4. **Power/Accessory Interface connector**: allows you to connect a Travel Charger or other optional accessories such as a USB/data cable or a hands-free headset for convenient, hands-free conversations.
5. **Microphone**: allows other callers to hear you when you are speaking to them. It also used for the Speakerphone.
6. **Power/Lock key**: (▬) lets you power your phone on and off. Also allows you to lock or unlock the touch screen. For more information on locking your phone, see *"Locking and Unlocking the Phone"* on page 31.
7. **Lanyard port**: allows you to connect a lanyard or keychain to your phone.

Rear View of Your Phone

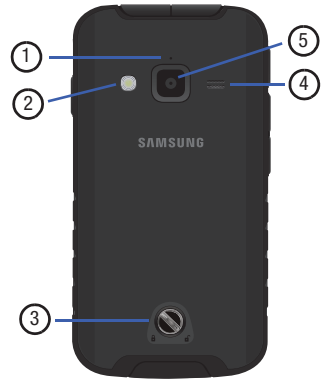

1. **Microphone**: used for noise cancellation and stereo recording.
2. **Flash**: is used to provide adequate light when taking pictures in dark places.

3. **Back Cover Lock**: allows you lock your back cover for an air-tight seal.
4. **External speaker**: allows you to hear when the Speakerphone is turned on.
5. **Camera lens**: is used to take pictures and shoot videos.

Display Layout

Your display screen provides a wealth of information about the phone's status and options, as well as providing access to application icons. For more information, refer to *"Front View of Your Phone"* on page 16.

Primary Shortcuts

There are four non-movable Application Shortcuts that appear at the bottom of all Home screens. The default shortcuts are:

- **Phone** for dialing a number.
- **Contacts** for accessing your Address book.
- **Messaging** for creating and viewing Messages.
- **Browser** for surfing the Internet.
- **Apps** for accessing the applications on your phone.

You can change the Phone, Contacts, Messaging, and Browser application shortcuts to any icon that is displayed in the Apps menu.

For more information, refer to *"Adding and Removing Primary Shortcuts"* on page 35.

Indicator Icons

This list identifies the symbols you'll see on your phone's display and Indicator area:

Displays your current signal strength. The greater the number of bars, the stronger the signal.

Indicates that the Airplane Mode is active. You cannot send or receive any calls or access online information.

Displays when there is no SIM card in the phone.

Displays when there is no network available.

Displays when there is a system error or alert.

Displays when a call is in progress.

Displays when a call is on hold.

Displays when the speakerphone is on.

Displays when a call has been missed.

Displays when a call has been muted.

Displays when Call forwarding is set to Always forward. For more information, refer to *"Call forwarding"* on page 56.

Displays your battery charge level. Icon shown is fully charged.

Displays when your battery is charging. Also displays battery charge level.

Device Power Critical – Shows your current battery only has three percent power remaining and will immediately shutdown.

Displays when your connection to an EDGE network is active.

Displays when your phone is communicating with the EDGE network.

Displays when your connection to a UTMS, HSDPA, HSPA, or HSPA+ network is active.

Displays when your phone is communicating with the UTMS, HSDPA, HSPA, or HSPA+ network.

Displays when your connection to a 4G LTE network is active.

Displays when your phone is communicating with the 4G LTE network.

Displays when your phone is downloading or has downloaded a file. It will blink green when it is installing.

Displays when the an outbound file transfer is in progress.

Displays when a Play Store download has completed.

Displays when updates are available for download.

Displays when the phone is connected to a computer via a supported USB cable connection.

Displays when the phone is tethered via a supported USB cable connection.

Displays when a new text or multimedia message is received.

Displays when a new voice mail is received.

Displays when Email is received.

Displays when the time and date for a Calendar Event has arrived. For more information, refer to *"Calendar"* on page 162.

Displays when you set an alarm to ring at a specified time. For more information, refer to *"Alarm"* on page 163.

Displays when the Sound profile is set to Mute.

Displays when the Sound profile is set to Vibrate.

Displays when Bluetooth is activated.

Displays when a Bluetooth device has been paired with the phone.

Displays briefly when Bluetooth is on but is not connected to a Bluetooth device.

Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).

Displays when Wi-Fi is active but there is a communication issue with the target Wireless Access Point (WAP).

Displays when Wi-Fi Direct is active and your phone is connected to another device. It also displays when your phone as been configured as a portable Wi-Fi hotspot.

Displays when your phone is connected to a PC using Kies air.

Displays when your phone is connected to a Digital Living Network Alliance (DLNA) certified device using the AllShare Play application.

Displays when GPS is active and acquiring a signal.

Displays when data synchronization and application sync is active and synchronization is in progress for Gmail, Calendar, and Contacts.

Displays when your phone is in Blocking mode.

Displays when Near Field Communication (NFC) has been activated.

Displays when your phone is connecting to the Device Management server when you first turn on your phone.

Displays when your device is connected being used to control streaming media and is connected to a Digital Living Network Alliance (DLNA) certified device using the AllShare Play application.

Displays when a file is being uploaded or sync'd between your device and an external Web storage location.

Displays when the uploaded or transferred file was successfully delivered.

Displays when TTY device has been inserted.

Displays when the keypad is active.

Displays when you have not yet set up a Samsung Account.

Displays when an emergency call is taking place.

For more details on configuring your phone's settings, see *"Changing Your Settings"* on page 106.

Application Icons

The Apps menu provides quick access to the items you use most frequently.

The following table contains a description of each application. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided.

For information on navigating through the Apps icons, see *"Navigating Through the Application Menus"* on page 32.

1. From the Home screen, tap , then tap one of the application icons.
2. Follow the on-screen instructions.
3. To return to the main Home screen, tap .

The following applications are available:

AllShare Play: AllShare Play allows your phone to stream photos, music and videos from its memory to other Digital Living Network Alliance (DLNA) certified devices. Your phone can also play digital content streamed from other DLNA certified devices. For more information, refer to *"AllShare Play"* on page 155.

Amazon Kindle: This application allows you to download books, magazines, and newspapers to read on your phone. For more information, refer to *"Amazon Kindle"* on page 158.

AT&T Code Scanner: AT&T Code Scanner allows you to scan 2D (QR and datamatrix codes) and 1D (UPC and EAN) barcodes found in magazines, stores, and online. For more information, refer to *"AT&T Code Scanner"* on page 158.

AT&T DriveMode: With the AT&T DriveMode application, you can set your phone to auto reply when you are driving and don't want to answer the phone. You can set auto reply to Messages, Emails, and Phone Calls. You can also allow up to five of your contacts to contact you while you are in Drive mode.For more information, refer to *"AT&T DriveMode"* on page 159.

AT&T FamilyMap: provides peace of mind by being able to conveniently locate a family member from your wireless phone or PC and know that your family's location information is secure and private. For more information, refer to *"AT&T FamilyMap"* on page 159.

AT&T Locker: AT&T Locker allows you to store, share, and sync all of your photos, videos, and documents in one safe, convenient place; the AT&T cloud. For more information, refer to *"AT&T Locker"* on page 160.

AT&T Navigator: AT&T Navigator provides you with access to real-time GPS-driven applications. These programs not only allow you to achieve turn-by-turn navigation, but also access local searches based on a variety of category parameters. For more information, refer to *"AT&T Navigator"* on page 160.

AT&T Ready2Go: AT&T Ready2Go allows you to quickly and easily setup your phone by using the web browser on your PC. You can set-up email accounts, import contacts, set wallpaper, configure Wi-Fi and many more features. For more information, refer to *"Setting up your Phone with Ready2Go"* on page 12.

AT&T Smart Wi-Fi: With AT&T Smart Wi-Fi, you can maximize your battery performance, maximize your data, simplify access to AT&T Hot Spots and Wi-Fi networks, automate your Wi-Fi connections, and track your data use. For more information, refer to *"AT&T Smart Wi-Fi"* on page 148.

Browser: Open the web browser to start surfing the web. The browser is fully optimized and comes with advanced functionality to enhance the Internet browsing feature on your phone. For more information, refer to *"Internet"* on page 138.

Calculator: Using this feature you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. You can also use this as a scientific calculator. For more information, refer to *"Calculator"* on page 161.

Calendar: With the Calendar application, you can consult the calendar by day, week, month, year, create events, and set an alarm to act as a reminder, if necessary. For more information, refer to *"Calendar"* on page 162.

Camera: Use your 5.0 megapixel camera feature to produce photos and videos. For more information, refer to *"Camera"* on page 86.

Clock: The Clock application allows you to access alarms, view the World Clock, set a stopwatch, and use a timer. For more information, refer to *"Clock"* on page 163.

Contacts: You can manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group. You can also synchronize your phone Address Book with AT&T Address Book, the network backup service. For more information, refer to *"Contacts and Your Address Book"* on page 65.

DeviceHelp: DeviceHelp provides online information to help with your device questions. For more information, refer to *"DeviceHelp"* on page 166.

Downloads: The Downloads application allows you to manage all of your downloads from the Play Store and the Browser. For more information, refer to *"Downloads"* on page 166.

Email: Email enables you to review and create email using various email services. You can also receive text message alerts when you receive an important email. For more information, refer to *"Using Email"* on page 100.

Facebook: Facebook enables you to go directly to your Facebook account without accessing it through your web browser. For more information, refer to *"Facebook"* on page 167.

Gallery: The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or contact image, and share as a picture message. For more information, refer to *"Gallery"* on page 84.

Gmail: Gmail is a web-based email service. Gmail is configured when you first set up your phone. Depending on your synchronization settings, Gmail can automatically synchronize with your Gmail account on the web. For more information, refer to *"Using Gmail"* on page 102.

Google: The Google Search application is the same on-screen Internet search engine that is on the Google Search Bar on your main Home screen. For more information, see *"Google Search Bar"* on page 29.

Google+: Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+. For more information, refer to *"Google +"* on page 103.

Kies air: Kies air allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network. You can view call logs, videos, photos, bookmarks, IMs, and even send SMS messages from your home computer. For more information, refer to *"Kies air"* on page 154.

Live TV: Live TV is a subscription service that allows you to watch your favorite TV shows using your handset. For more information, refer to *"Live TV"* on page 83.

Local: Local is an application that uses Google Maps and your location to help you find Restaurants, Cafes, Bars, Attractions, and more. You can also add your own locations. For more information, refer to *"Local"* on page 168.

Maps: Depending on your location, you can view basic, custom, and satellite maps and local business information, including locations, contact information, and driving directions. You can also post public messages about a location and track your friends. For more information, refer to *"Maps"* on page 168.

Memo: This feature allows you to create a memo. For more information, refer to *"Memo"* on page 170.

Messages: AT&T Messages brings your texts, calls, and voicemail messages together into a single conversation thread and is accessible by phone or computer. For more information, refer to *"Messages App"* on page 104.

Messaging: You can send and receive different types of messages. For more information, refer to *"Messaging"* on page 93.

Messenger: Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone. For more information, refer to *"Messenger"* on page 104.

Mobile Hotspot: This application allows you to share your phones's mobile data connection as a portable Wi-Fi hotspot. For more information, refer to *"Mobile Hotspot"* on page 110.

Music Player: Music Player allows you to play music files that you have stored on your phone and memory card. You can also create playlists. For more information, refer to *"Music Player"* on page 78.

My Files: My Files allows you to manage your sounds, images, videos, bluetooth files, Android files, and other memory card data in one convenient location. For more information, refer to *"My Files"* on page 171.

myAT&T: myAT&T allows you to manage your own AT&T account. You can review and pay your bill, check minutes and data usage, upgrade to a new device, or change your rate plan. For more information, refer to *"myAT&T"* on page 172.

Navigation: Navigation is an internet-connected GPS navigation system with voice guidance. You can type or speak your destination. For more information, refer to *"Navigation"* on page 173.

Phone: Allows you to access the dialer keypad, call logs, and favorites. For more information, refer to *"Call Functions"* on page 43.

Play Books: With Google Play Books, you can find more than 3 million free e-books and hundreds of thousands more to buy in the eBookstore. For more information, refer to *"Play Books"* on page 175.

Play Magazines: With Google Play Magazines, you can subscribe to your favorite magazines and have them available to read on your phone at any time or any place. For more information, refer to *"Play Magazines"* on page 175.

Play Movies & TV: With Google Play Movies & TV, you can rent thousands of different movies and television shows. You can watch instantly, or download your movie or show for offline viewing at a later time. For more information, refer to *"Play Movies & TV"* on page 83.

Play Music: With the Music application, while online, you can play music that you have added to your music file as well as any music you copied from your PC. While offline, you can listen to music you have copied from your PC. For more information, refer to *"Google Play Music"* on page 81.

Play Store: The Play Store provides access to downloadable applications and games to install on your phone. For more information, refer to *"Play Store"* on page 176.

S Voice: With the S Voice application you can use your voice to perform operations that you would normally have to do by hand such as dialing a phone number, texting a message, playing music, etc. For more information, refer to *"S Voice"* on page 176.

Settings: This icon navigates to the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone. For more information, refer to *"Changing Your Settings"* on page 106.

Talk: Google Talk is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts. For more information, refer to *"Google Talk"* on page 103.

Video Player: The Video Player application plays video files stored on your microSD card. For more information, refer to *"Video Player"* on page 82.

Voice Recorder: The Voice Recorder allows you to record an audio file up to one minute long and then immediately send it as a message. For more information, refer to *"Voice Recorder"* on page 177.

Voice Search: The Google Voice Search application allows you to search the web using only your voice. For more information, refer to *"Voice Search"* on page 178.

YouTube: YouTube is a video sharing website on which users can upload and share videos, and view them in MPEG-4 format. For more information, refer to *"YouTube"* on page 179.

YPmobile: The YPmobile (Yellowpages) application provides quick and ready access to businesses, map locations, and storage of your favorite searches. This application allows you to tap into local businesses, locations, and events, connecting you to your search in real-time. For more information, refer to *"YPmobile"* on page 180.

Tip: To open applications quickly, add the icons of frequently-used applications to the Home screen or to the folders you created. For details, see *"Customizing Your Home Screen"* on page 34.

Google Search Bar

The Google Search Bar provides you an on-screen Internet search engine powered by Google™.

1. From the main home screen, tap the Google Search bar

.
2. Use the on-screen keypad to enter the item you want to search for, then tap .
3. Tap to use Google Voice Search. For more information, refer to *"Voice Search"* on page 178.

Menu Navigation

You can tailor the phone's range of functions to fit your needs using both menus and widgets. Menus, sub-menus, and features can be accessed by scrolling through the available on-screen menus. Your phone originally has five home screens but can be expanded up to seven.

Command Keys

Menu Key

Press **Menu** to display a context-sensitive menu of options for the current screen or feature.

Home Key

Press **Home** to display the main Home screen. Press and hold to display recently used apps and access the Task manager. Quickly press twice to activate the S Voice application.

Back Key

Press **Back** to return to the previous screen, option or step.

Customizable key

The key on the top left-hand side of your phone, above the volume keys, can be customized to quickly access a function on your phone that you choose.

1. From any screen press and hold the Customizable key.
2. At the **Customizable key** prompt, tap **Assign**.
3. Tap **Long press**.
4. Tap an application that you would like to assign to the Customizable key.

   Now, when you press the Customizable key from any screen, the application will display.

For more information, refer to *"Customizable key"* on page 117.

Terms used in this user manual

Tap

Lightly touch items to select or launch them. For example:

- Tap the on screen keyboard to enter characters or text.
- Tap a menu item to select it.
- Tap an application's icon to launch the application.

Touch and Hold

Activate on-screen items by a touch and hold gesture. For example:

- Touch and hold a widget on the home screen to move it.
- Touch and hold on a field to display a pop-up menu of options.

Swipe

To swipe, lightly drag your finger vertically or horizontally across the screen. Use swipe when:

- Unlocking the screen
- Scrolling through the Home screen or a menu

Turn over

Turn your phone over so that the screen faces downward. For example:

- Mute incoming calls and playing sounds by turning your phone over.

Using Gestures

By activating the various gesture features within the Motion Settings menu, you can access a variety of time saving functions.

To activate motion:

1. From the Home screen, press [Menu] and then tap **Settings** ➔ **Motion**.
2. Tap the checkbox located to the right of each motion option to create a checkmark and activate the motions you wish.
   - **Shake to update**: Once enabled, shake your device to rescan for Bluetooth devices, rescan for Wi-Fi devices, Refresh a Web page, etc.
   - **Turn over to mute/pause**: Once enabled, mute incoming calls and any playing sounds by turning the device display down on a surface. This is the opposite of the Pickup to be Notified Gesture.
3. Tap **Learn about motions** for more information.

Locking and Unlocking the Phone

To unlock your phone:

1. Press the lock button [Power] located on the upper right side of your phone.
2. The lock screen will display with **Swipe screen to unlock** displayed at the bottom of the screen.
3. Swipe the touch screen in any direction.

4. The Home screen will display as shown above.

Note: There are several additional ways you can lock your screen. For more information, refer to *"Encryption"* on page 122.

Home Screen Overview

The main home screen is the starting point for many applications and functions, and it allows you to add items like application icons, shortcuts, folders, or Google widgets

to give you instant access to information and applications. This is the default page and accessible from any menu by pressing .

Navigating Through the Home Screens

Your phone initially has five home screens but can be expanded to seven. If you like, you can place different applications on each of the home screens.

- From the main Home screen, sweep the screen with your finger in either direction. The main Home Screen is located in the middle with three Home screens on each side.

Navigating Through the Application Menus

Your phone initially has three Application Menus available. Follow these steps to navigate through the Application Menus:

1. At the Home screen, tap . The first Application Menu will be displayed.
2. Sweep the screen left or right to access the other two menus.
3. Tap one of the application icons.

Note: As you add applications, the number of Application menus that you have available will increase.

Navigating Using Sub-Menus

Sub-menus are available when you are at any Home screen or have selected a feature or application such as Phone, Contacts, Messaging, or Internet.

To access a sub-menu:

1. Press [Menu].

   A sub-menu will appear at the bottom of the phone screen.

2. Tap an option.

Accessing Recently-Used Apps

1. Press and hold [Home] from any screen to open the recently-used applications window.
2. Tap an icon to open the selected application.

   – or –

   Tap **Task manager** to go to the Task manager.

Customizing Your Home Screen

You can customize your Home screen by doing the following:

- Creating Shortcuts
- Adding and Removing Widgets on the Home Screen
- Repositioning Widgets
- Creating Folders
- Changing the Wallpaper
- Adding and Deleting Home Screens

Creating Shortcuts

Shortcuts are different than the current Home screen Widgets that only launch an application. Shortcuts activate a feature, action, or launch an application.

Note: To move a shortcut from one screen to another, it must first be deleted from its current screen. Navigate to the new screen, then add the shortcut.

Adding a shortcut from the Apps Menu

1. Press to activate the main Home screen.
2. Navigate to the desired Home Page.
3. Tap to display your current applications.
4. Scroll through the list and locate your desired application.
5. Touch and hold the application icon. This creates an immediate shortcut of the selected icon and closes the **Apps** tab.
6. While still holding the on-screen icon, position it on the current page. Once complete, release the screen to lock the new shortcut into its new position on the current screen.

Adding a shortcut via the Add to Home screen

1. Press to activate the main Home screen.
2. Navigate to the desired Home Page.
3. Touch and hold on an empty area of the Home screen.
4. At the **Home screen** display, tap **Apps and widgets** ➔ **Apps**.
5. Press and hold a shortcut from the available list and position it on the current screen.

Deleting a shortcut

1. Press to activate the main Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.

3. Drag the icon over the Delete icon and release it.

   As you place the shortcut into the Trash, both items turn red.

Note: This action does not delete the shortcut, it just removes it from the current screen.

Adding and Removing Primary Shortcuts

You can change any of your primary shortcuts with the exception of the **Apps** shortcut.

1. Press to activate the main Home screen.
2. Touch and hold the primary shortcut you want to replace, then drag it to an empty space on any Home screen.
3. Scroll through the Home screen to find the shortcut you want to add as the new primary short cut.
4. Touch and hold the new shortcut, then drag it to the empty space in the row of primary shortcuts.

   The new primary shortcut will now appear on all Home screens.

Adding and Removing Widgets

Widgets are self-contained applications that reside in either your Widgets tab or on the main or extended Home screens. Unlike a shortcut, the Widget appears as an on-screen application.

Adding a Widget

1. Press to activate the main Home screen.
2. Navigate to the desired Home Page.
3. Touch and hold on an empty area of the screen.
4. Tap **Apps**.
5. Tap the **Widgets** tab at the top of the screen.
6. Press and hold an available Widget to position it on the current screen.

Removing a Widget

1. Touch and hold a Widget until you can move it around on the screen.
2. Drag the Widget up to the **Remove** icon and release it.

   As you place the Widget into the Trash, both items turn red.

Note: This action does not actually delete the Widget, it just removes it from the current Home screen.

Moving Icons in the Apps Menu

1. Press to activate the main Home screen.
2. Tap to display your current applications.
3. Tap the **Apps** tab at the top of the screen if it is not already selected.
4. Press and tap **View type**.
5. Tap **Customizable grid**. A green circle will appear next to the option.
6. Press and tap **Edit**.
7. Scroll through the list and locate the icon you wish to move.
8. Touch and drag the icon to the position that you want. To move to a different page, drag the icon to the edge of the page until the page scrolls to the desired page.
9. Tap **Save**.
10. Press to return to the Home screen.

Creating Application Folders

You can create application folders to hold similar applications if you wish.

To create a folder follow these steps:

1. Press to activate the main Home screen.
2. Tap to display your current applications.
3. Tap the **Apps** tab at the top of the screen if it is not already selected.
4. Press and tap **Edit**.
5. Touch and hold the first application that you would like to move to a folder.
6. Drag the icon up to the **Create folder** icon.
7. A folder is displayed in the original place of the application icon with the application icon displayed on top of it.
8. Repeat steps 5 - 7 to add additional apps to the folder.
9. Drag the icon up to the **App info** icon to view information on the application.
10. Tap **Save**.

Adding a New Page to the Application Menu

You can add a new page to your application menu by following these steps:

1. Press to activate the main Home screen.
2. Tap to display your current applications.
3. Tap the **Apps** tab at the top of the screen if it is not already selected.
4. Press and tap **Edit**.
5. Touch and hold the first application that you would like to move to a new page.
6. Drag the icon down to the icon.

   The app will appear on a new page.

Changing the Wallpaper

You can change the Wallpaper (background) of your home screens by following these steps:

1. From any Home screen, touch and hold on an empty area of the screen.

   The **Home screen** window is displayed.
2. Under the **Set wallpaper** heading, select the location where you would like to change the wallpaper. Tap **Home screen**, **Lock screen**, or **Home and lock screens**.
3. Tap one of the following options:
   - **Gallery**: select a wallpaper from photographs you have taken with your camera.
   - **Live wallpapers**: select an animated wallpaper. This option is not available for the Lock screen option.
   - **Wallpapers**: select from many still-life wallpapers.
4. Select a wallpaper and tap **Set wallpaper**, **Done**, or **Cancel**.

Moving Home Screens

You can arrange the Home screens in any order that you want.

To move a Home screen, follow these steps:

1. Press to activate the main Home screen.
2. Press and tap **Edit page**.

3. Touch and hold the Home screen you want to move.

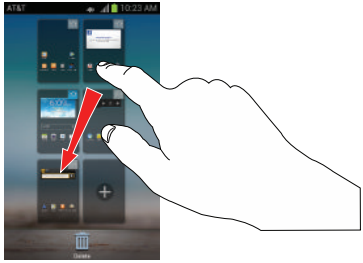

4. Drag it to the location that you would like to place it.

   In this example, the Facebook app screen is moved to the last position.

   When you move a Home screen, the other Home screens will be re-ordered automatically.

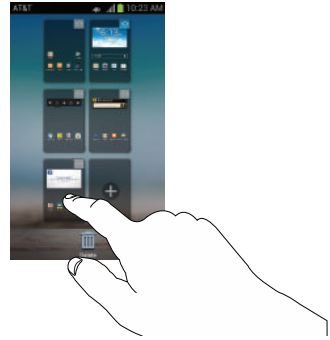

5. Press Home to return to the main Home screen.

Adding and Deleting Home Screens

You can delete Home screens and then add Home screens later if you want.

To delete a Home screen, follow these steps:

1. Press Home to activate the main Home screen.
2. Press Menu and tap **Edit page**.
3. Touch and hold the Home screen you want to delete.

4. Drag it to the trash can located at the bottom of the screen.

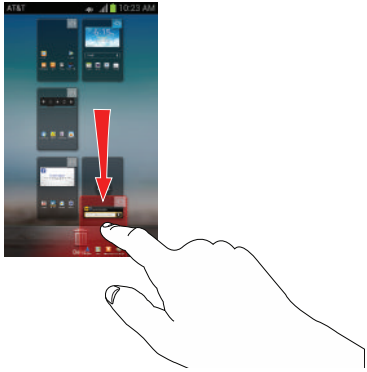

5. If there are items on the Home screen that you want to delete, the **Delete home screen page** prompt is displayed.
6. Tap **OK** to delete the page and its contents, otherwise tap **Cancel**.
7. Press Home to return to the main Home screen.

To add a Home screen, follow these steps:

1. Press Home to activate the main Home screen.
2. Press Menu and tap **Edit**.
3. Touch and hold the Home screen that contains ⊕ and drag it to the new location.

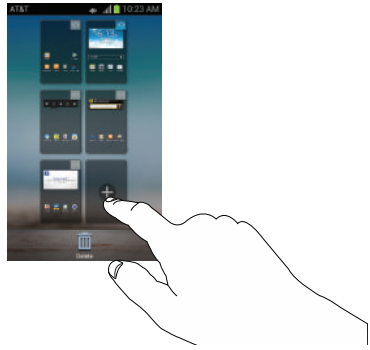

Note: The ⊕ icon will only be displayed if a Home screen has previously been deleted.

4. Press to return to the main Home screen.
   You can now add items to your new Home screen.

Notification Bar

The Notification Bar includes a pull-down list to show information about processes that are running, recent notifications, and alerts. To display the Status indicator:

- On the Home screen, touch and hold the Notification Bar until the pull-down displays, then drag down vertically.

Clearing Notifications

To clear all notifications from the Notification panel:

1. From the Home screen, touch and hold the Notification Bar until the pull-down displays, then drag down vertically.

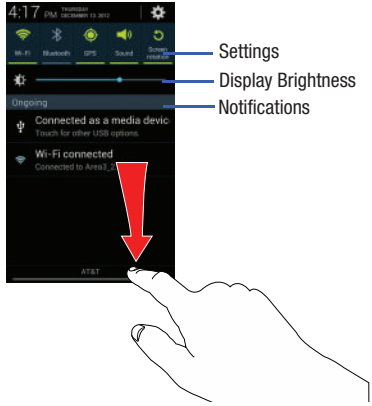

2. Tap the **Clear** button.
   The notifications are cleared and the panel closes.

Accessing Additional Panel Functions

In addition to notifications, this panel also provides quick and ready access to separate device functions. These can be quickly activated or deactivated by toggling them on or off.

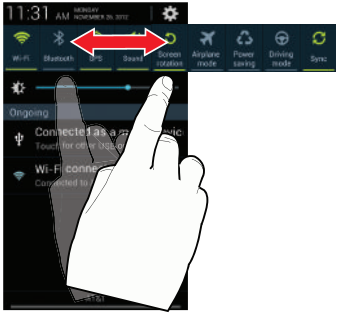

The following functions can either be activated (green) or deactivated (gray): Wi-Fi, Bluetooth, GPS, Sound, Screen rotation, Airplane mode, Power saving, Driving mode, and Sync.

Memory Card

Your device lets you use a microSD™ (SD) or microSDHC™ card to expand available memory space. This secure digital card enables you to exchange images, music, and data between SD-compatible devices. This section addresses the features and options of your device's SD functionality. The device has a USB SD card mode.

Mounting the SD Card

To store additional photos, music, videos, and other applications, you must mount (install) the SD card prior to use. Mounting the SD card establishes a USB connection with your computer.

1. Insert the SD card into the external, SD card slot. For more information, refer to *"Removing and Installing the Memory Card"* on page 8.
2. Your SD card is scanned to see the available information on it.

Unmounting the SD card

Unmounting the SD card prevents corruption and damage to the SD card while removing it from the slot.

1. From the Home screen, tap ➔ **Settings** ➔ **Storage**.
2. Scroll to the bottom of the display and tap **Unmount SD card**.
3. Tap **OK**.

   For more information, refer to *"Removing and Installing the Memory Card"* on page 8.

SD card Available Memory Status

To view the memory allocation for your external SD card:

1. From the Home screen, tap ➔ **Settings** ➔ **Storage**.
2. The available memory for Device and SD card displays under the **Total space** and **Available space** headings.

Erasing Files from the SD card

You can erase files from the SD card using the phone.

1. Ensure the SD card is mounted. For more information, refer to *"Mounting the SD Card"* on page 41.
1. From the Home screen, tap ➔ **Settings** ➔ **Storage**.
2. Tap **Format SD card**.
3. At the **Format SD card** confirmation prompt, tap **Format SD card**.

Warning! Performing the next step erases all data stored on the SD card.

---

4. Tap **Delete all** to format or press to cancel.

Section 3: Call Functions

This section describes how to make or answer a call. It also includes the features and functionality associated with making or answering a call.

For more information, refer to *"Sound Settings"* on page 115.

Displaying Your Phone Number

- Tap → **Settings** → **About device** → **Status**. Your phone number is displayed in the **My phone number** field.

Making a Call

1. From the Home screen, tap and use the on-screen keypad to enter the number you wish to dial.
2. Tap to make the call.

Note: When you activate the **Auto redial** option in the Voice Call menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone. For more information, refer to *"Call Settings"* on page 54.

Making an International Call

1. From the Home screen, tap, then touch and hold 0 +. The **+** character appears.
2. Use the on-screen keypad to enter the country code, area code, and phone number.
   - If you make a mistake, tap until the desired numbers have been deleted.
3. Tap to make the call.

Manual Pause Dialing

To manually call a number with pause(s) without storing it in your Contacts list:

1. From the Home screen, tap and use the on-screen keypad to enter the phone number.
2. Press to display the dialer sub-menu.
3. Tap **Add 3 sec pause** to add a two-second pause, and use the keypad to enter the additional numbers.

Tip: You can create pauses longer than three seconds by entering multiple 3 second pauses.

4. Select **Add wait** to add a wait. A wait will pause the calling sequence until you enter a number or press a key.
5. Tap to make the call.

For more information, refer to *"Adding Pauses to Contact Numbers"* on page 67.

Correcting an Entered Number

Use the following steps to correct a mis-typed entry when dialing.

- After entering a number using the keypad:
  - If you make a mistake, tap to erase a single character.
  - Press and hold to erase the entire string of numbers.

Ending a Call

- Tap the key.

Dialing a Recent Number

All incoming, outgoing and missed calls are recorded in the **Call log**. If the number or caller is listed in your Address Book, the associated name also displayed.

1. From the Home screen, tap .
2. Tap the **Logs** tab.

   A list of recent calls is displayed.
3. Tap the desired Contact to enter the **Details** page, then tap to make a call.

Making Emergency Calls

If you do not have a SIM card installed the first time you turn on the phone, the **Insert SIM card to make calls** message displays and an animated tutorial shows you how to install the SIM card.

Without a SIM card, you can only make an emergency call with the phone; normal cell phone service is not available.

Making an Emergency Call without a SIM card

1. Tap **Emergency call** from the on-screen display to make an emergency call.
2. Enter 9-1-1 and tap . Complete your call. During this type of call, you will have access to the Speaker mode, Keypad, and End Call features.
3. Tap to exit this calling mode.

Making an Emergency Call with a SIM card

The Emergency calling mode makes redialing an emergency number a 1-tap process. Before you can resume normal calling operations, you should first exit this mode.

1. From the Home screen, tap .
2. Enter the emergency number (ex: 911) and then tap .
3. Complete your call. During this type of call, you will have access to the Speaker mode, Keypad, and End Call features.
   - After completing your emergency call, appears in the Notification area until you exit the Emergency calling mode.

Note: This mode can drain your battery power more rapidly than a normal calling mode.

Making a Call Using Speed Dial

You can assign a short cut number to a phone number in your Contacts List for speed dialing.

1. From the Home screen, tap **Contacts** to display your Contacts List.
2. Press to display the Contacts List sub-menu.
3. Tap **Speed dial setting**.
4. The **Speed dial setting** screen displays showing the numbers 1 through 100. The number 1 is reserved for Voicemail.
5. Tap an unused number and the contacts screen displays.
6. Select a contact to assign to the number. The selected contact number will display in the speed dial number box.
7. To remove a speed dial number or change the order, press to display the Speed dial setting sub-menu.
8. Tap **Change order** or **Remove**.
9. To make a call using Speed Dial, tap → **Keypad** and from the Dialer, touch and hold the speed dial number.

Making a Call from the Address Book

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called the **Address Book**.

For further details about the **Address Book** feature, see *"Finding an Address Book Entry"* on page 68.

Answering a Call

When a call is received the phone rings and displays the caller's phone number, or name if stored in the Address Book.

1. At the incoming call screen:
   - Touch and drag in any direction to answer the call.
   - Touch and drag in any direction to reject the call and send it to your voicemail.
   - Touch and drag the **Reject call with message** tab upward and tap a predefined text message to send to the caller.
     - I'm driving
     - I'm at the cinema
     - I'm in class
     - I'm in a meeting
     - Sorry, I'm busy. Call back later.

   – or –

     - Tap **Create new message** to compose a new message.

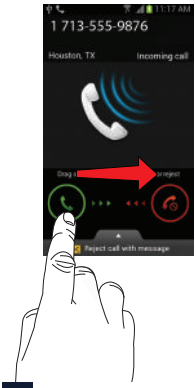

2. Tap to end the call.

Note: You can answer a call while using the Address Book or other menu feature. After ending the call, the phone returns to the previously active function screen.

Dialing Options

From the Home screen and Application menus, you have the option to access the Dialer and initiate a call by tapping → **Keypad**. From the Dialer and the Contacts screen, the following tabs are located at the top of your screen:

- **Keypad**: dials the current number entered using the on-screen keypad.
- **Logs**: displays a list of all dialed, received, and missed calls.
- **Favorites**: displays your contacts that you have marked as Favorites.
- **Contacts**: takes you to your Address Book where you can select a contact to call.

After you begin to enter numbers, the **Add to Contacts** option appears so you can save the Contact if needed.

Call Log

The phone stores the numbers of the calls you've dialed, received, or missed in the Call log. The Call log displays the details of the call.

1. From the Home screen, tap .
2. Tap the **Logs** tab.

A list of recent calls is displayed. If the number or caller is listed in your Address Book, the associated name is displayed.

All calls made, received, and missed are listed. Types of calls are identified by the following icons:

- **Incoming Calls**:
- **Outgoing Calls**:
- **Missed Calls**:
- **Rejected Calls**:
- **Auto Rejected Calls**:

Viewing Missed Calls from the Lock Screen

The number of calls you have missed is displayed on the Home screen.

1. Touch the missed call icon with the number of missed calls on it and move it in any direction.

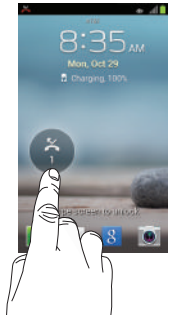

Note: If there is a voicemail sent by the same number, associated icons are displayed and can then be selected.

2. The Call log is displayed. Missed calls are identified by the icon next to the number.

Calling Back a Missed Call

To call back a missed call number:

1. From the Home screen, tap → **Logs**.
   A list of recent calls is displayed. If the number or caller is listed in your Address Book, the associated name is displayed.
2. Swipe the desired missed call to the right to call.
   – or –
   Swipe the desired missed call to the left to message.

Saving a Recent Call to your Address Book

1. From the Home screen, tap → **Logs**.
   A list of recent calls is displayed.
2. Tap the call you want to save to your Address Book.
3. The call detail page is displayed. Tap **Create contact** to add the call to your Address Book.
   The Create contact screen is displayed.
   – or –
   If you want to replace the number for an existing contact, tap **Update existing**.

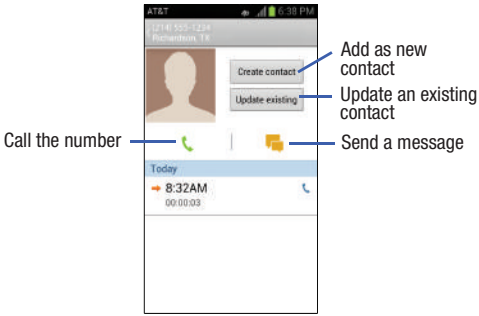

4. Enter information into the various fields using the keypad.
5. Tap **Save** to save when you are finished.

For further details about the **Address Book** feature, see *"Adding a New Contact"* on page 66.

Sending a Message to a Recent Call

1. From the Home screen, tap → **Logs**.
   A list of recent calls is displayed.
2. Swipe the entry you want to message to the left.
3. At the Message screen, tap the empty text field and use the on-screen keypad to type in a message.
4. When you are done with your message, tap to send.
   For more information, refer to *"Creating and Sending Messages"* on page 93.

Deleting a Call from the Call Log

1. From the Home screen, tap → **Logs**.
   A list of recent calls is displayed.
2. Touch and hold the call you want to delete from the Call log.
3. Tap **Delete**.
4. At the **Delete** prompt, tap **OK**.
   The call is deleted from the Call log.

Adding a Call to the Reject List

1. From the Home screen, tap ➔ **Logs**.
   A list of recent calls is displayed.
2. Touch and hold the call you want to add to the Reject List.
3. Tap **Add to reject list**.
4. At the **Add to reject list** prompt, tap **OK**.
   Future calls from this number will be rejected and sent to your voicemail.

Call Duration

1. From the Home screen, tap ➔ **Logs**.
2. Press ➔ **Call duration**.
3. The following times are displayed for Voice and Data:
   - **Last call**: shows the length of time for the last call.
   - **Dialed calls**: shows the total length of time for all calls made.
   - **Received calls**: shows the total length of time for all calls received.
   - **All calls**: shows the total length of time for all calls made and received.
4. You may reset these times to zero by pressing then tapping **Reset**.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Adjusting the Call Volume

During a call, to adjust the earpiece volume, use the **Volume** keys on the left side of the phone.

- Press the **Up** volume key to increase the volume level and press the **Down** volume key to decrease the volume level.

From the Home screen, you can also adjust the ringer volume using these same keys.

In-Call Options

During an active call there are several functions available by tapping a corresponding on-screen button.

- **Hold**: place the current active call on hold.
- **Add call**: displays the dialer so you can call another person.
- **Keypad**: displays the on-screen keypad, where you can enter number using DTMF (Dual Tone Multi-Frequency).
- **End call**: terminates the call.

- **Speaker**: routes the phone's audio through either the speaker or through the earpiece.
  - Tap **Speaker** to route the audio through the speaker. (You can adjust the speaker volume using the volume keys.) A green line will appear under the Speaker button.
  - Tap **Speaker** again to use the phone's earpiece (see *"Using the Speakerphone During an Active Call"* on page 53). The green line will disappear when Speaker is not activated.
- **Mute/Unmute** turn the onboard microphone either on or off.
  - Tap **Mute** during a call to mute the microphone. A green line will appear under the Mute button.
  - Tap **Mute** again to unmute the microphone. The green line will disappear when Mute is not activated.
- **Headset** connects to a Bluetooth headset.
  - Tap **Headset** during a call to activate a Bluetooth headset. A green line will appear under the Headset button.
  - Tap **Headset** again to de-activate the Bluetooth headset. The green line will disappear when the Headset is not activated.
- Press for more options:
  - **Contacts**: allows you to go to your Contact list.
  - **Message**: allows you to go to write a message during a call.
  - **Memo**: allows you to jot down a memo during a call.
  - **Noise reduction on/off**: allows you to turn on the Noise Reduction feature when you are in a noisy area. Turn it off when not needed to conserve battery power.

Placing a Call on Hold

You can place the current call on hold at any point during a conversation. You can also make another call while you have a call in progress if your network supports this service.

1. While on a call, tap **Hold** Hold. This action places the current caller on hold.
2. You can later reactivate this call by tapping **Unhold** Unhold.

To make a new call while you have a call in progress

1. Tap **Hold** Hold.
2. Tap **Add call** to display the dialer.
3. Enter the new number and tap .

   Once connected, the active call will appear in a large box at the top of your screen and the call on hold will appear in a smaller box in the middle of your screen.

Switching Between Calls

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

1. Tap **Swap**.

   The current call (caller #2) is placed on hold and the previous call on hold (caller #1) is then reactivated so that you can continue conversing with that person. The active call will appear in a green box.

2. Tap to end the currently active call.

To end a specific call

1. Tap **Swap** until the call you want to end appears in a green box.
2. Tap to end the specific call.
3. Tap to end the remaining call.

To answer a call while you have a call in progress

1. Tap and slide to the right to answer another call.
2. Tap **Putting "Number" on hold** to put the first call on hold.

   – or –

   Tap **Ending call with "Number"** to end the first call.

3. To switch between the two calls, tap **Swap**.
   - **Swap**: Places the current call on hold and then activates the previous call. The active call will appear in a green box. Tap **Swap** again to switch back.

To end a call on hold

1. Tap to disconnect the active call.
2. The call on hold will now become the active call. Tap to end the call.

3-Way Calling (Multi-Party Calling)

The 3-Way or Multi-Party feature allows you to answer a series of incoming calls and place them on hold. If this service is supported by the network, all calls can be joined together. You are notified of an incoming call by a call waiting tone.

Note: The **Merge** option combines all of the calls you have established with your phone (both active and on hold). **Swap** places the current call on hold and then activates the previous call.

This feature joins all of the calls you have established with your phone (both active and on hold) into a multi-party call.

1. Tap and slide to the right to answer the call.
2. Tap and slide to the right to answer the next call.
3. Tap **Putting "Number" on hold** to put the first call on hold.
4. Join the first two callers into a single multi-party call by tapping **Merge** Merge.
5. To temporarily leave the conference call, tap **Hold** Hold.

   To rejoin the conference call tap **Unhold** Unhold.
6. Tap End call to end the call.

Using the Speakerphone During an Active Call

While in an active call, it is possible to enable the speakerphone feature.

1. Tap **Speaker** Speaker.

   The **Speaker** button now appears as Speaker and the speakerphone is activated.

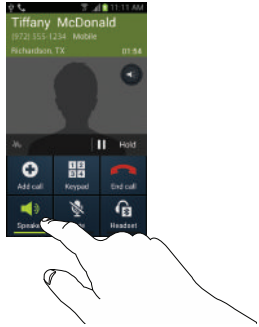

2. Use the **Volume** keys (located on the left side of your phone) to adjust the volume.
3. To deactivate the speakerphone, tap **Speaker** Speaker.

Important! For more information, refer to *"Responsible Listening"* on page 197.

Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to person in the room, but do not want the person on the phone to hear you.

To mute your phone during a call

1. Tap **Mute** .
   The **Mute** button now appears as and Mute is activated.
2. Tap **Mute** to deactivate the Mute function and reactivate the microphone.

Bluetooth headset

1. Tap **Headset** .
2. The phone will scan for your Bluetooth headset. When found, connect to the headset.
   The **Headset** button now appears as and the Bluetooth headset is activated.
3. Tap **Headset** to deactivate the Bluetooth headset and reactivate the phone speaker.

Searching for a Number in Address Book

1. During the active call, press then tap **Contacts**.
2. Tap the Address Book entry.

For further details about the **Address Book** feature, see *"Finding an Address Book Entry"* on page 68.

Call Waiting

The Call Waiting feature allows you to answer an incoming call while you have a call in progress, if this service is supported by the network, and you must first activate the Call Waiting feature:

- From the Home screen, tap → → **Call settings** → **Additional settings** →**Call waiting**.
  You are notified of an incoming call by a call waiting tone.

Call Settings

To access the Call settings menu:

- From the Home screen, tap → → **Call settings**.

Call rejection

1. From the Call settings screen, tap **Call rejection**.
2. Tap the **OFF / ON** icon to turn Auto reject mode on

.
3. Tap **Auto reject mode** and tap one of the following options:
   - **All numbers**: to reject all calls.
   - **Auto reject numbers**: to reject all calls in your Reject list.
4. Tap **Auto reject list**.
5. Tap to manually add numbers to the Reject list.
6. Tap **Unknown**, to create a checkmark and automatically reject all calls that are not in your Contacts list.

Set reject messages

1. From the Home screen, tap ➔ ➔ **Call settings** ➔ **Set reject messages**.
2. Tap to manually add a reject message.

   – or –

   Tap one of the pre-written messages to be displayed when you want the call to be rejected. You can edit the message if desired.
3. Tap **Save** to save the reject message.

Ringtones and keypad tones

1. From the Home screen, tap ➔ ➔ **Call settings** ➔ **Ringtones and keypad tones**.
2. Tap **Device ringtone**, select a ringtone, and tap **OK**.
3. Tap **Device vibration**, select a vibration type, and tap **OK**.
4. Tap **Vibrate when ringing** to create a checkmark if you want your phone to vibrate when a call is incoming.
5. Tap **Keytones** to create a checkmark if you want tones to play when the keypad is pressed.

Call alert

1. From the Home screen, tap ➔ ➔ **Call settings** ➔ **Call alert**.
2. Tap **Call vibrations** to enable your phone to vibrate when the called party answers the phone.
3. Tap **Call status tones** to set the sound settings during a call then tap **OK**.
4. Tap **Alerts on call** to turn off alarm and message notifications during a call.

Call answering/ending

1. From the Home screen, tap ➔ ➔ **Call settings** ➔ **Answering/ending calls**.
2. The following options are available:
   - **The home key answers calls**: Tap this option to be able to accept incoming calls by pressing the Home key.
   - **Answer calls using voice**: Tap this option to be able to accept incoming calls by using your voice.
   - **The power key ends calls**: This option will allow you to end a call by pressing the power key without turning off the screen.

Auto screen off during calls

This option turns on the proximity sensor during calls so that your phone will know to turn the screen off to save power.

- From the Home screen, tap ➔ ➔ **Call settings** ➔ **Turn off screen during calls** to create a checkmark and enable the feature.

Accessory settings for call

1. From the Home screen, tap ➔ ➔ **Call settings** ➔ **Call accessories**.
2. The following options are available:
   - **Automatic answering**: configures the device to automatically answer and incoming call when a headset is detected.
   - **Automatic answering timer**: configures the time delay before the device automatically accepts the incoming call.
   - **Outgoing call conditions**: allows you to make calls even when the device is locked.

Extra volume on calls

This option allows you to see an extra volume button on the screen during calls.

- From the Home screen, tap ➔ ➔ **Call settings** ➔ **Extra volume on calls** to create a checkmark and enable the feature.

Call forwarding

1. From the Home screen, tap ➔ ➔ **Call settings** ➔ **Call forwarding** ➔ **Voice call**.
2. Tap one of the following options:
   - **Always forward**: allows you to forward all voice calls.
   - **Forward when busy** allows you to forward voice calls to a designated number instead of your voice mail number if you are on another phone call.

- **Forward when unanswered**: allows you to forward voice calls to a designated number instead of your voicemail number when there is no answer on your phone. You can also select the amount of time that the phone delays before forwarding.
- **Forward when unreachable**: allows you to forward voice calls to a designated number instead of your voicemail number when you are not in an area covered by your service provider or when your phone is switched off.

Additional settings

1. From the Home screen, tap ➔ ➔ **Call settings** ➔ **Additional settings**.
2. Tap one of the following options:
   - **Caller ID**: allows you to choose how your Caller ID will be displayed. Select Network default, Hide number, or Show number.
   - **Call waiting**: the network service informs you when someone is trying to reach you during another call. Tap to activate.
   - **Auto redial**: automatically redials the last number if the call was either cut off or was unable to connect. Tap to activate.
   - **Noise reduction**: allows you to suppress background noise from your side during calls.
   - **Fixed Dialing Numbers**: allows you to restrict outgoing calls to a limited set of phone numbers.
   - **Auto area code**: allows you to automatically prepend a specific area code to all outbound calls.

Using Fixed Dialing Numbers

Enabling FDN

1. From the Home screen, tap ➔ ➔ **Call settings** ➔ **Additional settings** ➔ **Fixed Dialing Numbers**.
2. Tap **Enable FDN**.
3. At the prompt, enter your PIN2 code and tap **OK**.
   FDN is enabled.
4. To enable FDN after it has been disabled, tap **Disable FDN**, enter your PIN2 code and tap **OK**.

Important! Not all SIM cards use a PIN2 code. If your SIM card does not, this menu does not display.
The PIN2 code is provided by your carrier. Entering an incorrect PIN2 code could cause the phone to lock. Contact customer service for assistance.

Changing the PIN2 Code

1. From the Home screen, tap ➔ ➔ **Call settings ➔ Additional settings ➔ Fixed Dialing Numbers**.
2. Tap **Change PIN2**.
3. At the prompt, enter your old PIN2 code.
4. At the prompt, enter a new PIN2 code.
5. Confirm your PIN2 code.

Managing the FDN list

When this feature is enabled, you can make calls only to phone numbers stored in the FDN list on the SIM card.

Note: Before you can manage an FDN list a list must be created.

---

1. From the Home screen, tap ➔ ➔ **Call settings ➔ Additional settings ➔ Fixed Dialing Numbers**.
2. Tap **FDN list**.
3. A list of all existing FDN numbers will be displayed.

Voicemail service

1. From the Home screen, tap ➔ ➔ **Call settings ➔ Voicemail Service**.

   Voicemail service provided by your carrier is the default.
2. Tap **My carrier** to remove the carrier Voicemail service.

Voicemail settings

You can view or modify your voicemail number from this menu.

1. From the Home screen, tap ➔ ➔ **Call settings ➔ Voicemail settings**.
2. Tap the **Voice mail number** field, backspace to erase the digits, and enter a new voicemail number using the keypad, then tap **OK**.
3. Tap **OK**.

Ringtone

1. From the Home screen, tap ➔ ➔ **Call settings ➔ Ringtone**.
2. Tap a ringtone to hear it played.
3. Select a ringtone and tap **OK**.

Vibrate

This option allows you select vibration settings.

1. From the Home screen, tap ➔ ➔ **Call settings** ➔ **Vibrate**.
2. Tap **Always**, **Only in silent mode**, or **Never**.

TTY Mode

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it is compatible with digital cell phones.

Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

1. From the Home screen, tap ➔ ➔ **Call settings** ➔ **TTY mode**.
2. Tap **TTY Full**, **TTY HCO**, or **TTY VCO**. A green checkmark will appear. Tap **TTY Off** to turn it off.

Section 4: Entering Text

This section describes how to select the desired text input method when entering characters into your phone. This section also describes the predictive text entry system that reduces the amount of key strokes associated with entering text.

Your phone comes equipped with an orientation detector that can tell if the phone is being held in an upright (Portrait) or sideways (Landscape) orientation. This is useful when entering text.

Text Input Methods

There are three text input methods available:

- **Samsung keyboard (default)**: Samsung's on-screen QWERTY keypad that can be used in both portrait and landscape orientation.
- **Google Voice typing**: allows you to enter text by speaking.
- **Swype**: a new way to enter text on touch screens. Instead of tapping each key, use your finger to trace over each letter of a word.

To change the input method, see *"Keyboards and Input Methods"* on page 126.

Entering Text Using the Samsung Keyboard

From a screen where you can enter text, rotate your phone counterclockwise to a Landscape orientation. The on-screen QWERTY keypad will display.

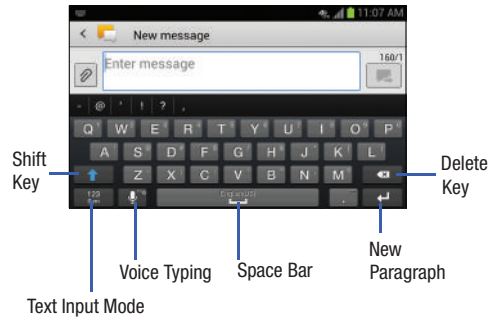

Changing the Text Input Mode - Keypad

There are two main keypad layout keys that will change the on-screen keys within the QWERTY keypad.

The available Text Input modes are: **Sym** and **Abc**.

123 Sym

Symbol/Numeric Mode: activates the number, symbol, and emoticon keys.

ABC

ABC Mode: activates the default alphabet keys. Can also be set to **Abc** or **abc** by using the shift ( ) key.

Note: When in **Abc** mode, the **Sym** button will appear. When in **Sym** mode, the **Abc**/**ABC**/**abc** button will appear.

Using ABC Mode

1. If desired, rotate your phone counterclockwise to a Landscape orientation.
2. When you tap the **Enter message** field, the following screen displays:

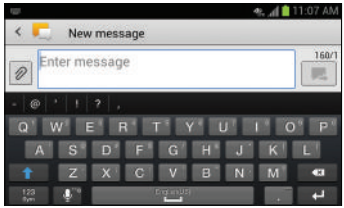

3. Tap the desired alphabetic characters.
4. The screen initially opens in ABC mode. After typing the first letter, the shift key ( ) will change to and following letters will be lowercase.
5. Tap to input another upper-case letter or tap twice to switch to ABC mode. The shift key will change to in ABC mode. All following letters will be uppercase until you tap the shift key again.

Using Symbol/Numeric Mode

Use Symbol/Numeric Mode to add numbers, symbols, or emoticons.

1. Rotate your phone counterclockwise to a Landscape orientation.
2. Tap 123 Sym at the bottom of the screen. The following screen displays:

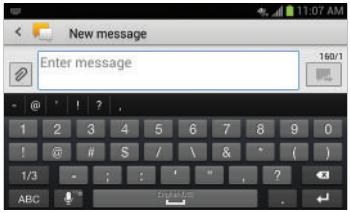

3. Tap the desired number, symbol, or emoticon characters.
4. Tap the 1/3 button to access additional symbols.
5. Tap ABC to return to Abc mode.

Predictive Text

By using the Predictive Text option, you can have next-letter prediction and regional error correction, which compensates for pressing the wrong keys on the QWERTY keyboard.

1. To turn Predictive Text on or off, tap → **Settings** → **Language and input**.
2. Tap the icon next to **Samsung keyboard**.
3. Tap the ON/OFF slider, located to the right of the Predictive text field, to ON or OFF.
4. In the text portion of the message screen, begin typing a word. A list of word options is displayed. Tap one of the words to replace the word that has already been typed or scroll the line of words to the left for more word choices.

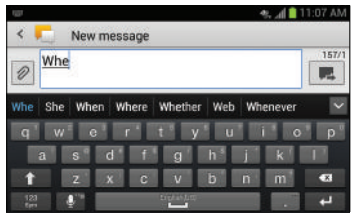

5. Continue typing your message. Tap to send the message or press for more options. For more information, refer to *"Creating and Sending Messages"* on page 93.

Note: You can also use Predictive Text mode in the portrait orientation.

Samsung Keyboard Settings

For information on how you can configure your Samsung keyboard settings, see *"Samsung Keyboard settings"* on page 126.

Using the Google Voice Typing Feature

You can use your voice to enter text using the Google Voice typing feature.

1. From the keypad, touch the top of the screen and drag it down to display your notification panel.
2. Tap **Choose input method**.
3. Tap **Google voice typing**.

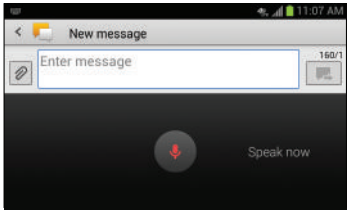

4. At the **Listening** prompt, speak into the device's microphone and watch your text being entered on-screen.If the text is incorrect, tap the **DELETE** box.
5. The text is displayed in the message as you are speaking.

Note: The feature works best when you break your message down into smaller segments.

Entering Text Using Swype

Swype™ is a text input method that allows you to enter a word by sliding your finger or stylus from letter to letter, lifting your finger between words. Swype uses error

correcting algorithms and a language model to predict the next word. Swype also includes a tapping predictive text system.

The following example shows how to enter the word “This”. Put your finger down on the “T”, and without lifting, glide it to the “h”, then to the “i” then over to the “s”.

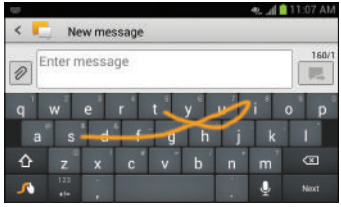

Enabling and Configuring Swype

The Samsung keyboard is the default text input method, so to use Swype, you must first change the default keyboard setting.

To enable Swype:

1. From the keypad, touch the top of the screen and drag it down to display your notification panel.
2. Tap **Choose input method**.
3. Tap the **Swype** radio button. It will turn green.

   The Swype keyboard is displayed.

Swype Settings

For information on how you can configure your Swype settings, see *“Swype Keypad Settings”* on page 128.

Swype Text Entry Tips

You can access the SwypeTips application and watch a video or tutorial on using Swype. You can also use the following Swype text entry tips.

- Create a squiggle (like an S shape) to create a double letter (such as pp in apple).
- Touch and hold a key to view the punctuation menu then make a selection.
- Move your finger or stylus over the apostrophe to enter contractions.
- Double-tap on the word you want to change to correct a misspelled word, then tap the delete key to erase one character. Touch and hold the delete key to erase an entire word.

Section 5: Contacts and Your Address Book

This section allows you to manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group.

AT&T Address Book Activation

When you access the AT&T Address Book, the network backup service, contacts are automatically synchronized between your phone and online address book. The changes you make are automatically saved and if you ever upgrade, damage, or lose your phone, you can easily restore your contacts onto your new phone.

To activate the AT&T Address Book:

1. From the Home screen, tap **Contacts** .
   Your Address Book is displayed.
2. If you have not synchronized your phone with your online AT&T Address Book recently, the **AT&T Address Book** screen is displayed. Tap **Yes** if you want to synchronize your Address Book.
3. Follow the on-screen instructions.

Your AT&T Address Book is Ready to Use. You can now make a call or send a message through your Address Book.

You can also manage your Address Book on the web at http://www.att.com/addressbook.

Synchronizing your AT&T Address Book

If you ever upgrade, damage, or lose your phone, you can easily restore your contacts onto your new phone by following these steps:

1. From the Home screen, tap **Contacts** .
2. Press → **Settings** → **AT&T Address Book**.
3. At the **AT&T Address Book** screen, tap **Yes** to synchronize your phone with your online Address Book.
4. If there are existing contacts on your phone, you will be prompted if you would like to remove them first. Tap **Yes** or **No**.

Note: You must first copy any contacts that exist on your SIM card to your phone. For more information, refer to *"Copying Contacts to the Phone"* on page 76.

Your phone is synchronized.

5. At the **Your AT&T Address Book is Ready for Use** prompt, tap **OK**.

   Your Contact list is displayed.

Adding a New Contact

Use the following procedure to add a new contact to your Address Book.

Saving a Number from the Home screen

1. From the Home screen, tap **Contacts** ➔ .
2. At the **Save contact to** prompt, tap **Phone**, **SIM**, or Account name.
3. Tap the image icon and assign a picture to the new entry by choosing one of three options:
   - **Image**: retrieve a previously stored image from your Gallery or from your My files folder and assign it to this entry. Tap an image to assign the image to the contact, then tap **Done**.
   - **Take picture**: use the camera to take a new picture and assign it to this entry, then tap **Done**.
   - **Remove**: although not an option with a new entry, deletes any previously assigned image on an existing contact.
4. Tap the **Name** field and use the on-screen keypad to enter the full name. For more information, refer to *"Entering Text"* on page 60.

   – or –

   Tap next to the **Name** field to display additional name fields.
5. Tap the **Phone number** field.

   The numerical keypad is displayed.

   The **Mobile** button Mobile initially displays next to the **Phone number** field. If you want to add a phone number that is not a mobile number, tap the **Mobile** button and select from Mobile, Home, Work, Work fax, Home Fax, Pager, Other, Custom (add your own label), or Callback.
6. Enter the phone number.

   Tap to add another Phone number field or tap to delete a field.

7. Tap any of the following fields that you want to add to your new contact:
   - **Groups**: assign the contact to Not assigned, ICE - emergency contacts, Co-workers, Family, or Friends.
   - **Ringtone**: adds a field used to assign a message tone that will sound when messages are received from this contact. Choose between Default, Ringtones, or Go to My Files.
   - **Message alert**: allows you to set the ringtone for your message alerts.
   - **Vibration pattern**: allows you to set the specific type of vibration.
   - **Add another field**: tap this button to add another field such as Phonetic name, Organization, Email, IM, Address, Notes, Nickname, Website, Internet call, or Relationship.
8. Tap **Save** to save the new contact.

Adding Pauses to Contact Numbers

When you call automated systems, you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses and waits. A pause will stop the calling sequence for two seconds and a wait will pause the calling sequence until you enter a number or press a key.

To add a pause or a wait to a Contact:

1. From the Home screen, tap **Contacts** , and then tap the name or number to open the Contact.
2. Tap to edit.
3. Tap the phone number field.
4. Tap the screen at the position where the pause or wait needs to be added.
5. Tap .
6. Tap **Pause** to add a two-second pause or tap **Wait** to add a wait, and use the keypad to enter the additional numbers. A pause will be displayed as a comma (,) and a wait will be displayed as a semi-colon (;).
7. Tap **Save** to save your changes, or tap **Cancel** to discard.

Editing an Existing Contact

When editing an existing contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.

1. From the Home screen, tap **Contacts**. Press and hold the Contact that you want to edit.
2. Tap to edit.
3. Tap any of the fields to add, change, or delete information.
4. Tap **Save** to save the edited information.

Using Contacts

Dialing or Messaging from Address Book

Once you have stored phone numbers in the Address Book, you can dial them easily and quickly by either using their SIM card location number or by using the Search field to locate the entry.

From the Address book, you can also send messages.

Finding an Address Book Entry

You can store phone numbers and their corresponding names onto your SIM card and phone's onboard memory. The two locations are physically separate but are used as a single entity, called the Address Book.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store and how they are stored may differ.

1. From the Home screen, tap **Contacts**.
2. Within the Contacts list (sorted alphabetically), tap a letter on the right side of the display to quickly jump to the contacts beginning with that letter.

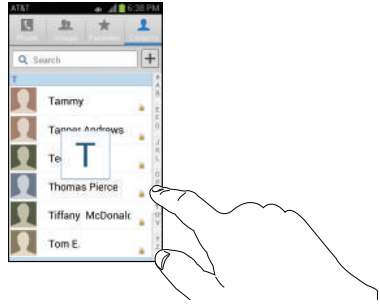

3. Tap the contact you wish to call or message.
4. Tap the phone icon to make a phone call or tap the message icon to send a message.

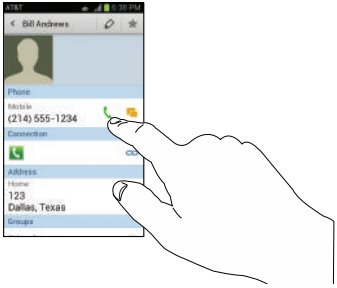

For more information, refer to *"Creating and Sending Messages"* on page 93.

Tip: From the Contact list, sweep right over a listing to make a call. Sweep left over a listing to send a message.

Joining Contacts

Joining Contact Information

Many people now maintain multiple email accounts, social networking logins, and other similar account information. For example, a Facebook account login name might differ from a corporate email account login because they are maintained separately and for different groups of people.

This device can synchronize with multiple accounts such as Facebook, Twitter, MySpace, Corporate email, and Google. When you synchronize your phone with these accounts, each account creates a separate contact entry in the Contacts list.

If one of your contacts (Amy Smith, for example) has a regular email account that you maintain in Gmail, but also has a Facebook account under her maiden and married name, as well as a Yahoo! chat account, when you merge these accounts into your Contacts list you can join all of her entries and view the information in one record.

The next time you synchronize your phone with your accounts, any updates that contacts make to email account names, email addresses, etc. automatically update in your contacts list.

For more information about synchronizing accounts, see *"Synchronizing Accounts"* on page 71.

1. From the Home screen, tap **Contacts** .
2. Tap a contact name (the name you want to join to another entry). **Note**: typically this is the same contact with a different name or account information.
3. Press → **Join contact**.

   The contact list is displayed.
4. Tap the second contact entry (the entry in which to join). The second contact is now joined with the first and the account information is merged into one screen.

Note: The information is still maintained in both entries, but displays in one record for easier viewing when you join the contacts.

---

5. Tap the **Connection** bar to view the contact information you joined. The contacts and information displays with an icon next to the contact name to indicate what type of account information is contained in the entry.

Unjoining a Contact

1. From the Home screen, tap **Contacts** .
2. Tap a contact name (the account name from which you want to unlink an entry). **Note**: typically this is the same contact with a different name or account information.
3. Tap the **Connection** bar.
4. Tap the minus sign next to entry in which you want to unjoin. The contact is now separated and no longer displays in the merged record screen.

Marking a Contact as Default

When you use messaging type applications, the application needs to know which information is primary (default) in a contact entry list. For example, you may have three different contact records for John Smith, so the application will be looking for the “default” number or entry.

1. From the Home screen, tap **Contacts** .
2. Tap a Contact name.
3. Press ➔ **Mark as default**. The Mark as default screen displays radio buttons next to the contact names or phone numbers of all the linked contacts. The radio button next to the default contact will be green.
4. To change the default contact, tap the radio button next to another entry that you want to be the default. The radio button will turn green, then tap **Done**.

Synchronizing Accounts

From the Accounts menu you decide if you want applications to synchronize, send, and receive data at any given time, or if you want the applications to synchronize automatically. After determining how you want the accounts to synchronize, indicate which account to synchronize with your Contacts list.

1. From the Home screen, tap **Contacts** .
2. Press then tap **Accounts**.
3. Tap the **Auto sync app data** field and tap **OK**.

   The accounts are synchronized.

Address Book Options

You can access Address Book options while at the main Address Book page or while in the details page for a specific entry.

Options in Address Book

1. From the Home screen, tap **Contacts** then press .
2. The following options are displayed:
   - **Delete:** allows you to delete 1 or more of your contacts.
   - **SIM Management**: allows you to copy contacts from your phone to your SIM card or from your SIM card to your phone. You can also delete contacts from your SIM.
   - **Import/Export**: allows you to move contacts to or from your memory card or USB storage. You can also send a namecard via Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.
   - **Accounts**: allows you to add and manage your Samsung, Facebook, Google, LDAP, and Microsoft Exchange ActiveSync accounts. Tap Add account and then follow the on-screen instructions.
   - **Speed dial setting**: allows you to set up speed-dialing. For more information, refer to *"Making a Call Using Speed Dial"* on page 45.
   - **Send email**: allows you to send an email using your Google account.
   - **Send message**: allows you to send a text or picture message.
   - **Contacts to display**: You can choose to display all of your contacts or only display contacts on your Phone, SIM, or contacts stored to other accounts. You can also tap Customized list to change other options on how your contacts are displayed.
   - **Settings**: allows you to choose set the following options:
     - **Only contacts with phones**: allows you to only display contacts that have phone numbers.
     - **List by**: allows you to sort by First name or Last name.
     - **Display contacts by**: allows you to sort by First name or Last name first.
     - **Service numbers**: allows you to display or edit your service numbers.
     - **Contact sharing settings**: allows you to set up how to send contacts via Bluetooth in the form of namecards.

– **AT&T Address Book**: allows you to access the AT&T Address Book so you can sync your contacts.

Options at Selected Contact Screen

1. From the Home screen, tap **Contacts** .
2. Tap a contact and at the contact's display screen, press .
3. The following options are displayed:
   - **History**: allows you to view the phone and message history for the contact.
   - **Edit**: allows you to edit the contact's information.
   - **Delete**: allows you to delete the contact from your Address Book.
   - **Join contact**: allows you to join contacts with other contacts.
   - **Separate contact**: allows you to separate contacts that have been joined.
   - **Mark as default**: when you have multiple contacts linked together, you can mark one of them as default (only displays when contact is saved to the phone). For more information, refer to *"Marking a Contact as Default"* on page 71.
   - **Share namecard via**: allows you to send the contact's information via Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.
   - **Assign speed dial**: allows you to assign this contact to your speed dial list. For more information, refer to *"Making a Call Using Speed Dial"* on page 45.
   - **Add to/Delete from reject list**: allows you to add or remove the contact from your reject list. If they call while being on the reject list, the call will be sent directly to voice mail.
   - **Print contact info**: allows you to print the contact's namecard to a Samsung printer using Wi-Fi.
   - **Add shortcut to Home**: allows you to place a shortcut for this contact on your Home screen.

Groups

Adding a Contact to a Group

1. From the Home screen, tap **Contacts** .
2. Press and hold a contact that you would like to add to a group.
3. Tap **Add to group**.
4. Tap a group entry.
5. Tap **Save**.

   The contact is added to the group.

Removing a Contact From a Group

1. From the Home screen, tap **Contacts** ➔ **Groups** .
2. Tap a group entry.
3. Press ➔ **Remove member**.
4. Tap all of the contacts you want to remove from this group. A green checkmark will appear next to their name.
5. Tap **Done**.

   The contacts are now removed from the group.

Creating a New Group

1. From the Home screen, tap **Contacts** ➔ **Groups** ➔ ➔ **Create**.
2. Tap the **Group name** field and use the on-screen keypad to enter a new group name. For more information, refer to *"Entering Text"* on page 60.
3. Tap **Group ringtone** to choose an audio file for assignment to this new group. Choose from **Default**, **Ringtones**, or **Go to My Files**.
4. Tap **Vibration pattern** to choose an audio file for assignment to this new group.
5. Tap **Add member** to add contacts to the new group.
6. Tap each contact you want to add to create a checkmark. You can also tap **Select all**.
7. Tap **Done**.
8. Tap **Save** to save the new Group category.

Editing a Caller Group

To edit a Group entry, there must be at least one member as part of the selected group.

1. From the Home screen, tap **Contacts** → **Groups** .
2. Tap a group entry.
3. Press → **Edit**.
4. Make modifications to the **Group name**, **Group ringtone**, or **Vibration pattern** fields.
5. Tap **Add member** to add more contacts to this group.
6. Tap **Done**.
7. Tap **Save** to save the edited Group category.

Address Book Favorites

Once you have stored phone numbers in the Address Book, you can add them to your Favorites list.

To view your Favorites list:

- From the Home screen, tap **Contacts** → **Favorites** .

Adding Favorites to your Address Book

1. From the Home screen, tap **Contacts** .
2. Within the Contacts list, touch and hold a contact that you want to add to your favorites list.
3. Tap **Add to favorites** on the displayed list.
4. A gold star will appear next to the contact in the Address Book.

Removing Favorites from your Address Book

1. From the Home screen, tap **Contacts** .
2. Within the Contacts list, touch and hold a contact that you want to remove from your favorites list. Contacts in your Favorites list will have a gold star.
3. Tap **Remove from favorites** on the displayed list.
4. The gold star will no longer appear next to the contact in the Address Book.

Managing Address Book Contacts

You can copy, delete, and view the memory status for the Phone and SIM contacts on your phone.

Copying Contacts to the SIM Card

Note: When storing an Address Book entry into the SIM card, only the name, phone number, and email address are available as fields. Also, if you move the SIM card to another phone that does not support additional fields on the SIM card, this additional information may not be available.

1. From the Home screen, tap **Contacts** → → **SIM Management**.
2. Tap **Copy Contacts to SIM**.

   The phone then displays a list of your current phone contacts.
3. Tap the contacts to place a checkmark adjacent to those entries you wish to have copied to the SIM card.
   - Repeat this step for all individual entries you wish copied to the SIM or tap **Select all** to place a checkmark alongside all entries.
4. Tap **Done** to copy.
5. At the **Copy to SIM** display, tap **OK**.

   The selected numbers are copied to the SIM card.

Copying Contacts to the Phone

1. From the Home screen, tap **Contacts** → → **SIM Management**.
2. Tap **Copy Contacts from SIM**.
3. At the **Create contact under account** prompt, tap on **Phone** or an account name that you would like to copy the contact to.

   The phone then displays a list of your current contacts stored on your SIM card.
4. Tap the contacts to place a checkmark adjacent to those entries you wish to have copied to your phone.
   - Repeat this step for all individual entries you wish copied to your phone or tap **Select all** to place a checkmark alongside all entries.
5. Tap **Done** to copy.

   The selected numbers are copied.

Deleting Contacts from the SIM card

1. From the Home screen, tap **Contacts** ➔ ➔ **SIM Management**.
2. Tap **Delete Contacts from SIM**.

   The phone then displays a list of your current SIM contacts.
3. Tap the contacts to place a checkmark adjacent to those entries you wish to have deleted from the SIM card.
   - Repeat this step for all individual entries you wish copied to the SIM or tap **Select all** to place a checkmark alongside all entries.
4. Tap **Delete**.
5. At the **Delete Contacts from SIM** prompt, tap **OK**.

   The selected numbers are deleted from the SIM card.

Deleting Address Book Entries from the Phone

You can delete Phone or SIM entries from your phone's memory.

1. From the Home screen, tap **Contacts** .
2. Within the Contacts list, touch and hold a contact that you want to delete.
3. Tap **Delete** on the displayed list.
4. At the **Delete contact** prompt, tap **OK** to delete the contact or **Cancel** to exit.

Using the Service Dialing Numbers

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers may include emergency numbers, customer service numbers, and directory inquiries.

1. From the Home screen, tap **Contacts** ➔ ➔ **Settings**.
2. Tap **Service numbers**.
3. Scroll through the available numbers (if available).
4. Tap a number and the call is made.

Note: This menu is available only when your SIM card supports Service Dialing Numbers.

Section 6: Multimedia

This section explains how to use the multimedia features of your phone, including AT&T Locker, Music Player, Google Play Music, Video Player, Play Movies, Gallery, Camera, and Camcorder.

AT&T Locker

AT&T Locker allows you to store, share, and sync all of your photos, videos, and documents in one safe, convenient place; the AT&T cloud.

1. From the Home screen, tap ➔ **AT&T Locker** .
2. Sign on to your Google account if you are not already signed on. For more information, refer to *"Creating a New Google Account"* on page 13.

   The Play Store is displayed.
3. The first time you sign in, the Play Store Terms of Service will be displayed. Tap **Accept** to continue or **Decline** to exit.
4. Tap **Update**.
5. Tap **Accept & download**.

   AT&T Locker will be downloaded to your device.
6. At the AT&T Locker homescreen, tap **Sign Me Up!** to create an account or tap **Sign In** if you already have an account.
7. Follow the on-screen instructions to use AT&T Locker.

Music Player

The Music Player is an application that can play music files. The music player supports files with extensions AAC, AAC+, eAAC+, MP3, WMA, 3GP, MP4, and M4A. Launching the Music Player allows you to navigate through your music library, play songs, and create playlists (music files bigger than 300 KB are displayed).

Playing Music

1. Tap ➔ **Music Player** .
2. Tap a library category at the top of the screen (All, Playlists, Albums, Artists, Music square, or Folders) to view the available music files.
3. Scroll through the list of songs and tap an entry to begin playback.

4. The following Music Player controls are available:

Pause the song.

Start the song after being paused.

Press and hold to rewind the song. Tap to go to previous song.

Press and hold to fast-forward the song. Tap to go to next song.

Volume control.

Repeat one: repeats the currently playing song.

Repeat all: replays the current list when the list ends.

Play All: plays the current song list once.

Shuffle On: the current list of songs are randomly shuffled for playback.

Shuffle Off: songs play in order and are not shuffled.

Provides access to the Music square.

Lists the current playlist songs.

Provides access to the SoundAlive feature.

Music Player Options

To access additional options, follow these steps:

1. While in the Music Player, press .
2. The follow options are available:
   - **Add to quick list**: adds the current music file to the Quick list.
   - **Via Bluetooth**: scans for devices and pairs with a Bluetooth headset.
   - **Share via**: allows you to share your music by using Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.
   - **Add to playlist:** allows you to add the current music file to a selected playlist.
   - **Set as:** allows you to set a music file to Phone ringtone, Caller ringtone, or Alarm tone.
   - **Scan for nearby device:** allows you to scan for nearby devices in order to share music.
   - **Settings**: allows you to change your music player settings. For more information, refer to *"Music Player Settings"* on page 80.
   - **Details**: allows you to view media info such as Artist, Title, Biography, and other information.
   - **End**: allows you to end the Music Player app.

Music Player Settings

The Music Player Settings menu allows you to set preferences for the music player such as whether you want the music to play in the background, sound effects, and how the music menu displays.

1. From the Home screen, tap → **Music Player**.
2. Press → **Settings**.
3. Select one of the following settings:
   - **SoundAlive**: set a type of equalization such as Normal, Pop, Rock, Jazz, Dance, Classic, etc.
   - **Play speed**: set the play speed anywhere between 0.5X and 2.0X using the slider.
   - **Music menu**: this menu allows you to select which categories you want to display. Choices are: Albums, Artists, Genres, Music square, Folders, Composers, Years, Most played, Recently played, or Recently added. Tap each item that you want to display in the Music menu.
   - **Lyrics**: when activated, the lyrics of the song are displayed if available.
   - **Music auto off**: when activated, music will automatically turn off after a set interval.

Using Playlists

Playlists are used to assign songs to a list of preferred media which can then be grouped into a list for later playback. These Playlists can be created via either the handset's Music Player options menu or from within a 3rd party music application (such as Windows Media Player) and then downloaded to the handset.

Creating a Playlist

1. From the Home screen, tap → **Music Player**.
2. Tap the **Playlists** tab.
3. Press → **Create playlist**.
4. Type a name for this playlist in the field and tap **OK**.

Adding Music to a Playlist

To add files to the playlist:

1. From the Home screen, tap → **Music Player**.
2. Tap the **Playlists** tab.
3. Tap the playlist name in which to add music.
4. Tap **Add music**.
5. Tap a music file, or tap **Select all** to add all the music tracks to this playlist then tap **Done**.

Removing Music from a Playlist

To remove music files from a playlist:

1. From the Home screen, tap ➔ **Music Player** .
2. Tap the **Playlists** tab.
3. Tap the playlist name in which to delete music.
4. Press ➔ **Remove**.
5. Tap the checkbox to the left of each track you want to remove from this playlist, or tap **Select all** to remove all the music tracks from this playlist, then tap **Remove**.

Editing a Playlist

Besides adding and removing music files in a playlist, you can also rename the playlist.

To edit a playlist:

1. From the Home screen, tap ➔ **Music Player** .
2. Tap **Playlists**.
3. Press ➔ **Edit title**.
4. Tap a playlist name to edit.
5. Enter a new name for the playlist then tap **OK**.

For information on downloading music for your phone, see *"Google Play Music"* on page 81.

Google Play Music

With Google Play Music, you can play music that you have added to your music file as well as any music you copied from your PC. While offline, you can listen to music you have copied from your PC.

1. From the Home screen, tap ➔ **Play Music** .
2. At the Welcome screen, tap **Next**.
3. At the **Select an account** screen, tap an account that you would like to link to Google Play Music or tap **Add Account**.
4. At the **Get free music** screen, tap **Get free songs** or **Skip**.
5. Follow the on-screen instructions for getting your free music.

   All music on your device and external SD card is displayed including Music folders that may contain multiple songs.
6. Tap a song to start playback.
7. From the main Play Music screen, you can tap any of the following tabs for a more detailed listing of songs: Recent, Artists, Albums, Songs, Playlists, and Genres.
8. Tap for the following options:

- **Shuffle all**: allows you to play all of your music in a shuffled order.
- **Make available offline**: allows you play your music without being online or connected to the network.
- **Offline music only**: only allows you to play music offline.
- **Settings**: allows you to view Open source licenses and the music version for the Play Music application.
- **Help**: allows you to view a help file on the Google Support website.

Video Player

The Video Player application plays video files stored on your microSD card.

1. Tap ➔ **Video Player** .
2. All videos that you have on your phone and memory card will be displayed. Tap the video that you want to play.
3. The video will begin to play.
4. The following video controls are available:

Pause the video.

Start the video after being paused.

Press and hold to rewind the video. Tap to go to previous video.

Press and hold to fast-forward the video. Tap to go to next video.

Volume control.

Tap to capture the current frame as an image.

Original size view. The video will be played in its original size.

Full-screen in ratio view. The video is enlarged as much as possible without becoming distorted.

Full-screen view. The entire screen is used, which may cause some minor distortion.

Note: The screen view icons are a three-way toggle. The icon that is displayed, is the mode that will appear after the icon is tapped.

Play Movies & TV

With Google Play Movies & TV, you can rent thousands of different movies and television shows. You can watch instantly, or download your movie or show for offline viewing at a later time.

1. From the Home screen, tap → **Play Movies & TV** .
2. Log on to your Google account if you have not already done so.
3. Following the on-screen instructions for renting and viewing movies. Use the tabs to search for items:
   - Tap the **MOVIES** tab to view movies you can rent.
   - Tap the **TV SHOWS** tab to view shows you can rent.
   - Tap the **PERSONAL VIDEOS** tab to view movies you have on your phone or memory card.
4. Press for additional options.

Live TV

Live TV is a subscription service that allows you to watch your favorite TV shows using your handset.

1. Tap → **Live TV** .

Note: The first time you use Live TV, you will need to download the application from the Market. For more information, refer to *"Play Store"* on page 176.

2. Read the **Terms and Conditions** and tap **Accept** to continue or **Exit** to exit.
3. When the **Activate Device** screen displays, tap **Activate**.
4. A text message is sent to your device with an activation link. Go to your inbox and tap on the activation link to activate your device.
5. The AT&T U-verse Live TV website is displayed.
6. Tap **Launch Application**.
7. At the **Complete action using** display, tap **Live TV**.
8. When the **Activation in Progress** screen displays, tap **Complete Activation** to activate your device.

   The **Success!** screen in displayed.

9. Tap **Continue**.

Note: Live TV will use a large amount of data and you are responsible for all data charges. It is strongly recommended that you upgrade to an unlimited data plan in addition to this purchase.

10. The Live TV main page displays. Follow the on-screen instructions to watch TV.

Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or contact image, and share as a picture message.

1. Tap → **Gallery** .
   All of the Albums that hold your pictures and videos will be displayed with folder name and number of files.
2. Tap an Album and thumbnails of the contents will be displayed.

Note: If your device displays that the memory is full when you access Gallery, delete some of the files by using **My Files** or other file management applications and try again. For more information, refer to *"My Files"* on page 171.

Viewing Pictures

1. Tap a thumbnail to view the picture.

Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.

2. The following options are available at the top of the screen:
   - **Camera** : displays the camera view finder so you can take another picture.
   - **Share via** : allows you to share the picture via Group Cast, AT&T Locker, Facebook, Picasa, Google+, Bluetooth, Wi-Fi Direct, Messaging, Gmail, or Email.

3. Press [Menu] for the following additional options:
   - **Slideshow**: See a slideshow of all of the pictures that you have in a folder.
   - **Delete**: Delete the picture.
   - **Face tag**: Add tags to the faces of people in a picture for identification.
   - **Copy to clipboard**: Copy a picture to your clipboard for future use.
   - **Rotate left**: Rotate the picture to the left.
   - **Rotate right**: Rotate the picture to the right.
   - **Crop**: Crop the picture by moving the blue box to the desired area.
   - **Set as**: Set the picture as a Contact photo, Home and lock screens, Home screen wallpaper, and Lock screen wallpaper.
   - **Buddy photo share**: Use face recognition from pictures in your contacts to send your friends or family pictures of themselves.
   - **Print**: Print pictures to a Samsung printer using Wi-Fi or Wi-Fi Direct.
   - **Rename**: Rename a picture.
   - **Scan for nearby devices:** Scan for compatible devices nearby.
   - **Details**: Display the details of a picture such as Title, Time, Width, Height, etc.

Viewing Videos

Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.

1. Tap a video to select it.
2. Tap ▷ to play the video.
3. Press [Menu] for additional options.

   For video player controls, see *"Video Player"* on page 82.

Camera

This section explains how to use the camera on your phone. You can take photographs and shoot video by using the built-in camera functionality. Your 5.0 megapixel camera produces photos in JPEG format.

Important! Do not take photos of people without their permission.
Do not take photos in places where cameras are not allowed.
Do not take photos in places where you may interfere with another person's privacy.

Using the Camera

Taking Photos

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the camera, then pressing the camera key.

Note: When taking a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. From the main Home screen, tap ➔ **Camera** to activate the camera mode.
2. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.
3. Before you take a picture, use the **Up** and **Down** Volume keys to zoom in or out. You can magnify the picture up to x4 (400 percent).
   – or –
   Pinch the screen to zoom out or pinch outwards to zoom in.
4. If desired, before taking the photo, you can tap on-screen icons to access various camera options and settings.
5. You can also tap the screen to move the focus to the area you touch.
6. Press the Camera key ( ) until the shutter sounds. (The picture is automatically stored within your designated storage location. If no microSD is installed, all pictures are stored on the Phone.) For more information, refer to *"Camera Options"* on page 87.

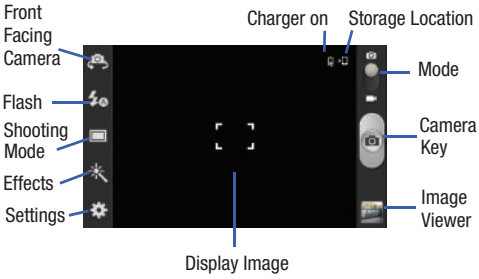

7. While viewing a picture, after you have taken it, pinch the screen outwards to zoom in or pinch the screen inwards to zoom out.

   You can magnify the picture up to x4.

8. Press ⮌ to return to the viewfinder.

Camera Options

Options are represented by icons across both sides of the screen.

Camera / Camcorder Mode: allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display. Slide the button up for Camera, or down for Camcorder.

Self-portrait: allows you to activate the front facing camera so you can take pictures of yourself or video chat.

Flash: allows you to set the flash options to Off, On, or Auto flash.

Shooting mode: allows you to set the shooting mode to one of the following:

- **Single shot**: takes a single photo and view it before returning to the shooting mode.

- **Panorama**: takes a landscape photo by taking an initial photo and then adding additional images to itself. The guide box lets you view the area where the second part of the panoramic picture should fall within.
- **Smile shot**: the camera focuses on the face of your subject. Once the camera detects the person's smile, it takes the picture.
- **Cartoon**: gives your photo a cartoon look.

Effects: allows you to change the color tone or apply special effects to the photo. Options include: No effect, Black and white, Sepia, and Negative.

Settings:

Edit shortcuts: allows you to set shortcut icons for the settings that you use the most.

Self-portrait: allows you to set the front camera so you can take pictures of yourself.

Flash: allows you to set the flash options to Off, On, or Auto flash.

Shooting mode: allows you to set the Shooting mode.

Effects: allows you to change the color tone or apply special effects to the photo. Options include: No effect, Black and white, Sepia, and Negative.

Scene mode: allows you to set the Scene to help take the best pictures possible. Options include None, Portrait, Landscape, Sports, Party/Indoor, Beach/Snow, Sunset, Dawn, Autumn Color, Text, Candlelight, Firework, Backlight, and Night.

Exposure value: allows you to adjust the brightness level by moving the slider.

Focus mode: allows you to set this option to Auto focus or Macro.

Timer: allows you to set a timer for how long to wait before taking a picture. Options include: Off, 2 sec, 5 sec, and 10 sec.

Resolution: allows you to set the image size to either: 5M (2560x1920), W4M (2560x1536), 3.2M (2048x1536), W2.4M (2048x1232), W0.4M (800x480), or 0.3M (640x480).

White balance: allows you to set this option to one of the following choices: Auto, Daylight, Cloudy, Incandescent, or Fluorescent.

Settings: (continued)

ISO: ISO determines how sensitive the light meter is on your digital camera. Choose from Auto, 100, 200, or 400. Use a lower ISO number to make your camera less sensitive to light, a higher ISO number to take photos with less light, or Auto to let the camera automatically adjust the ISO for each of your shots.

Metering: allows you to set how the camera measures or meters the light source: Matrix, Center-weighted, or Spot.

Guidelines: allows you to turn the guidelines On or Off.

GPS tag: allows you to turn GPS On or Off (also known as Geotagging). The location of where the picture is taken is attached to the picture. (Only available in Camera mode.) Before you can use the GPS tag (Geotagging), from the Home screen tap → **Settings** → **Location services** and tap **Use GPS satellites** to create a checkmark.

Shutter sound: when set to On, the camera produces a sound when a picture is taken.

Save as flipped: when set to On, this option allows you to take and save a mirror-image video when using self-recording mode.

Image quality: allows you to set the image quality to: Superfine, Fine, or Normal.

Storage: allows you to configure the default storage location for images or videos as either Phone or Memory card (if inserted).

Reset: allows you to reset all camera or camcorder settings to the default values.

Image viewer: allows you to access the Image viewer and the various viewing options for a selected picture. Image viewer options are described in the following section. The last picture you took, will be displayed as a thumbnail in the Image viewer icon.

Viewing your Pictures

After you take a photo, you can access various options from the Image Viewer. The Image Viewer uses your Gallery. For more information, refer to *"Gallery"* on page 84.

Using the Camcorder

In addition to taking photos, the camera also doubles as a camcorder that also allows you to record, view, and send videos.

Note: The camera may not be able to properly record videos to a memory card with a slow transfer speed.

Shooting Video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by having the light source behind you.

1. From the main Home screen, tap **Camera** to activate the camera mode.
2. Touch and drag the Camera mode button down to Camcorder Mode.
3. Tap the Recording mode that you prefer. Select between Normal and Limit for MMS.
4. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camcorder at the subject.
5. Before you take a video, use the **Up** and **Down** Volume keys to zoom in or out. You can magnify the video up to x4 (400 percent).

   – or –

   Pinch the screen to zoom out or pinch outwards to zoom in.
6. Tap the Video key ( ) to begin shooting video. The red light will change while recording ( ).
7. Tap the Video key ( ) to stop the recording and save the video file to your Camera folder.
8. Once the file has been saved, tap the image viewer, then tap to play your video for review.
9. Press to return to the viewer.

Camcorder Options

Options are represented by icons across both sides of the screen.

Camera / Camcorder Mode: allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display. Slide the button up for Camera, or down for Camcorder.

Self portrait: allows you to activate the front facing camera so you can take videos of yourself or video chat.

Flash: allows you to set the flash options to Off or On. When you set the flash to On, it stays on continually while you are taking a video.

Recording mode: allows you to set the recording mode to: Normal, which is limited only by available space on the destination location and to Limit for MMS, which is limited by MMS size restrictions.

Effects: allows you to change the color tone or apply special effects to the photo. Options include: No effect, Black and white, Sepia, and Negative.

Settings:

Edit shortcuts: allows you to set shortcut icons for the settings that you use the most.

Self-recording: allows you to set the front camera so you can take videos of yourself or video chat.

Flash: allows you to set the flash options to Off or On. When you set the flash to On, it stays on continually while you are taking a video.

Recording mode: allows you to set the recording mode to: Normal, which is limited only by available space on the destination location or Limit for MMS, which is limited by MMS size restrictions.

Effects: allows you to change the color tone or apply special effects to the photo. Options include: No effect, Black and white, Sepia, and Negative.

Exposure value: allows you to adjust the brightness level by moving the slider.

Timer: allows you to set a timer for how long to wait before taking a video. Options include: Off, 2 sec, 5 sec, and 10 sec.

Settings: (continued)

Resolution: allows you to set the image size to either: 1280x720, 720x480, 640x480, or 320x240.

White balance: allows you to set this option to one of the following choices: Auto, Daylight, Cloudy, Incandescent, or Fluorescent.

Guidelines: allows you to turn the guidelines On or Off.

Save as flipped: when set to On, this option allows you to take and save a mirror-image video when using self-recording mode.

Video quality: allows you to set the image quality to: Superfine, Fine, or Normal.

Storage: allows you to configure the default storage location for images or videos as either Phone or Memory card (if inserted).

Reset: allows you to reset all camera or camcorder settings to the default values.

Image viewer: allows you to access the Image viewer and the various viewing options for a selected video. Image viewer options are described in the following section. The last video you took, will be displayed as a thumbnail in the Image viewer icon.

Viewing your Videos

After you take a video, you can access various options from the Image Viewer. The Image Viewer uses your Gallery and the Video Player. For more information, refer to *"Gallery"* on page 84. Also, see *"Video Player"* on page 82.

Section 7: Messaging

This section describes how to send and receive different types of messages. It also includes the features and functionality associated with messaging.

Types of Messages

Your phone provides the following message types:

- Text Messages
- Multimedia (Picture, Video, and Audio) Messages
- Email and Gmail Messages
- Google Talk
- Google+ and Messenger Messages

The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's message service.

The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture, video, and audio messages) to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.

Important! When creating a message, adding an image, a sound file, or a video clip to a text message changes the message from a text message to a multimedia message.

Messaging icons are displayed at the top of the screen and indicate when messages are received and their type. For more information, refer to *"Indicator Icons"* on page 19.

Creating and Sending Messages

1. From the main Home screen, tap **Messaging** → **Compose**.

Note: The main Home screen initially contains the **Messaging** icon. If you delete it, or if you want to access Messaging from another Home screen, you must tap **Apps** → **Messaging**.

2. Tap on the **Enter recipient** field to manually enter a recipient or tap to select a recipient from your Contacts.

3. If adding a recipient from your Contacts, tap the contact to place a checkmark then tap **Done**.
   The contact will be placed in the recipient field.

Note: For the Group option, if the number of recipients is less than 10, all members in the group will be added. You will need to delete any unnecessary members in the list by selecting the trash can icon and deleting unwanted entries.

Note: Enter additional recipients by separating each entry with a semicolon (;) then using the previous procedure.

4. Tap the **Enter message** field and use the on-screen keypad to enter a message. For more information, refer to *"Entering Text"* on page 60.
5. Add more recipients by tapping the recipient field.
6. Review your message and tap **Send** .

Note: If you exit a message before you send it, it will be automatically saved as a draft.

Message Options

Options before composing a message

1. From the main Home screen, tap **Messaging** .
2. Before composing a message, press to reveal additional messaging options:
   - **Search**: allows you to search through all of your messages for a certain word or string of words. Enter a search string in the Messaging Search window and tap .
   - **Delete threads**: allows you to delete any message thread. Select the messages to delete and a green checkmark will appear next to the message. Tap **Delete**.
   - **Draft messages**: displays the draft messages folder and its contents.
   - **Locked messages**: displays the locked messages folder and its contents.
   - **Spam messages**: displays the spam messages folder and its contents.
   - **Settings**: allows you to access Messaging settings. For more information, refer to *"Messaging Settings"* on page 98.

Options while composing a message

1. While composing a message, press to reveal additional messaging options.
   - **Call**: allows you to call the contact. This option only appears if you have entered a phone number for the recipient.
   - **Insert smiley**: allows you to add emoticons, such as a happy face to your message.
   - **Add text**: allows you to copy text from your contacts, calendar, or from a memo to add to your message. This is a convenient feature for adding names, phone numbers, events, etc. to your message. For more information, refer to *"Adding Additional Text"* on page 96.
   - **Add to Contacts**: allows you to add the recipient to your Contacts list. This option only appears if the recipient is not already in your Contacts list.
   - **View contact**: allows you to see information on the recipient. This option only appears if the recipient is in your Contacts list.
   - **Add slide**: allows you to add a new page to a message.
   - **Add recipients**: allows you to add additional recipients.
   - **Delete message**: allows you to delete the message.
   - **Register as spam number**: allows you to register the number as spam.
   - **Remove from spam numbers list**: allows you to unregister a number from the spam number list. This option only appears if the number was previously registered as spam.
   - **Discard**: allows you to delete the message.

Adding attachments to a message

To add an attachment to your message, tap and select one of the following options:

- **Images**: allows you to tap an existing image from your Pictures list to add it to your message.
- **Take picture**: allows you to temporarily exit the message, take a photo with phone's camera, and then add it to your message by tapping **Save**.
- **Video**: allows you to choose an existing video from the Videos list, then add it to your message.
- **Capture video**: allows you to temporarily exit the message, record a video clip using the phone's camera, and then add it to your message by tapping **Save**.

- **Audio**: allows you to choose an existing audio file from the Audio list, then add it to your message by tapping the circle to the right of the audio so that it turns green, then tapping **Done**.
- **Record audio**: allows you to temporarily exit the message and record an audio clip using the phone's microphone. It is then automatically attached to the message.
- **Memo**: allows you to add an Memo that you have created.
- **Calendar**: allows you to add an event from your calendar. Select the desired event and tap **Done**.
- **Location**: allows you to attach a thumbnail of a map showing your location.
- **Contacts**: allows you to tap on an existing Address Book entry, then add it to your message by tapping **Done**.

Adding Additional Text

You can copy text such as names, phone numbers, and events from your Contacts, Calendar or a Memo.

1. While composing a message, press → **Add text**.
2. At the Add text screen, select one of the following:
   - **Memo**: allows you to insert text from an existing Memo.
   - **Calendar**: allows you to add the name, date, and time of a calendar event to your message.
   - **Location**: allows you to add an address and the link to the location on Google Maps.
   - **Contacts**: allows you to add the name and phone number of any of your contacts to your message.
   - **Text templates**: allows you to add pre-defined phrases and sentences.

   The information is added to your message.

Viewing New Received Messages

1. When you receive a new message, the new message icon will appear at the top of your screen.
2. Open the Notification Bar and select the message. For more information, refer to *"Notification Bar"* on page 40.

   – or –

   From the main Home screen, tap **Messaging** then tap the new message to view it.

   The selected message appears in the display.
3. To play a multimedia message, tap .

- To pause playback of the multimedia message, tap .

4. To scroll through the message (if additional text pages have been added), touch the screen and in a single motion, scroll up or down the page.

Message Threads

Sent and received text and picture messages are grouped into message threads. Threaded messages allow you to see all the messages exchanged (similar to a chat program) and displays a contact on the screen. Message threads are listed in the order in which they were received, with the latest message displayed at the top.

To open a threaded message follow these steps:

1. From the main Home screen, tap **Messaging** . Tap the message thread you want to view.
2. Touch and hold the message thread to display the following options:
   - **View contact**: displays the contact's information. This option only displays if the sender is in your Contacts list.
   - **Add to Contacts**: displays the Contacts information screen. This option only displays if the sender is not in your Contacts list.
   - **Delete thread**: displays a confirmation dialog box that when pressed, deletes the entire thread.
   - **Register as spam number**: allows you to register the number as spam.
   - **Remove from spam numbers list**: allows you to unregister a number from the spam number list. This option only appears if the number was previously registered as spam.

Deleting Messages

Deleting a single message thread

1. From the main Home screen, tap **Messaging** .
2. Touch and hold a message, then tap **Delete thread**.
3. At the **Delete** prompt, tap **OK** to delete or **Cancel** to cancel.

Deleting multiple message threads

1. From the main Home screen, tap **Messaging** .
2. Press ➔ **Delete threads**.
3. Tap each message you want to delete. A checkmark will appear beside each message you select.
4. Tap **Delete**.

5. At the **Delete** prompt, tap **OK** to delete or **Cancel** to cancel.

Message Search

You can search through your messages by using the Message Search feature.

1. From the main Home screen, tap **Messaging** .
2. Tap → **Search**.
3. Use the on-screen keypad to enter a word or phrase to search for, then tap .
4. All messages that contain the search string you entered are displayed.

Messaging Settings

To configure the settings for text messages, multimedia messages, Voice mails, and Push messages.

1. From the main Home screen, tap **Messaging** → → **Settings**.
2. The following Messaging settings are available:

Display:

- **Bubble style**: allows you to choose from several bubble styles for your messages. Bubbles are the rounded boxes that surround each message.
- **Background style**: allows you to choose from several background styles for your messages.
- **Use the volume key**: allows you to change the text size by using the up or down volume keys.

General settings:

- **Delete old messages**: deletes old messages when the limit is reached, rather than having them overwritten.
- **Text message limit**: allows you to set a limit on how many text messages can be in one conversation.
- **Multimedia message limit**: allows you to set a limit on how many multimedia messages can be in one conversation.
- **Text templates**: allows you to edit or add new text templates to use in your messaging.

Text message (SMS) settings:

- **Manage SIM card messages**: allows you to manage the messages that you have stored on your SIM card.
- **Message center**: allows you to enter the number of your Message center where your messages reside while the system is attempting to deliver them.

- **Input mode**: allows you to set the input mode for your text messages. Choose between GSM Alphabet, Unicode, or Automatic.

Multimedia message (MMS) settings:

- **Auto-retrieve**: allows the message system to retrieve messages automatically.
- **Creation mode**: allows you to select the creation mode, Free, Restricted, or Warning.
  - **Restricted**: you can only create and submit messages with content belonging to the Core MM Content Domain.
  - **Warning**: the phone will warn you via pop up messages that you are creating a multimedia message which does not fit the Core MM Content Domain.
  - **Free**: you may add any content to the message.
- **MMS alert**: allows you to receive an alert when MMS mode becomes active.

Push message settings:

- **Push messages**: allows you to receive push messages from the network.

Cell Broadcast (CB) settings:

- **CB activation**: allows you to receive Cell Broadcast (CB) messages.
- **Channel configuration**: allows you to set up the channel that you will receive CB messages on.

Notifications settings:

- **Notifications**: allows you to see message notifications on your status bar.
- **Select ringtone**: allows you to set the ringtone for your message notifications.
- **Vibrate**: allows you to configure the vibration mode associated with message alerts.
- **Message alert repetition**: allows you to set the interval for new message alerts. Choose from: Once, Every 2 minutes, or Every 10 minutes.
- **Preview message**: when enabled, allows you to view a preview of new message text on the Status bar.

Signature settings:

- **Add signature**: when enabled, this feature allows you to create a signature at the end of your outgoing text messages.

- **Signature text**: allows you to enter a desired signature for your message.

Spam message settings:

- **Spam settings**: when enabled, allows you to configure available spam settings such as:
- **Register number as spam**: allows you to manually enter and assign a phone number as being sent from a spam source.
- **Register phrase as spam**: allows you to assign a specific text phrase as belonging to a spam message. Ex: Dear friend.
- **Block unknown senders**: when active, automatically blocks incoming messages from unknown sources or blocked numbers.

Using Email

Email enables you to review and create email using various email services. You can also receive text message alerts when you receive an important email.

Creating an Email Account

1. From the Home screen, tap ➔ **Email** .
   Your accounts screen displays with an Email setup screen displayed.
2. Enter you email address in the **Email address** field.
3. Enter your password in the **Password** field.
4. If you want to see your password as it is being typed, tap **Show password** to create a checkmark.
5. Tap **Next**.
6. At the **Account options** screen, tap the **Email check frequency** drop-down list box and select how often you would like your email to be checked.
7. Tap any of the other options you would like to create a checkmark.
8. Tap **Next**.
9. Enter a name for this email account (optional).
10. Tap **Done**.

Creating a Corporate Email Account

Use the following procedure to configure your phone to synchronize with a corporate email account.

1. From the Home screen, tap ➔ **Email** .
   Your accounts screen displays with an Email setup screen displayed.
2. Enter you email address in the **Email address** field.
3. Enter your password in the **Password** field.

4. If you want to see your password as it is being typed, tap **Show password** to create a checkmark.
5. Tap **Manual setup**.
6. Tap the **Microsoft Exchange ActiveSync** field.
7. Enter all the Exchange server information, Domain, User name and Password, then tap **Next**.
8. At the **Activation** prompt, tap **OK**.
   The **Account options** screen is displayed.
9. Enter the desired information in the different fields, then tap **Next**.
10. Enter an Account name for this account (Optional) and tap **Done**.
    Wait for the Inbox to synchronize before use.
11. Press → **Settings** to change the account settings.

Creating Additional Email Accounts

To create additional email accounts after setting up your first account, follow these steps:

1. From the Home screen, tap → **Email**.
   Your Email screen displays showing your emails from the active account.
2. Press → **Settings**.
3. Tap + to add another email account.
4. Enter the information required to set up another account. For more information, refer to *"Creating an Email Account"* on page 100.

Switching Between Email Accounts

1. From the Home screen, tap → **Email**.
   Your Email screen displays showing your emails from the active account.
2. Tap the Inbox button at the top of your screen that displays the optional name you assigned to your active email account, for example, Work, Gmail, etc.
   Your Email accounts screen is displayed.
3. Tap the Email account you would like to switch to. You can also select **Combined view** which will display email messages from all accounts.
4. The new Email account is displayed.

Using Gmail

Gmail is Google's web-based email. When you first setup the phone, Gmail is configured. Depending on the synchronization settings, Gmail is automatically synchronized with your Gmail account.

Signing into Your Gmail

Note: You must sign in to your Gmail account in order to access Gmail.

1. Sign on to your Google account if you are not already signed on. For more information, refer to *"Creating a New Google Account"* on page 13.
2. From the Home screen, tap → **Gmail**.
3. Follow the on-screen instructions.
   The Inbox loads conversations and email.

Creating a Gmail Message

1. From the Gmail Inbox, tap at the bottom of the screen to create a new message.
2. Enter the recipients Email address in the **To** field. Separate multiple recipient email addresses with a comma.
3. Tap and select **Add Cc/Bcc** to add a carbon or blind copy.
4. Enter the subject of this message in the **Subject** field.
5. Tap the **Compose email** field and begin composing your message.
6. Tap to send.

Viewing a Gmail Message

1. From the Gmail Inbox, tap a message to view it.
2. The following options are available at the bottom of the screen after a message has been selected:
   - **Archive**: archives the selected message.
   - **Delete**: deletes the message.
   - **Labels**: allows you to attach labels to a message. This is similar to putting it in a folder.
   - **Mark Unread**: after reading a message, marks as unread.
   - **Newer**: swipe your screen to the right to see newer messages.
   - **Older**: swipe your screen to the left to see older messages.
3. Press to select one of the following additional options:
   - **Mark important/not important**: allows you to set the importance of a message.

- **Mute**: allows you to mute the sound in a message if applicable.
- **Report spam**: allows you to report a message as spam. Tap the UNDO option if you change your mind.
- **Settings**: displays Email settings that you can modify.
- **Help**: displays the Google.com webpage so you can search the web for help.
- **Send feedback**: allows you to send feedback or report a problem.

Other Gmail Options

1. Tap at the bottom of the screen to refresh the screen, send and receive new emails, and synchronize your email with the Gmail account.
2. Tap at the bottom of the screen to set up and manage Labels for your Gmail messages.
3. Tap at the bottom of the screen to search through your Gmail messages.

Google Talk

Google Talk is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts.

1. Log on to your Google account if you have not already done so. For more information, refer to *"Creating a New Google Account"* on page 13.
2. From the Home screen, tap → **Talk**.
3. Begin using Google Talk.
4. Press → **Help** for more information on using Google Talk.

Note: The Network confirms your login and processes. This could take up to 5 minutes to complete.

Google +

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast

messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+.

1. Sign on to your Google account. see *"Creating a New Google Account"* on page 13.
2. From the Home screen, tap ➔ **Google+** .
3. Select the account you want to use to sign in to Google+.

   – or –

   Tap **Add account** to create another account.
4. Follow the on-screen instructions to use Google+.
5. Visit www.google.com/mobile/+/ for more information.

Messenger

Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone.

1. Sign on to your Google account. For more information, refer to *"Creating a New Google Account"* on page 13.
2. From the Home screen, tap ➔ **Messenger** .

   – or –

   From the Google+ application, select **Messenger**.
3. Tap **Learn more** for more detailed information.
4. Select the account you want to use to sign in to Google+.

   – or –

   Tap **Add account** to create another account.
5. At the **Messenger** screen, tap to start a new message.
6. In the upper text field, enter a name, email address, or circle.
7. In the bottom message field, enter a message then tap .

Messages App

AT&T Messages brings your texts, calls, and voicemail messages together into a single conversation thread and is accessible by phone or computer.

1. From the Home screen, tap ➔ **Messages** .
2. Sign on to your Google account if you are not already signed on. For more information, refer to *"Creating a New Google Account"* on page 13.

Note: The first time you use the Messages app, you will need to download the updated application from the Play Store. When the Play Store page displays, tap **Update**. For more information, refer to *"Play Store"* on page 176.

3. The first time you use Messages, you will need to set up a few things. Tap **Record Greeting** to record a personal greeting, or tap **Skip** if you want to do it later.
4. Follow the on-screen instructions to use the Messages app.

Section 8: Changing Your Settings

This section explains the settings used for customizing your device.

Accessing Settings

- From any Home screen, tap ➔ **Settings** .

  – or –

  From any Home screen, press ➔ **Settings**.

  The Settings screen displays.

Wi-Fi Settings

This section describes the Wi-Fi settings. For information on how to use Wi-Fi, see *"Wi-Fi"* on page 145.

Activating Wi-Fi

1. From the Home screen, tap ➔ **Settings** ➔ **Wi-Fi**.
2. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi ON .
3. Tap **Scan** to scan for available Wi-Fi networks. For more information, refer to *"Connect to a Wi-Fi Network"* on page 145.

Activating Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

1. From the Home screen, tap ➔ **Settings** ➔ **Wi-Fi**.
2. Tap the ON/OFF slider, located to the right of the Wi-Fi Direct field, to turn Wi-Fi Direct ON .
3. At the bottom of the Wi-Fi screen, tap the **Wi-Fi Direct** button.

   For more information, refer to *"Wi-Fi Direct"* on page 147.

Advanced Wi-Fi Settings

The advanced Wi-Fi settings allow you to set up and manage wireless access points.

1. From the Home screen, tap ➔ **Settings** ➔ **Wi-Fi**.
2. Press ➔ **Advanced**.

   The following options are available:

   - **Network notification**: alerts you when a new WAP is available.
   - **Keep Wi-Fi on during sleep**: allows you to specify when to disconnect from Wi-Fi.

- **Check for Internet service**: Checks if Wi-Fi internet service is available when connected to an AP (Access Point).
- **Auto connect**: allows you to be automatically connected to an AT&T Wi-Fi Hotspot as soon as your phone detects it.
- **MAC address**: view your device's MAC address, required when connecting to some secured networks (not configurable).
- **IP address**: view your device's IP address.

Bluetooth settings

In this menu you can activate Bluetooth, view or assign a device name, activate your phone so other Bluetooth devices can discover it, or scan for other, available Bluetooth devices with which to pair.

Activating Bluetooth

1. From the Home screen, tap ➔ **Settings**.
2. Tap the ON/OFF slider, located to the right of the Bluetooth field, to turn Bluetooth ON . The Bluetooth icon is displayed.

Additional Bluetooth Settings

When Bluetooth is on, additional settings are available.

1. From the Home screen, tap ➔ **Settings** ➔ **Bluetooth**.
2. Tap **Scan** to scan for nearby discoverable devices. After searching, tap a device to pair with it. For more information, refer to *"Pairing Bluetooth Devices"* on page 151.
3. Press and select a Bluetooth setting to configure:
   - **Rename device**: Your device's default name displays on screen. Tap to change the device name. Available when Bluetooth is turned On.
   - **Visibility timeout**: Use this setting to control when to automatically turn off the Discoverable option: 2 minutes, 5 minutes, 1 hour, or Never timeout.
   - **Received files**: Show the list of files received by using Bluetooth.

Data Usage

From this screen you can view your Mobile data usage and turn your Mobile data capability On or Off.

1. From the Home screen, tap ➔ **Settings** ➔ **Data usage**.
2. Tap the **Mobile data** field, to create a checkmark and activate.

3. Tap **Set mobile data limit** to create a checkmark and allow a data limit to be set.
4. Touch and drag the red limit bar to the GB limit that you desire.
5. Tap the **Data usage cycle** drop-down menu and select a date.

   The data usage displays as a visual (chart) and also displays a list of each application with a breakdown of how much data was used per application.

Note: Data is measured by your device. Your service provider may account for data usage differently.

6. Press Menu to display additional options. Tap to activate.
   - **Data roaming**: enables Data roaming on your device.
   - **Restrict background data**: restricts some apps and services from working unless you are connected to a Wi-Fi network.
   - **Auto-sync data**: allows your accounts to automatically sync
   - **Show Wi-Fi usage**: displays a Wi-Fi tab that shows Wi-Fi usage.
   - **Mobile hotspots**: displays available mobile hotspots.

More Settings

This tab displays additional wireless and network information.

- From the Home screen, tap Apps ➔ **Settings** ➔ **More settings**.

  Options display for Airplane mode, Mobile networks, Tethering and portable hotspots, VPN, NFC, S Beam, Nearby devices, and Kies via Wi-Fi.

Airplane mode

Airplane mode allows you to use many of your phone's features, such as Camera, Games, and more, when you are in an airplane or in any other area where making or receiving calls or data is prohibited.

Important! When your phone is in Airplane Mode, it cannot send or receive any calls or access online information or applications.

1. From the Home screen, tap Apps ➔ **Settings** ➔ **More settings**.
2. Tap **Airplane mode**. A check mark displayed next to the feature indicates Airplane mode is active.

3. At the **Airplane mode** prompt, tap **OK**.
   The Airplane mode icon is displayed at the top of your screen.

Mobile networks

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Mobile networks options.

Use Packet Data

To activate the data network, this option must be selected. It is set on by default.

1. From the Home screen, tap → **Settings** → **More settings** → **Mobile networks**.
2. Tap **Use packet data** to create a checkmark and activate the feature.

Data Roaming

Data roaming allows you to connect to your service provider's partner networks and access data services when you are out of your service providers area of coverage.

1. From the Home screen, tap → **Settings** → **More settings** → **Mobile networks**.
2. Tap **Data roaming** to create a checkmark and activate the feature.

Access Point Names

To use Wi-Fi you need access to a wireless access point (hotspot).

1. From the Home screen, tap → **Settings** → **More settings** → **Mobile networks**.
2. Tap **Access Point Names**.
   A list of the Access Point names display. The active access point displays a green, filled circle to the right of the name.

Network Operators

Using this feature you can view the current network connection. You can also scan and select a network operator manually, or set the network selection to Automatic.

1. From the Home screen, tap → **Settings** → **More settings** → **Mobile networks**.
2. Tap **Network operators**.
   The current network connection displays at the bottom of the list.

Important! You must deactivate data service prior to searching for an available network.

3. Tap **Search networks** to manually search for a network.
4. Tap **Select automatically** to automatically select a network connection.

Note: Connecting to 2G networks slows the data transfer speed and time.

Default setup options

Your phone default is set to Automatic (to automatically search for an available network. You can set this option to Manual to select a network each time you connect.

1. From the Home screen, tap ➔ **Settings** ➔ **More settings** ➔ **Mobile networks**.
2. Tap **Network operators**.
3. Tap **Default setup**.
4. Tap **Manual** to locate and connect to a network manually, or tap **Automatic** to allow the device to automatically select a network.

Tethering & portable hotspot

This option allows you to share your phones's mobile data connection via USB or as a portable Wi-Fi hotspot.

USB tethering

1. From the Home screen, tap ➔ **Settings** ➔ **More settings** ➔ **Tethering and portable hotspots**.
2. Connect your phone to your PC using a USB cable.
3. Tap **USB tethering** to add a checkmark and activate the feature. The USB tethering icon is displayed at the top of your screen.

Mobile Hotspot

1. From the Home screen, tap ➔ **Settings** ➔ **More settings** ➔ **Tethering and portable hotspots** ➔ **Mobile Hotspot**.
2. Turn Portable Wi-Fi hotspots on by tapping the slider so that it changes to the ON position .
   The Portable Wi-Fi hotspot icon is displayed at the top of your screen.
3. Tap **Configure** at the bottom of the screen.
4. Enter or edit the Network SSID, Hide my device, Security setting, and Password.

5. Tap **Show password** and **Show advanced options** to see them displayed.
6. Tap **Save**.
7. Press for the following options:
   - **Timeout settings**: allows you to set the time your device will be available as a portable Wi-Fi hotspot.
   - **Help**: provides additional information.

Connecting to Portable Wi-Fi hotspot from other devices

1. Activate Wi-Fi on the device that wants to connect to your phone.
2. Find **[Samsung_Galaxy_Rugby_Pro_XXXX]** in the Wi-Fi network list and connect to it. XXXX are four randomly generated digits that will appear when you set up a Portable Wi-Fi hotspot on your device.

   The connected device can now use internet through your Portable Wi-Fi hotspot.

Note: Activating Wi-Fi and connecting to your phone will be different depending on the type of the other device.

Help

- From the **Tethering and portable hotspot** menu, tap **Help** for additional information

VPN settings

The VPN settings menu allows you to set up and manage Virtual Private Networks (VPNs).

Important! Before you can use a VPN you must establish and configure one.

Adding a Basic VPN

Before you add a VPN you must determine which VPN protocol to use: PPTP (Point-to-Point Tunneling Protocol), L2TP (Layer 2 Tunneling Protocol), L2TP/IPSec PSK (Pre-shared key based L2TP/IPSec), or L2TP/IPSec CRT (Certificate based L2TP/IPSec).

1. Before using VPN, you must first set up a screen unlock PIN or password. For more information, refer to *"Encryption"* on page 122.
2. From the Home screen, tap ➔ **Settings** ➔ **More settings** ➔ **VPN**.
3. Tap **Basic VPN**.

4. Tap **Add VPN network**.
5. Enter a name for the VPN network in the **Name** field.
6. Select a VPN type from the **Type** drop-down menu. The options are:
   - PPTP (Point-to-Point Tunneling Protocol)
   - L2TP/IPSec PSK (Layer 2 Tunneling Protocol / Internet Protocol Security Pre-Shared Key)
   - L2TP/IPSec RSA
   - IPSec Xauth PSK
   - IPSec Xauth RSA
   - IPSec Hybrid RSA
7. Enter the Server address and any other required fields that are dependent upon the **Type** you entered previously.
8. Tap the **Show advanced options** check box to display additional VPN options.
9. Tap **Save** to save your VPN settings.

Adding an IPsec VPN

1. Before using VPN, you must first set up a screen unlock PIN or password. For more information, refer to *"Encryption"* on page 122.
2. From the Home screen, tap → **Settings** → **More settings** → **VPN**.
3. Tap **Advanced IPsec VPN**.
4. Tap **Add VPN connection**.
5. Enter a password and tap **OK**.
6. Enter a name for the VPN connection in the **VPN connection name** field.
7. Select a IPsec type from the drop-down menu.
8. Enter any other required information.
9. Tap the **Show advanced options** check box to display additional VPN options.
10. Tap **Save** to save your VPN settings.

NFC

NFC (Near Field Communication) allows data exchange when you touch your device with another compatible device. This is used for applications such as S Beam.

To activate NFC, follow these steps:

1. From the Home screen, tap → **Settings** → **More settings**.
2. Tap the **OFF / ON** icon to turn NFC on ON.

S Beam

When S Beam is activated, you can beam files to another NFC-capable device by holding the devices close together. You can beam images and videos from your gallery, music files from your music player, and more.

1. From the Home screen, tap ➔ **Settings** ➔ **More settings** ➔ **S Beam**.
2. Tap the **OFF / ON** icon to turn S Beam on .
3. Touch the back of your device with another NFC-capable device and the content is transferred.

Nearby devices

This option allows you to share your media files with nearby devices using DLNA and connected to the same Wi-Fi.

1. Connect to a Wi-Fi network. For more information, refer to *"Activating Wi-Fi"* on page 106.
2. From the Home screen, tap ➔ **Settings** ➔ **More settings** ➔ **Nearby devices**.
3. Verify Wi-Fi Direct is enabled and you are paired with the device you wish to detect and share content with.
4. Tap **File sharing** to create a checkmark and turn File sharing on.
5. Verify (**Nearby devices**) appears at the top of the screen.
6. At the Nearby devices prompt, tap **OK**.
7. Tap **Shared contents**, then check the media you would like to share. Tap **OK**.
8. Tap **Device name**, then use the on-screen keyboard to change the name shown to others. Tap **Save**.
9. Tap **Allowed devices list**, then select the connected devices you would like to allow.
10. Tap **Not-allowed devices list**, then select the connected devices you would like to not allow.
11. Tap **Download to**, then select the destination of any downloaded (shared) content. Choose from USB storage (phone) or SD card.
12. Tap **Upload from other devices**, then select the actions you'll take when you upload content from other devices. Choose from either Always accept, Always ask, or Always reject.

Kies via Wi-Fi

Kies via Wi-Fi allows you to sync your PC wirelessly with your device provided they are both on the same Wi-Fi network. You can view and share videos, photos, music, ringtones, and more.

1. From your PC, download the Samsung Kies application if you don't already have it. You can find it at samsung.com.
2. From your PC, launch the Samsung Kies application.
3. From your PC, connect to a Wi-Fi network.
4. From the Home screen, tap ➔ **Settings** ➔ **More settings** ➔ **Kies via Wi-Fi**.
5. From your device, connect to the same Wi-Fi network that your PC is connected to if you have not already done so. For more information, refer to *"Connect to a Wi-Fi Network"* on page 145.

Home screen mode

Home screen mode allows you to set your display to the conventional layout of **Basic mode** or provide an easier user experience for the first-time smartphone users using **Easy mode**.

1. From the Home screen, tap ➔ **Settings** ➔ **Home screen mode**.
2. Tap the pull-down dropbox and select one of the following options:
   - **Basic mode**: provides conventional layout for the apps and widgets on your home screens.
   - **Easy mode**: provides easier user experience for first-time smartphone users on the home screens.
3. Tap **Apply**.

Blocking Mode

When Blocking mode is enabled, notifications for selected features will be disabled. You will only receive notifications of incoming calls from people on your allowed list.

1. From the Home screen, tap ➔ **Settings** ➔ **Blocking mode**.
2. In a single motion touch and slide the **Blocking mode** slider to the right to turn it on

. Confirm that the Blocking mode active icon appears in the Status bar.

3. Place a green checkmark adjacent to those features you would like to enable. Choose from: Disable incoming calls, Disable notifications, and Disable alarm and timer.
4. Configure a timeframe for these features to be active. Remove the checkmark from the **Always** field to configure the **From** and **To** time fields.
5. Tap **Allowed contacts** to assign those contacts that are exempted from these rules. Choose from None, All contacts, Favorites, or Custom. Allowed contacts will then appear in the **Allowed contact list**.

Sound Settings

From this menu you can control the sounds on the phone.

- From the Home screen, tap ➔ **Settings** ➔ **Sound**.

Volume

The Volume option allows you to change the volume for all phone sounds in one easy location.

1. From the Home screen, tap ➔ **Settings** ➔ **Sound** ➔ **Volume**.
2. Touch and drag the slider to adjust the sound volume for Media, Ringtone, Notifications, and System.
3. Tap **OK**.

Vibration intensity

Vibration intensity allows you to select how intense the vibration is for different options.

1. From the Home screen, tap ➔ **Settings** ➔ **Sound** ➔ **Vibration intensity**.
2. Touch and drag the slider to adjust the Vibration intensity for Incoming call, Notification, and Haptic feedback.

Device ringtone

This option allows you to set the ringtone.

1. From the Home screen, tap ➔ **Settings** ➔ **Sound**.
2. Tap **Device ringtone**.
3. Tap a ringtone and tap **OK**.

Device vibration

This option allows you to set your phone to vibrate and ring.

1. From the Home screen, tap ➔ **Settings** ➔ **Sound**.
2. Tap **Device vibration**.

3. Select a vibration pattern and tap **OK**.

Default notifications

This option allows you to set the ringtone that will sound for notifications and alarms.

1. From the Home screen, tap → **Settings** → **Sound**.
2. Tap **Default notifications**.
3. Tap a ringtone and tap **OK**.

Vibrate when ringing

This option allows you to enable your phone to vibrate whenever it rings.

1. From the Home screen, tap → **Settings** → **Sound**.
2. Tap **Vibrate when ringing** to create a checkmark and enable the feature.

System Tone Settings

The System tone settings are used when you use the dialing pad, make a screen selection, lock your screen, or tap the screen.

1. From the Home screen, tap → **Settings** → **Sound**.
2. Tap any of the following options to create a checkmark and activate the feature:
   - **Keytones**: makes a sound when you tap a key on the keyboard.
   - **Touch sounds**: makes a sound when you touch the screen.
   - **Screen lock sound**: makes a sound when your screen is locked or unlocked.
   - **Haptic feedback**: makes a vibration when you tap soft keys and on certain UI interactions.

Display Settings

In this menu, you can change various settings for the display.

- From the Home screen, tap → **Settings** → **Display**. The following options display:
  - **Wallpaper**: allows you to set the Wallpaper for your Home screen, Lock screen, or both.
  - **Page buddy**: Context-related pages will be created on the home screen.
  - **Brightness**: configures the LCD Brightness levels. Drag the slider to adjust the brightness and tap OK.
  - **Auto-rotate screen**: allows you to switch the display orientation automatically when you rotate the phone.

- **Screen timeout**: adjusts the delay time before the screen automatically turns off. Selections are: 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, and 10 minutes.
- **Font style**: allows you to set the font style that your phone will use. You can also tap Get fonts online to choose from a wider selection.
- **Font size**: allows you to select which size of font is displayed.
- **Touch key light duration**: allows you to set the time that the touch keys located on the bottom of your phone are lit.
- **Display battery percentage**: allows you to see the battery charge percentage next to the battery charge icon at the top of the display.
- **Auto adjust screen tone**: allows you to save power because the phone analyzes the displayed screen image and adjusts the LCD brightness.

Customizable key

The key on the top left-hand side of your phone, above the volume keys, can be customized to quickly access a function on your phone that you choose.

1. From any screen press and hold the Customizable key.
2. At the **Customizable key** prompt, tap **Assign**.
3. Tap **Long press**.
4. Tap an application that you would like to assign to the Customizable key.

   Now, when you press the Customizable key from any screen, the application will display.

To modify the Customizable key:

1. From the Home screen, tap ➔ **Settings** ➔ **Customizable key**.
2. Tap **Long press**.
3. Select another application.

To Reset the Customizable key settings:

1. From the Home screen, tap ➔ **Settings** ➔ **Customizable key**.
2. Tap **Reset settings**.
3. At the prompt, tap **OK** to reset to the default settings.

Storage

From this menu you can view the memory allocation for the device and the memory card as well as mount or unmount the SD card.

To view the memory allocation for your device and external SD card:

- From the Home screen, tap → **Settings** → **Storage**.The available memory displays under the **Total space** and **Available space** headings for both Device memory and SD card.

SD card

- Tap **Unmount SD card** to unmount your SD card so that you can safely remove it, then tap **OK**.

  – or –

1. Tap **Format SD card** to re-format your SD card. This will delete all data on your SD card including music, videos, and photos.
2. Tap **Format SD card** again.
3. Tap **Delete all** to continue or press to cancel.

Note: The **Format SD card** option is only available when your SD card is mounted.

For more information about mounting or unmounting the SD card, see *"Memory Card"* on page 41.

Power Saving Mode

Power Saving Mode allows you to manage your phone to conserve power.

1. From the Home screen, tap → **Settings** → **Power saving**.
2. Tap the **OFF / ON** icon next to **Power saving** to turn Power saving mode on ON.
3. Tap the following options to create a checkmark and conserve power:
   - **CPU power saving**: allows you to limit the maximum performance of the CPU.
   - **Screen power saving**: allows you to lower the screen power level.
   - **Turn off haptic feedback**: allows you to turn off vibration when you tap or touch the screen.
4. Tap **Learn about power saving** to learn about various ways to conserve battery power.

Battery

See how much battery power is used for device activities.

1. From a Home screen, tap ➔ **Settings** ➔ **Battery**. The battery level displays in percentage. The amount of time the battery was used also displays. Battery usage displays in percentages per application.
2. Tap **Screen**, **Android OS**, **Cell standby**, **Android System**, or any other listed application to view how it is affecting battery use.

Note: Other applications may be running that affect battery use.

Application manager

You can download and install applications from Play Store or create applications using the Android SDK and install them on your device. Use Application manager settings to manage applications.

Warning! Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Memory Usage

See how memory is being used by Downloaded or Running applications.

1. From a Home screen, tap ➔ **Settings** ➔ **Application manager**.
2. Tap **Downloaded**, **Running**, or **All** to display memory usage for that category of applications.

   The graph at the bottom of the Downloaded tab shows used and free device memory. The graph at the bottom of the Running tab shows used and free RAM.

Downloaded

Displays apps you have downloaded onto your device.

1. From a Home screen, tap ➔ **Settings** ➔ **Application manager**.
2. Tap the **Downloaded** tab to view a list of all the downloaded applications on your device.

3. To switch the order of the lists displayed in the Downloaded tabs, press → **Sort by size** or **Sort by name**.
4. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

Running Services

View and control services running on your device.

1. From a Home screen, tap → **Settings** → **Application manager**.
2. Tap the **Running** tab. All the applications that are currently running on the device display.
3. Tap **Show cached processes** to display all the cached processes that are running. Tap **Show services in use** to switch back.
4. Tap one of the applications to view application information.

   The following options display:

   - **Stop**: Stops the application from running on the device. This is usually done prior to uninstalling the application.

Warning! Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.

- **Report**: Report failure and other application information.

Note: Options vary by application.

Location Services

The Location services settings allow you to set up how the phone will determine your location and the sensor settings for your phone.

1. From the Home screen, tap → **Settings** → **Location services**.
2. Tap any of the following options to create a checkmark and activate the service:
   - **Use wireless networks**: allows applications to use data from mobile networks and Wi-Fi to help determine your location.
   - **Use GPS satellites**: allows applications to use GPS to pinpoint your location.
   - **Location and Google search**: allows Google to use your location data for improved search results and other services.

Lock Screen Settings

Choose settings for unlocking your screen.

Screen Lock

1. From the Home screen, tap ➔ **Settings** ➔ **Lock screen**.
2. Tap **Screen lock** for these options:
   - **Swipe**: Swipe the screen to unlock it.
   - **Face unlock**: Look at your phone to unlock it.
   - **Face and voice**: Look at your phone and speak to unlock.
   - **Pattern**: A screen unlock pattern is a touch gesture you create and use to unlock your device. Follow the prompts to create or change your screen unlock pattern.
   - **PIN**: Select a PIN to use for unlocking the screen.
   - **Password**: Create a password for unlocking the screen.
   - **None**: No pattern, PIN, or password is required. The screen will never lock.

Lock screen options

Activate or deactivates various Unlock screen functions.

Note: The Lock screen options are only available when the **Screen lock** option is set to **Swipe** or **Motion**.

1. From the Home screen, tap ➔ **Settings** ➔ **Lock screen** ➔ **Lock screen options**.
2. The following options are available:
   - **Shortcuts** sets shortcuts to appear at the bottom of the Lock screen. Touch and slide the slider to the right to turn it on .
   - **Information ticker** sets the news and stock information ticker to appear across the bottom of the Lock screen. Touch and slide the slider to the right to turn it on .
   - **Clock** allows you to display the digital clock while the Lock screen is active. Enabled by default.
   - **Dual clock** displays a set of dual digital clock on the Lock screen while you are traveling. Tap the entry to set your home city. This time zone then becomes the time used by one of these on-screen clocks. Touch and slide the slider to the right to turn it on .

- **Weather** displays the current area weather on the Lock screen. Touch and slide the slider to the right to turn it on ON. Tap and set both the temperature units (F or C) and a refresh time.
- **Help text** shows help information on the Lock screen.
- **Wake up in lock screen** requires that you say a command to wake-up S Voice.
- **Set wake-up command** designates your S Voice wake-up commands. Tap Wake-up S Voice and follow the on-screen prompts to create a new verbal command.

Note: These options vary depending on the selected Lock settings.

Owner information

This option allows you to show owner information on the lock screen. You can also enter text to display on the lock screen.

1. From the Home screen, tap ➔ **Settings** ➔ **Lock screen** ➔ **Owner information**.
2. Tap the **Show owner info on lock screen** checkbox to create a checkmark if you want your owner information displayed.
3. Enter text that you would like displayed on your lockscreen and tap **OK**.

Security

The Security settings allow you to determine the security level for your phone.

Encryption

To require a numeric PIN or password to decrypt your phone each time you power it on or encrypt the data on your SD card each time it is connected:

1. From the Home screen, tap ➔ **Settings** ➔ **Security**.
2. Tap **Encrypt device**. For more information, read the displayed help screen.
3. Tap **Encrypt external SD card** to enable the encryption on SD card data that requires a password be entered each time the microSD card is connected.

Tip: Make sure your battery is charged more than 80 percent. Encryption may take an hour or more.

Set up/change password

Use this option to set up your password when one is first required or change your current password.

1. From the Home screen, tap ➔ **Settings** ➔ **Security** ➔ **Set up/change password**.
2. Enter a new password and tap **Confirm**.
3. Enter the new password again and tap **Confirm**.

Set up SIM card lock

Prevent another user from using your SIM card to make unauthorized calls or from accessing information stored on your SIM card by protecting the information using a PIN code.

When enabled, your phone will ask for a PIN number each time you use the phone. Using this option you can also change your SIM PIN number.

1. From the Home screen, tap ➔ **Settings** ➔ **Security**.
2. Tap **Set up SIM card lock**.
3. Tap **Lock SIM card**, enter your SIM PIN code, then tap **OK**.

Note: You must activate Lock SIM card before you can change your SIM PIN code.

4. Tap **Change SIM PIN**.
5. Enter your old SIM PIN code and tap **OK**.
6. Enter your new SIM PIN code and tap **OK**.
7. Re-type your new SIM PIN code and tap **OK**.

Make passwords visible

When enabled, password characters display briefly as you touch them while entering passwords.

1. From the Home screen, tap ➔ **Settings** ➔ **Security**.
2. Tap **Make passwords visible** to create a checkmark and enable or disable the display of password characters.

Device Administrators

The Device Administration feature allows you to select one or more administration applications that control your device for security purposes (for example, if your phone is lost of stolen). These applications enforce remote or local device security policies.

Some of the features a device administration application might control are:

- Setting the number of failed password attempts before the device is restored to factory settings.
- Automatically locking the device.
- Restoring factory settings on the device.

Note: If a device uses multiple enabled administration applications, the strictest policy is enforced.

1. From the Home screen, tap ➔ **Settings** ➔ **Security**.
2. Tap **Device administrators**.
3. Select a device administrator and follow the prompts. If no device administrators are listed, you can download them from the Play Store.

Unknown sources

This feature allows you to download and install non-Market applications.

1. From the Home screen, tap ➔ **Settings** ➔ **Security**.
2. Tap **Unknown sources**.

A check mark is displayed to indicate it is active.

Warning! Enabling this option causes your phone and personal data to be more vulnerable to attack by applications from unknown sources.

Trusted Credentials

If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From the Home screen, tap ➔ **Settings** ➔ **Security**.
2. Tap **Trusted credentials**.

   The trusted credentials screen has two tabs:

   - **System**: Displays CA certificates that are permanently installed in the ROM of your device.
   - **User**: Displays any CA certificates that you installed, for example, in the process of installing a client certificate.
3. Tap a CA certificate to examine its details.

   A scrolling screen displays the details.

4. Scroll to the bottom of the details screen and tap **Disable** to disable a System certificate or **Remove** to remove a User certificate.

Caution! When you disable a system CA certificate, the **Disable** button changes to **Enable**, so you can enable the certificate again, if necessary. When you remove a user-installed CA certificate, it is permanently deleted and must be re-installed, if needed.

5. Tap **OK** to return to the certificate list.

When enabled, a check mark appears in the check box.

Install from device storage

Install encrypted certificates from an installed memory card.

Note: You must have installed a memory card containing encrypted certificates to use this feature.

1. From the Home screen, tap ➔ **Settings** ➔ **Security**.
2. Tap **Install from device storage**, then choose a certificate and follow the prompts to install.

Clear credentials

Clear stored credentials.

Note: This setting only appears if you have installed encrypted certificates.

1. From the Home screen, tap ➔ **Settings** ➔ **Security**.
2. Tap **Clear credentials** to remove all certificates.

Language and Input

This menu allows you to configure the language in which to display the menus. You can also set onscreen keyboard options.

Language

You can change the language used by your device by following these steps:

1. From the Home screen, tap ➔ **Settings** ➔ **Language and input** ➔ **Language**.
2. Tap a language from the list.

Keyboards and Input Methods

You can change the keyboard used by your device by following these steps:

1. From the Home screen, tap ➔ **Settings** ➔ **Language and input**.
2. Tap **Default** and select an input type.
3. Tap the icon next to the input method that you would like to configure the settings for.
4. Based on your selection of input method, the appropriate settings will appear and are explained below.

Google voice typing settings

From this menu you can set Samsung keyboard options.

1. From the Home screen, tap ➔ **Settings** ➔ **Language and input**.
2. Tap the icon next to **Google voice typing**.
3. The following options are available:
   - **Choose input languages**: tap on a language that you want to input. Select Automatic to use the local language or select a language from the list.
   - **Block offensive words**: tap to create a checkmark and enable the blocking of recognized offensive words from the results of your voice-input Google typing.
   - **Download offline speech recognition**: Enables voice input while offline.

Samsung Keyboard settings

From this menu you can set Samsung keyboard options.

1. From the Home screen, tap ➔ **Settings** ➔ **Language and input**.
2. Tap the icon next to **Samsung keyboard**.
   - **Portrait keypad types** allows you to choose a keypad configuration (Qwerty [default] or 3x4 Keyboard).
   - **Input language** sets the input language. Tap a language from the available list. The keyboard is updated to the selected language.
   - **Predictive text** enables predictive text entry mode. This must be enabled to gain access to the advanced settings. Touch and hold to access the advanced settings. Touch and slide the slider to the right to turn it on .
   - **Continuous input** allows you to type words by swiping between on-screen keys.

- **Handwriting** enables the device to recognize on-screen handwriting and convert it to text. Touch and slide the slider to the right to turn it on ON.
- **Voice input** activates the Voice input feature. This is an experimental feature that uses Google's networked speech recognition application.
- **Auto capitalization** automatically capitalizes the first letter of the first word in each sentence (standard English style).
- **Auto-punctuate** automatically inserts a full stop in a sentence by tapping the space bar twice when using the on-screen QWERTY keyboard.
- **Character preview** provides an automatic preview of the current character selection within the text string. This is helpful when multiple characters are available within one key.
- **Key-tap vibration** enables vibration feedback when you tap an on-screen key.
- **Key-tap sound** enables auditory feedback when you tap an on-screen key.
- **Tutorial** launches a brief on-screen tutorial covering the main concepts related to the Samsung keyboard.
- **Reset settings** resets the keyboard settings back to their original configuration.

Predictive Text Settings

From this menu you can set Predictive Text settings.

1. From the Home screen, tap → **Settings** → **Language and input**.
2. Tap the icon next to **Samsung keyboard**.
3. Tap the ON/OFF slider, located to the right of the Predictive text field, to turn it ON ON.
4. Tap **Predictive text**.
5. The following options are available:
   - **Personalized data**: allows you to use personal language that you have added to make your prediction results better.
   - **Learn from Gmail**: allows you to login to your Gmail account so your phone can learn your Gmail style.
   - **Learn from Facebook**: allows you to login to your Facebook account so your phone can learn your Facebook style.
   - **Learn from Twitter**: allows you to login to your Twitter account so your phone can learn your Twitter style.
   - **Learn from Messaging**: allows your device to learn from your Messages.

- **Learn from Contacts**: allows your device to learn from your contact list.
- **Clear personalized data**: removes all personalized data that you have entered.

Swype Keypad Settings

To configure Swype settings:

1. From the Home screen, tap ➔ **Settings** ➔ **Language and input**.
2. Tap the icon next to **Swype**.
3. Tap **How to Swype** to view an on-screen manual for Swype.
4. Tap **Gestures** to view helpful information on using gestures while using Swype.
5. Tap **Preferences** to alter these settings:
   - **Vibrate on keypress**: activates a vibration sensation as you enter text using the keypad.
   - **Sound on keypress**: turns on sounds generated by the Swype application.
   - **Show helpful tips**: turns on a flashing indicator for quick help.
   - **Auto-spacing**: automatically inserts a space between words. When you finish a word, just lift your finger or stylus and start the next word.
   - **Auto-capitalization**: automatically capitalizes the first letter of a sentence.
   - **Show complete trace**: once enabled, sets wether or not to display the complete Swype path.
   - **Pop-up on keypress**: once enabled, displays a character above an on-screen key while typing.
   - **Next word prediction**: once enabled, predicts the next word in your text string based on your current text entries.

Note: If incorrect words are being entered as you type, disabled this feature.

   - **Reset Swype's dictionary**: once enabled, deletes any words you have added to Swype's dictionary.
   - **Version**: displays the software version information.
6. Tap **Language Options** to activate and select the current text input language. Default language is US English.
7. Tap **Swype Connect** to activate and configure the following data settings:

- **Register now**: allows you to register with Swype so you can take advantage of backup and sync options.
- **Backup & Sync**: allows you to backup your Swype dictionary and sync your Swype dictionary across multiple devices.
- **Contribute data usage**: when enabled, allows the Nuance® application to collect usage data for better word predictions.
- **Cellular data**: when enabled, activates cellular data usage by the Swype application so it can receive program updates, language downloads, and other related features via your existing data connection.

8. Tap **Personalization** to activate and configure the following social media personalization settings.
   - **Edit Dictionary**: allows you to edit your personal Swype dictionary.
   - **Facebook**: allows you to log into your current Facebook account from where contact names are added to your Swype's personal dictionary for later use when you enter names into text fields. Helps recognize familiar names.
   - **Twitter**: allows you to sing into your existing Twitter account from where names and words are added to your personal dictionary. Helps recognize familiar names and words.
   - **Gmail**: allows you to sign in to your existing Gmail account from where existing contact information is added to your personal dictionary. Helps recognize familiar names.
9. Tap **Updates** to update the application if new software is available.

Speech Settings

This menu allows you to set the speech settings for Voice input.

1. From the Home screen, tap → **Settings** → **Language and input**.
2. Tap **Voice search** to configure the following:
   - **Language**: Choose a language for your voice input.
   - **Speech output**: Sets whether you will use speech output always or only when using hands-free.
   - **Block offensive words**: Enable or disable blocking of recognized offensive words from the results of your voice-input Google searches.
   - **Hotword detection**: Enable to being able to launch voice search by saying the word "Google".
   - **Download offline speech recognition**: Enables voice input while offline.

3. Tap **Text-to-speech output** and select **Google Text-to-speech Engine** or **Samsung TTS**.
4. Tap next to the preferred TTS engine configure the following settings:
   - **Language**: allows you to set the language for spoken text.
   - **Settings for Google Text-to-speech**: allows you to view Open Source Licenses. This option appears only when you have selected Google Text-to-speech as your preferred TTS engine.
   - **Settings for Samsung TTS**: allows you to view Open Source Licenses. This option appears only when you have selected Samsung TTS as your preferred TTS engine.
   - **Install voice data**: allows you to install voice data for speech synthesis. This option appears only when you have selected Google Text-to-speech as your preferred TTS engine.
5. Scroll down to the **General** section to access the following options:
   - **Speech rate**: Set the speed at which the text is spoken.
   - **Listen to an example**: Play a sample of speech synthesis (available if voice data is installed).
6. Tap the ON/OFF icon

next to **Driving mode** to turn it on and enable incoming calls and notifications to be read out automatically.

Mouse/trackpad

This option sets your Pointer speed.

1. From the Home screen, tap ➔ **Settings** ➔ **Language and input**.
2. Tap **Pointer speed** then drag the slide to the right to go faster or to the left to go slower.
3. Tap **OK** to save your setting.

Backup and Reset

Back Up My Data

By setting this option, the Google server will back up all of your settings and data.

1. From the Home screen, tap ➔ **Settings** ➔ **Backup and reset**.
2. Tap **Back up my data** to enable or disable back up of application data, WI-Fi passwords, and other settings to the Google server.

Backup Account

If you have enabled the **Back up my data** option, then the **Backup account** option is available.

1. From the Home screen, tap ➔ **Settings** ➔ **Backup and reset**.
2. Tap **Backup account** and tap your Google Gmail account or tap **Add account** to set your Google Gmail account to be backed up to the Google server.

Automatic Restore

By setting this option, when you reinstall an application, all of your backed up settings and data will be restored.

1. From the Home screen, tap ➔ **Settings** ➔ **Backup and reset**.
2. Tap **Automatic restore** to enable or disable automatic restoration of settings from the Google server.

Factory Data Reset

From this menu you can reset your phone and sound settings to the factory default settings.

1. From the Home screen, tap ➔ **Settings** ➔ **Backup and reset**.
2. Tap **Factory data reset**.

   The Factory data reset screen displays reset information.
3. Tap **Reset device**, then follow the prompts to perform the reset.

Warning! Performing a Factory data reset will erase all data from your phone and internal SD card, including your Google account, system and application data and settings, and downloaded applications. It will not erase current system software, bundled applications, and external SD card files such as music and photos.

Add Account

This menu allows you to set up, manage, and synchronize accounts, including your Google and email accounts.

Adding an Account

1. From a Home screen, tap ➔ **Settings** ➔ **Add account**.
2. Tap one of the account types.
3. Use the keyboard and follow the prompts to enter your credentials and set up the account.

A green circle will appear next to the account type once you have created an account. Your email account will also be displayed in the **Accounts** section of the main Settings menu.

Removing an Account

Important! Removing an account also deletes all of its messages, contacts, and other data from the device.

1. From a Home screen, tap → **Settings**.
2. Tap the account which is located in the **Accounts** section.
3. Tap the account name.
4. Tap **Remove account**, then tap **Remove account** at the prompt to remove the account and delete all its messages, contacts, and other data.

Motion

The Motion settings allow you to set up various Motion activation services. For more information on using gestures, see *"Using Gestures"* on page 30.

1. From the Home screen, tap → **Settings** → **Motion**.
2. Tap the **OFF / ON** icon next to **Motion** to activate the feature ON.
3. The following options are available. Tap to activate each option. A checkmark is displayed.
   - **Shake to update**: Once enabled, shake your device to rescan for Bluetooth devices, rescan for Wi-Fi devices, Refresh a Web page, etc.
   - **Turn over to mute/pause**: Once enabled, mute incoming calls and any playing sounds by turning the device display down on a surface. This is the opposite of the Pickup to be Notified Gesture.
4. Tap **Learn about motions** to get additional help on the various motions.

Accessory Settings

This menu allows you to select the Audio output mode when using a car or desk dock.

1. From the Home screen, tap → **Settings** → **Accessory**.
2. Tap **Audio output** and select between Stereo and Surround.

Date and Time

This menu allows you to change the current time and date displayed.

1. From the Home screen, tap ➔ **Settings** ➔ **Date and time**.
2. Tap **Automatic date and time** to allow the network to set the date and time.
3. Tap **Automatic time zone** to allow the network to set the time zone.

Important! Deactivate **Automatic date and time** to manually set the rest of the options.

4. Tap **Set date** and tap the up and down arrows to set the **Month**, **Day**, and **Year** then tap **Set**.
5. Tap **Set time** and tap the up and down arrows to set the **Hour**, **Minute**, and **PM/AM**, then tap **Set**.
6. Tap **Select time zone**, then tap a time zone.
7. Optional: Tap **Use 24-hour format**. If this is not selected the phone automatically uses a 12-hour format.
8. Tap **Select date format** and tap the date format type.

Accessibility

Accessibility services are special features to make using the device easier for those with certain physical disabilities. Use the Accessibility settings to activate these services.

Note: You can download accessibility applications from Play Store and manage their use here.

1. From the Home screen, tap ➔ **Settings** ➔ **Accessibility**.
2. Tap the **Auto-rotate screen** to automatically rotate the screen from landscape to portrait when you rotate your phone.
3. Tap the **Screen timeout** option to timeout the accessibility feature after a defined amount of time.
4. Tap the **Speak passwords** option to activate this feature which reads out password information.
5. Tap the **Answering/ending calls** option to be able to accept incoming calls by pressing the home key or end calls using the power key.

6. Tap the **Accessibility shortcut** option to allow the accessibility shortcut under the device options to be used by pressing and holding the power key.
7. Tap the **TalkBack** option to activate the TalkBack feature.

Note: TalkBack, when installed and enabled, speaks feedback to help blind and low-vision users.

Important! TalkBack can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.

8. Tap the **Font size** field to change the size of the fonts used on the device within menus, options, etc. Choose from: Tiny, Small, Normal, Large, or Huge.
9. Tap the **Negative colors** field to reverse the display of on-screen colors from White text on a Black background to Black text on a White background.
10. Tap the **Text-to-speech output** field to adjust your text-to-speech settings. For more information, refer to *"Speech Settings"* on page 129.
11. Tap **Enhance web accessibility** if want to allow apps to install scripts from Google that make their Web content more accessible. Tap **Allow**.
12. Tap the **Mono audio** field to enable stereo audio to be compressed into a single mono audio stream for use with a single earbud/earphone.
13. Tap the **Turn off all sounds** field to mute every sound made by the device during taps, selections, notifications, etc.
14. Tap the **Tap and hold delay** field to select a time interval for this action. Choose from: Short, Medium, or Long.

Developer Options

Use the Developer options to set options for application development.

Warning! The developer options are intended for development use only. They can cause errors to occur on your device and with the applications you have on it.

1. From the Home screen, tap → **Settings** → **Developer options**.
2. Tap the ON/OFF slider, located to the right of the Developer options field, to turn ON

.
3. The following options are available:
   - **Desktop backup password**: allows you to protect your desktop with a backup password ID.
   - **Stay awake**: with the Stay awake option enabled, your screen will never sleep while you are charging the phone.
   - **Protect SD card**: requires apps to ask your permission before accessing data on your SD card.
   - **USB debugging**: allows debugging when the device is attached to a PC by a USB cable.
   - **Allow mock locations**: used by developers when developing location-based applications.
   - **Select app to be debugged**: allows developers to select a specific app to debug.
   - **Wait for debugger**: specified apps must have debugger attached before executing.
   - **Show touches**: Displays touch interactions on the screen.
   - **Show pointer location**: Highlights the data that was touched on the screen.
   - **Show layout boundaries**: displays clip bounds, margins, etc.
   - **Show GPU view updates**: flashes views inside windows when drawn with GPU.
   - **Show screen updates**: Areas of the screen flash when they update.
   - **Window animation scale**: Configure the scale for animation (ranges from off to 10x).
   - **Transition animation scale**: Configure the scale for transitioning when using animation (ranges from off to 10x).
   - **Animator duration scale**: Configure the scale for duration when using animation (ranges from off to 10x).
   - **Disable hardware overlays**: Assigns the work of redendering to the GPU.
   - **Force GPU rendering**: allows the use of 2D hardware accelerations in applications.
   - **Strict mode**: Makes the screen flash when applications perform long operations on the main thread.
   - **Show CPU usage**: Screen highlights the current CPU usage.
   - **GPU rendering profile**: Uses a 2D acceleration in applications.

- **Enable traces**: Enables/disables on-screen tracing based on an available parameter.
- **Do not keep activities**: destroys every activity as soon as the application is closed.
- **Limit background processes**: sets the number of processes that can run in the background.
- **Show all ANRs**: displays a prompt when applications running in the background are not responding.

About Device

This menu contains legal information, system tutorial information, and other phone information such as the model number, firmware version, baseband version, kernal version, and software build number.

To access phone information:

1. From the Home screen, tap → **Settings** → **About device**.
2. The following information displays:
   - **Software update**: allows you to update your phone software, if available. For more information, refer to *"Software Update"* on page 137.
   - **Status**: displays the battery status, the level of the battery (percentage), network, signal strength, mobile network type, service state, roaming status, mobile network state, the phone number for this device, ERI version, IMEI number, IMEISV, IP address, Wi-Fi MAC address, Bluetooth address, Serial number, Up time, and Device status.
   - **Legal information**: This option displays information about Open source licenses as well as Google legal information. This information clearly provides copyright and distribution legal information and facts as well as Google Terms of Service, Terms of Service for Android-powered Phones, and much more pertinent information as a reference. Read the information and terms, then press to return to the Settings menu.
   - **Model number**: displays the phone's model number.
   - **Android version**: displays the android version loaded on this handset.
   - **Baseband version**: displays the baseband version loaded on this handset.
   - **Kernel version**: displays the kernel version loaded on this handset.
   - **Build number**: displays the software, build number.

Note: Baseband, kernal and build numbers are usually used for updates to the handset or support. For additional information please contact your AT&T service representative.

Software Update

The AT&T Software Update feature enables you to use your phone to connect to the network and upload any new phone software directly to your phone. The phone automatically updates with the latest available software when you access this option.

1. From the Home screen, tap ➔ **Settings** ➔ **About device** ➔ **Software update**.
2. Tap **Check for updates**.
3. At the **Software update** prompt, tap **OK** to continue.
4. The phone automatically updates the software (if available), otherwise, when the **Current software is up to date** prompt is displayed, tap **OK**.
5. When updating software, once the update file is downloaded, you can delay the update on the start screen by postponing it for a certain period of time. If you want to resume the update before the selected time, tap **Continue update**.

Section 9: Connections

This section describes the various connections your phone can make including accessing the Internet with your Browser, Wi-Fi, Bluetooth, and Connecting your PC.

Internet

The Browser is your access to the mobile web. This section explains how to navigate the Browser and introduces you to the basic features.

Accessing the Mobile Web

To access the Browser:

- From the Home screen, tap **Browser** .
  The AT&T/YAHOO! mobile homepage displays.

Navigating with the Browser

1. To select an item, tap an entry.
2. To scroll through a website, sweep the screen with your finger in an up or down motion.
3. Sweep the screen left to right to move laterally across a web page.
4. To access the Browser bar at the bottom of the screen, tap . Tap anywhere on the screen to hide it. The Browser bar gives you quick access to Facebook, Recommend, Tweet It, Apps, Offers, Share, Popular, News, Sports, Entertainment, Settings, and Add More.
5. To return to the previous page, press .

Zooming in and out of the Browser

There are several ways to Zoom in and out on your browser when you are using Desktop view. After tapping on a link or article, use one of these methods:

- **Double tap**: Quickly tap the screen twice on the web page to zoom in or out.
- **Pinching**: Sweep in opposite directions at the same time to zoom in or out (use a pinching-in or pinching-out motion).

Browser Options

1. From the home page, press to access the following options:
   - **Home**: takes you to your Home page.
   - **New window**: displays a new window so you can browse multiple URLs. For more information, refer to *"Adding and Deleting Windows"* on page 140.
   - **Add bookmark**: allows you to add a URL to your bookmark list
   - **Add shortcut**: allows you to add a shortcut to your Home screen.
   - **Share page**: allows you to share the page using Gmail or as a message.
   - **Find on page**: allows you to search in the current page.
   - **Desktop view**: allows you to assign the browser to display the current page in the desktop view (to closely mimic the display as it would appear on a desktop computer).
   - **Save for offline reading**: allows you to store the current page in memory so that it can be read later even if you loose your Internet connection.
   - **Brightness**: allows you to set the screen brightness.
   - **Downloads**: displays the download history.
   - **Print**: allows you to print the screen or web page on a Samsung printer using Wi-Fi.
   - **Settings**: allows you to modify your web settings. For more information, refer to *"Browser Settings"* on page 142.

Enter a URL

You can access a website quickly by entering the URL. Websites are optimized for viewing on your phone.

To enter a URL and go to a particular website, follow these steps:

1. Tap the **URL** field at the top of your screen.
2. Enter the URL using the on-screen keypad.

   The website displays.

Search the Internet

To perform an internet search using keywords, follow these steps:

1. From the Google homepage, tap the URL field.
2. Enter the keyword(s) to search using the on-screen keypad and tap **Go**.
3. Tap a link to view the website.

Adding and Deleting Windows

You can have up to eight Internet windows open at one time. To add a new window, follow these steps:

1. From your browser, press ➔ **New window**.
   A new browser window is opened.
2. Tap (**Windows**) to see thumbnails of all open windows.
3. Tap a window listing to open up that Internet window.
4. Tap at the top right corner of the web page thumbnail to delete the window.

Going Incognito

The incognito feature allows you to view Internet sites outside of the normal browsing. Pages viewed in this incognito window won't appear within your browser history or search history, and no traces (such as cookies) are left on your device.

Note: Any downloaded files will be preserved and will stay on your device after you exit the incognito mode.

To add a new incognito window:

1. From your browser window, tap (**Windows**) ➔ (**Incognito**).
2. A new browser window displays.

Note: The incognito icon appears in the upper-left of the new browser window while you are in this mode.

To exit from the incognito window:

1. From your browser window, tap (**Windows**) ➔ (**New window**).
2. Scroll across the available windows and locate the incognito window.
3. Tap next to the incognito listing to delete this window.

Using Bookmarks

While navigating a website, you can bookmark a site to quickly and easily access it at a future time. The URLs (website addresses) of the bookmarked sites are displayed in the Bookmarks page. From the Bookmarks page you can also view your Most visited websites and view your History.

1. From the Home webpage, tap (**Bookmarks**). The Bookmarks page is displayed.
2. Press to display the following options:
   - **List/Thumbnail view**: Select **Thumbnail view** (default) to view a thumbnail of the webpage with the name listed, or select **List view** to view a list of the bookmarks with Name and URL listed.
   - **Create folder**: Creates a new folder in which to store new bookmarks.
   - **Change order**: Rearranges the current bookmarks.
   - **Move to folder**: Selected bookmarks are moved to a selected folder.
   - **Delete**: Erases selected bookmarks.
3. Tap a bookmark to view the webpage, or touch and hold a bookmark for the following options:
   - **Open**: Opens the webpage of the selected bookmark.
   - **Open in new window**: Opens the webpage in a new window.
   - **Edit bookmark**: Allows you to edit the name or URL of the bookmark. For more information, refer to *"Editing Bookmarks"* on page 141.
   - **Add shortcut**: Adds a shortcut to the bookmarked webpage to your phone's Home screen.
   - **Share link**: Allows you to share a URL address using many different options.
   - **Copy link URL**: Allows you to copy the URL address to use in a message.
   - **Delete bookmark**: Allows you to delete a bookmark. For more information, refer to *"Deleting Bookmarks"* on page 142.
   - **Set as homepage**: Sets the bookmark to your new homepage.

Adding Bookmarks

1. From any webpage, tap ➔ .
2. Use the on-screen keypad to enter the Name, Address, and the Folder.
3. Tap **Save**.
4. **Saved to bookmarks** will appear at the bottom of the page.

Editing Bookmarks

1. From the Bookmarks page, tap and hold the bookmark you want to edit.
2. Tap **Edit bookmark**.
3. Use the on-screen keypad to edit the Name, Address, and the Folder.
4. Tap **Save**.

Deleting Bookmarks

1. From the Bookmarks page, tap and hold the bookmark you want to delete.
2. Tap **Delete bookmark**.
3. At the **Delete** confirmation window, tap **OK**.

Emptying the Cookies

A cookie is a small file which is placed on your phone by a website during navigation. In addition to containing some site-specific information, it can also contain some personal information (such as a username and password) which can pose a security risk if not properly managed. You can clear these cookies from your phone at any time.

1. From the Home webpage, press → **Settings** → **Privacy and security** → **Clear all cookie data**.
2. At the **Clear** prompt, tap **OK** to delete the cookies or tap **Cancel** to exit.

Using your History

The History list provides you with a list of the most recently visited websites. These entries can be used to return to previously unmarked web pages.

1. From the Home webpage, tap → **History** tab.
   A list of your most recently visited websites is displayed with Name and URL address.
2. Tap on a category such as **Today**, **Last 7 days**, or **Most visited**.
3. Tap any entry to display the webpage.
4. Press → **Clear history** to delete the History list.

Saved Pages

The Saved pages list provides you with a list of the websites that you have saved.

1. From the Home webpage, tap → **Saved pages** tab.
   A list of your saved webpages is displayed with Name and URL address. The webpages that have been visited the most will appear at the top.
2. Tap any entry to display the webpage.

Browser Settings

To make adjustments in your browser settings, follow these steps:

1. Tap **Browser** → → **Settings**.
2. The following options are available:

General

- **Set home page**: Sets the current home page for the Web browser.
- **Form auto-fill**: allows you to fill in web forms with a single tap.
- **Auto-fill text**: allows you to enter text to be used in the Form auto-fill feature.

Privacy and security

- **Clear cache**: Deletes all currently cached data. Tap **OK** to complete the process.
- **Clear history**: Clears the browser navigation history. Tap **OK** to complete the process.
- **Show security warnings**: Notifies you if there is a security issue with the current website.
- **Accept cookies**: Allows sites, that require cookies, to save and read cookies from your device.
- **Clear all cookie data**: Deletes all current browser cookie files.
- **Remember form data**: Allows the device to store data from any previously filled out forms. Remove the checkmark to disable this function.
- **Clear form data**: Deletes any stored data from previously filled out forms. Tap OK to complete the process.
- **Enable location**: Allows websites to request access to your location.
- **Clear location access**: Clears location access for all websites. Tap **OK** to complete the process.
- **Remember passwords**: Stores usernames and passwords for visited sites. Remove the checkmark to disable this function.
- **Clear passwords**: Deletes any previously stored usernames or passwords. Tap **OK** to complete the process.
- **Enable notifications**: Allows website notifications. Select Always on, On demand, or Off.
- **Clear notifications**: Deletes website notification access information.

Accessibility

- **Force zoom**: allows you to override the website's request to control zoom.
- **Text size**: allows you to preview the text size, scale the text size using a slider bar, set the zoom amount on double tap, and minimize the font size using a slider bar.
- **Inverted rendering**: allows you to preview a website page, select Inverted rendering (black becomes white and vice versa), and adjust the Contrast using a slider bar.

Advanced

- **Select search engine**: allows you to set your default search engine to Google, Yahoo!, or Bing.
- **Open in background**: New pages are launched in a separate page and displayed behind the current one. Remove the checkmark to disable this function.
- **Enable JavaScript**: Enables Javascript for the current Web page. Without this feature, some pages may not display properly. Remove the checkmark to disable this function.
- **Allow multiple tabs per app**: Allows you to use multiple navigation tabs per application.
- **Enable plug-ins**: Allows the download of plug-ins such as Adobe Flash.
- **Default storage**: Allows you to set your default storage to Phone or Memory Card.
- **Website settings**: View advanced settings for individual websites.
- **Show browser bar**: Displays the toolbar at the bottom of the screen.
- **Default zoom**: Adjusts the zoom feature. Set to Far, Medium, or Close.
- **Open pages in overview**: Shows an overview of newly opened web pages.
- **Auto-fit pages**: Allows web pages to be resized to fit as much of the screen as possible.
- **Block pop-ups**: Prevents popup advertisement or windows from appearing onscreen. Remove the checkmark to disable this function.
- **Text encoding**: Adjusts the current text encoding.
- **Reset to default**: Clears all browser data and resets all settings to default.

Bandwidth management

- **Preload search results**: Allows the browser to preload high confidence search results in the background to help speed up searches.
- **Page preloading**: Allows the browser to preload pages in the background.
- **Load images**: Allows web page images to be loaded along with the other text components of a loaded website.

Labs

- **Quick controls**: allows you to open quick controls and hide the app and URL bars by swiping your thumb from the left or right edge of the screen.
- **Full screen**: allows you to access Full screen mode and hide the status bar.

Wi-Fi

About Wi-Fi

Wi-Fi (short for "wireless fidelity"and sometimes referred to as wifi) is a term used for certain types of Wireless Local Area Networks (WLAN). These device types use an 802.11 wireless specification to transmit and receive wireless data. Wi-Fi communication requires access to an existing and accessible Wireless Access Point (WAP). These WAPs can either be Open (unsecured) as within most Hot Spots, or Secured (requiring knowledge of the Router name and password).

Turning Wi-Fi On

By default, your device's Wi-Fi feature is turned off. Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

1. From the Home screen, tap ➔ **Settings**.
2. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi ON .

Connect to a Wi-Fi Network

1. From the Home screen, tap ➔ **Settings** ➔ **Wi-Fi**. The network names and security settings (Open network or Secured with WEP) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.
2. Tap the network you want to connect to.

Note: When you select an open network, you will be automatically connected to the network.

3. Enter a wireless password if necessary.

Manually add your new network connection

1. At the bottom of the Wi-Fi screen, tap **Add Wi-Fi network**.
2. Enter the **Network SSID**. This is the name of your Wireless Access Point.

3. Tap the **Security** field and select a security option. This must match the current security setting on your target WAP.
4. If secured, you will also need to enter your WAP's password.
5. Tap **Save** to store the new information and connect to your target WAP.

Note: The next time your device connects to a previously accessed or secured wireless network, you are not prompted to enter the WAP key again, unless you reset your device back to its factory default settings.

Turning Wi-Fi Off

1. From the Home screen, tap ➔ **Settings**.
2. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi OFF .

Note: Use of wireless data connections such as Wi-Fi and Bluetooth can cause an added drain to your battery and reduce your use times.

Manually Scan for a Wi-Fi Network

1. From the Home screen, tap ➔ **Settings** ➔ **Wi-Fi**.
2. Tap **Scan**.

   All available Wi-Fi networks are displayed.

Wi-Fi Status Indicators

The following icons show your Wi-Fi connection status at a glance:

Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).

Displays when Wi-Fi is active but there is a communication issue with the target Wireless Access Point (WAP).

Displays when connected to another device using Wi-Fi Direct. For more information, refer to *"Wi-Fi Direct"* on page 147.

Wi-Fi Advanced Settings

The Advanced Wi-Fi menu allows you to set up many of your device's Wi-Fi service, including:

- Network notification when an open network is available
- Setting your Wi-Fi sleep policy

- Checking for Wi-Fi Internet service
- Automatically connecting to an AT&T Wi-Fi hotspot when detected
- Specifying your Wi-Fi frequency band
- Viewing your device's MAC and IP Address

To access the Advanced Wi-Fi menu:

1. From the Home screen, tap → **Settings** → **Wi-Fi**.
2. Press → **Advanced**.

For more information, refer to *"Advanced Wi-Fi Settings"* on page 106.

Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

Note: See your service plan for applicable charges for Wi-Fi Direct.

1. From the Home screen, tap → **Settings** → **Wi-Fi**.
2. Tap the ON/OFF slider, located to the right of the Wi-Fi Direct field, to turn Wi-Fi Direct ON ON.
3. At the bottom of the Wi-Fi screen, tap the **Wi-Fi Direct** button.
4. Repeat **steps 1 - 3** on the other device you want to connect with. The steps on a different model of phone, may be different.
5. On your phone, tap **Scan**.

   The device scans for other Wi-Fi Direct devices.
6. Once the device you want to connect to is displayed, tap on it.
7. The other device has 2 minutes to tap **Accept** for the connection to be made.
8. Once connected, the other device will show as **Connected** in your list of Wi-Fi Direct devices and the icon will display at the top of your screen.
9. To change your Device name, press → **Rename device**.
10. For additional information about Wi-Fi Direct, press → **Help**.

Sharing Information with Connected Device

To share Videos, Photos, or other information with the connected device, follow these steps:

1. View the information that you want to share. For example, if you want to share a photo, find the photo in your camera viewer or **My Files** folder, then tap the **Share, Share via,** or **Send via** option.
2. Tap the **Wi-Fi Direct** option.
3. Tap the connected device name. For example, Android_49ba.
4. The other device will receive a prompt to receive the information and must tap **Accept**.
5. The file is transferred and the other device will receive a screen notification that a Wi-Fi file has been received. The file can be found in **My Files** ➔ **All files** ➔ **sdcard0** in the **ShareViaWifi** folder.

Note: Depending on the other device model, the prompts and shared folder information may differ.

AT&T Smart Wi-Fi

With AT&T Smart Wi-Fi, you can maximize your battery performance, maximize your data, simplify access to AT&T Hot Spots and Wi-Fi networks, automate your Wi-Fi connections, and track your data use.

1. From the Home screen, tap ➔ **AT&T Smart Wi-Fi** .

Note: The first time you use the AT&T Smart Wi-Fi, you will need to download the application from the Market. For more information, refer to *"Play Store"* on page 176.

2. At the **Install** screen, tap **Ok**.
3. Sign on to your Google account if you have not already done so. For more information, refer to *"Creating a New Google Account"* on page 13.
4. Follow the on-screen instructions to download the updated application from the Play Store.
5. Read the License Agreement and tap **Accept** to continue.
6. At the Welcome screen, tap **OK**.

7. At the Initial Setting screen, tap **Yes** if you want AT&T Smart Wi-Fi to automatically connect to any hotspot that is available for public use. Otherwise, tap **No**.
8. Follow the onscreen instructions to use AT&T Wi-Fi.
9. For more information on how to use this application, go to www.att.com/smartwifi.

NFC

NFC (Near Field Communication) allows data exchange when you touch your device with another compatible device. This is used for applications such as S Beam. To activate NFC on your device, see *"NFC"* on page 112.

S Beam

When S Beam is activated, you can beam files to another NFC-capable device by holding the devices close together. You can beam images and videos from your gallery, music files from your music player, and more. For more information, refer to *"S Beam"* on page 113.

Bluetooth

About Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices. The Bluetooth communication range is usually up to approximately 30 feet.

Turning Bluetooth On and Off

To turn Bluetooth on:

1. From the Home screen, tap ➔ **Settings**.
2. Tap the ON/OFF slider, located to the right of the Bluetooth field, to turn Bluetooth ON . When active, appears within the Status area.

To turn Bluetooth off:

1. From the Home screen, tap ➔ **Settings**.
2. Tap the ON/OFF slider, located to the right of the Bluetooth field, to turn Bluetooth OFF .

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:

Displays when Bluetooth is active.

Displays when Bluetooth is connected (paired) and communicating.

Displays briefly when Bluetooth is on but is not connected to a Bluetooth device.

Bluetooth Settings

The Bluetooth settings menu allows you to set up many of the characteristics of your device's Bluetooth service, including:

- Entering or changing the name your device uses for Bluetooth communication and description
- Setting your device's visibility (or "discoverability") for other Bluetooth devices
- Displaying your device's Bluetooth address

To access the Bluetooth Settings menu:

1. From the Home screen, tap ➔ **Settings**.
2. Verify your Bluetooth is ON .
3. Tap **Bluetooth**.

To change your Bluetooth name:

1. From the Bluetooth settings page, press ➔ **Rename device**.
2. Enter a new name.
3. Tap **OK** to complete the rename process.

To make your device visible:

1. From the Bluetooth settings page, press ➔ **Visibility timeout**.
   - Making your device visible allows it to be detected by other devices for pairing and communication.
2. Select a time that you would like your device visibility to time-out.

To show received files:

- From the Bluetooth settings page, press ➔ **Received files**.

  A list of all files received from Bluetooth is displayed.

To scan for Bluetooth devices:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Scan** to search for visible external Bluetooth-compatible devices such as headsets, devices, printers, and computers.

Pairing Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your device with another Bluetooth device:

1. Verify your Bluetooth is active.
2. Tap **Scan**. Your device will display a list of discovered in-range Bluetooth devices.
3. Tap a device from the list to initiate pairing.
4. Enter the passkey or PIN code, if needed, and tap **OK**.
5. The external device will then have to also accept the connection and enter your device's PIN code.

   Once successfully paired to an external device, appears within the Status area.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

Note: Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode again.

Disconnecting a paired device

Disconnecting a paired device breaks the connection between the device and your phone, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap the paired device (from the bottom of the page).
3. Tap **OK** to confirm disconnection.

Note: Disconnections are manually done but often occur automatically if the paired device goes out of range of your phone or it is powered off.

Deleting a paired device (unpair)

Deleting a device from your list removes its "connection record" and upon reconnection would require that you re-enter all the previous pairing information.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap next to the paired device. This opens the connected device's menu options.
3. Tap **Unpair** to delete the paired device.
4. Tap **Rename** to change the name of the paired device.
5. Tap **Call audio** to enable or disable call audio from the paired device.

Sending Contacts via Bluetooth

Depending on your paired devices' settings and capabilities, you may be able to send pictures, Contact information, or other items using a Bluetooth connection.

Note: Prior to using this feature, Bluetooth must first be enabled, and the recipient's device must be visible.

1. Verify your Bluetooth is active.
2. From the Home screen, tap ➔ **Contacts** .
3. Press ➔ **Import/Export** ➔ **Send namecard via**.
4. Tap each contact that you would like to send via Bluetooth. A green checkmark will appear next to each entry you select.
5. Tap **Done**.
6. Tap **Bluetooth**.
7. Select the paired device to send the contacts to.

Note: The external Bluetooth device must be visible and communicating for the pairing to be successful.

8. A Bluetooth share notification will appear in your notifications list.

PC Connections

You can connect your device to a PC using your PC data cable using various USB connection modes.

Storage: allows you to use the onboard storage capacity of the phone to store and upload files. This option allows your computer to detect the phone as a removable storage drive.

Kies air: this application allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network.

Kies: allows you to manage music, movies and photos. You can also backup precious contacts and calendars, download apps and podcasts and automatically upgrade device firmware. Kies conveniently syncs your life across all your devices.

Note: To sync your device to your PC, it is highly recommended that you install Samsung Kies which is available at http://www.samsung.com/kies (for Windows/ Mac).

Note: If you are a Windows XP user, ensure that you have Windows XP Service Pack 3 or higher installed on your computer. Also, ensure that you have Samsung Kies 2.0 or Windows Media Player 10 or higher installed on your computer.

Connecting as a Storage Device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can also access the files directory from the memory card by using the device as a memory card reader.

Note: The file directory of the memory card displays as a removable disk, separate from the internal memory.

1. Connect the USB cable to the device and connect the cable to the computer. After a few seconds, a pop-up window displays on the PC when connected.
2. On the PC pop-up, click **Open device to view files**.
3. Copy files from the PC to the memory card.

Kies air

Kies air allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network. You can view and share call logs, videos, photos, music, bookmarks, ringtones, and even send SMS messages from your PC.

To use the Kies air, follow these steps:

1. Sign onto the same Wi-Fi network from your phone and from your PC.
2. On your phone, from the Home screen, tap ➔ **Kies air** .
3. From the Kies air homescreen, tap **Start**.

   A web URL is displayed on your phone screen.
4. From your PC, enter the URL in your web browser.
5. On your phone, an Access Request prompt is displayed. Tap **Allow** to continue.
6. Tap the **Remember for today** checkbox if you will be using Kies air with the same PC later.
7. From your PC, a security warning may be displayed asking if you want to run this application. Click **Run** to continue.
8. On your PC, the Kies air screen is displayed. On your phone, the icon appears at the top of your screen.
9. Follow the on-screen instructions to view and share information between your phone and PC.
10. To exit the Kies air application, tap **Stop** on your phone, then close out the web browser on your PC.

NFC

NFC (Near Field Communication) allows data exchange when you touch your device with another compatible device. This is used for applications such as S Beam. For information on NFC and NFC related features, see *"NFC"* on page 112.

Section 10: Applications

This section contains a description of each application that is available in the Apps Menu, its function, and how to navigate through that particular application. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided.

Tip: To open applications quickly, add the icons of frequently-used applications to one of the Home screens. For details, see *"Customizing Your Home Screen"* on page 34.
You can also add an application icon as a Primary Shortcut that will display on all Home screens. If you add an application as a primary shortcut, the application icon will not be displayed in the Apps menu. For more information, refer to *"Adding and Removing Primary Shortcuts"* on page 35.

AllShare Play

This application wirelessly synchronizes your Samsung device with your TV, streams content, and even keeps tabs on who calls or sends text messages with real-time, on-screen monitoring. Samsung's AllShare makes staying connected easy.

AllShare Play allows users to share their in-device media content with other external devices using DLNA certified™ (Digital Living Network Alliance) Devices. These external devices must also be DLNA-compliant. Wi-Fi capability can be provided to TVs via a digital multimedia streamer.

Important! You must first connect both of your communicating devices to the same Wi-Fi and be using an active/registered Samsung account prior to using this application. For more information, refer to *"Wi-Fi Settings"* on page 106. For more information, refer to *"Creating a Samsung Account"* on page 13.

Important! The Samsung account manages the access information (username/password) to several applications, such as AllShare Play, ChatON, and Media Hub.

1. From the Home screen, tap ➔ **AllShare Play** .
The AllShare Play screen is displayed.

1. If prompted, read the on-screen message about network charges and tap **OK** to continue and return to the main AllShare Play screen.
2. Tap **Sign in** to sign onto your Samsung account if you have not already done so.
3. Tap **Start** and follow the on-screen prompts.

The application contains two separate streaming media options:

- **Registered Storage**: allows you to receive and playback media stored externally (server, laptop, etc.) directly on your device by allowing you to add a Web storage service for streaming content.
- **Registered Devices**: allows you to stream/share selected multimedia content from your device to DLNA compliant device connected to the same Wireless Access Point.

Configuring AllShare Settings

The AllShare Play™ application must first be configured prior to its initial use. You must setup parameters such as connected Wi-Fi, Items to share, source server address, and external device acceptance rights.

1. From the Home screen, tap ➔ **AllShare Play** .
2. Press and then tap **Settings** and configure the following settings as desired:
   - **Registered Storage**: allows you to add a Web storage location. Without a storage service/location added, you will not be able to use AllShare Play.
   - **Registered Devices**: defaults to your phone. This indicates the source of the streaming images and videos. Use the main screen to add more external devices.
   - **Setting up web services**: allows you to set up external Web services by signing in to external sites such as Facebook, Twitter, YouTube, etc.
   - **Auto Upload photos from mobile**: allows you to setup automatic upload of images from your device to those storage locations specified within the Web storage list.
   - **Video quality settings**: allows you to setup the video quality for streamed video content.
   - **Lock AllShare Play**: allows you to restrict access to AllShare Play by requiring a user enter the currently active and associated Samsung account password. Tap **Locking AllShare Play** to activate/deactivate the feature.
   - **Language**: allows you select a display language.

- **About**: displays application information.
- **Contact Us**: allows you to contact the AllShare team via a new email from an available email account.

Setting Up Web Storage

SugarSync is a Web storage service that allows you to use up to 5GB of storage space to store your files and share them on the “Cloud”.

Note: If you are using another Web storage service, log into that service first before using AllShare Play.

1. From the Home screen, tap ➔ **AllShare Play** .
2. From the main screen, select (**Add storage**) and then tap on the media that you would like to share.
3. If this is your first time to use the service, set up a new account by tapping **Sign up** ➔ **SugarSync Sign Up**.

Note: If you already have a current Sugar Sync account, tap **Sign in**.

4. Enter in your Email address and your password.
5. Agree to the terms of service and tap **Sign up** or **Go** on your on-screen keyboard.

Important! After you enter your passwords, do not press to hide the keyboard. This action erases the password fields.

6. You can choose to download the SugerSync app or tap **Skip** to continue.
7. Once the process is successfully completed, the Web storage icon or name appears in the Web storage area of the main screen.

Sharing Media via AllShare Play to a Target Device

Important! Make sure all communicating devices are connected to the same Wi-Fi.

1. Launch AllShare on the target device (such as an Internet TV, Samsung Tablet, etc.).
2. From the Home screen, tap ➔ **AllShare Play** .
3. Tap your device name from the **Registered Devices** list.

4. Tap an available category tab (Pictures, Music, Movies, Files, or Info) and select a file.
   - Touch and hold to select multiple files.
   - A file with in the upper-left indicates it is stored remotely on a web storage location. Selecting this media causes your device to access the file currently stored on your services' servers.
5. Tap an available on-screen file, image, or video to place a green check mark alongside it.
6. Tap (**Stream to connected devices**) to begin streaming the selected files.
7. On a target device (ex: Internet TV) select the on-screen Allow button to continue.

Note: At this stage your device is requesting access to share media with the external source.

8. Confirm (**AllShare Controller enabled**) appears in the Notification area at the top of the device to indicate you are using your device as the media source.

Amazon Kindle

This application allows you to download books, magazines, and newspapers to read on your phone.

1. From the Home screen, tap ➔ **Amazon Kindle** .
2. At the Kindle display, tap **Get Kindle for Android**.
3. Sign on to your Google account. For more information, refer to *"Creating a New Google Account"* on page 13.
4. Follow the on-screen instructions to download the application from the Play Store.

AT&T Code Scanner

AT&T Code Scanner allows you to scan two-dimensional (QR and datamatrix codes) and one-dimensional (UPC and EAN) barcodes found in magazines, stores, and online.

1. From the Home screen, tap ➔ **AT&T Code Scanner** .

Note: The first time you use the AT&T Code Scanner, you will need to download the updated application from the Market. When the Market page displays, tap **Update**. For more information, refer to *"Play Store"* on page 176.

2. Sign on to your Google account if you are not already signed on. For more information, refer to *"Creating a New Google Account"* on page 13.
3. Read the Terms and Conditions and tap **Accept** to continue.
4. At the My Profile screen, tap **OK** to allow your location information to be used or tap **Don't Allow** to bypass.
5. Enter your information in the My Profile section.
6. Tap **ON** to activate your profile. This allows the application to customize your results. For example, your zip code may help to deliver a coupon for a restaurant in your neighborhood. You can toggle the activation button between ON and OFF.
7. Tap **Done**.
8. Read the tutorial and tap **Next** until you are at the end of the tutorial. Tap **Finish**.
9. Position your phone approximately 2-5 inches from the barcode. Ensure that the barcode is completely within the window. Keep your phone steady for best results.
10. The scanner will automatically scan the barcode. It may take several seconds.
11. After the scan, tap **Yes** to open the web page to view the information on the barcode that was scanned.

AT&T DriveMode

With the AT&T DriveMode application, you can set your phone to auto reply when you are driving and don't want to answer the phone. You can set auto reply to Messages, Emails, and Phone Calls. You can also allow up to five of your contacts to contact you while you are in Drive mode.

1. From the Home screen, tap ➔ **AT&T DriveMode** .

   The **AT&T DriveMode** screen is displayed.
2. Read the Terms and Conditions and Privacy Policy and tap **Accept** to continue.
3. Read the additional information and tap **Continue**.
4. Follow the on-screen instructions to set up your AT&T DriveMode options.

AT&T FamilyMap

AT&T FamilyMap provides peace of mind by being able to conveniently locate a family member from your wireless phone or PC and know that your family's location information is secure and private.

1. From the Home screen, tap ➔ **AT&T FamilyMap** .

Note: The first time you use AT&T Family Map, you will need to download the application from the Market. For more information, refer to *"Play Store"* on page 176.

2. At the AT&T FamilyMap Sign In webpage, enter your Phone Number and Password in the appropriate fields and tap **Submit**.

Note: To sign up for service, visit http://www.att.com/familymap for more information.

3. Follow the on-screen instructions.

AT&T Locker

AT&T Locker allows you to store, share, and sync all of your photos, videos, and documents in one safe, convenient place; the AT&T cloud. For more information, refer to *"AT&T Locker"* on page 78.

AT&T Navigator

AT&T Navigator provides you with access to real-time GPS-driven applications. These programs not only allow you to achieve turn-by-turn navigation, but also access local searches.

Important! You must have a data plan to use this feature.

Note: These services require the purchase of a subscription.

To launch the AT&T Navigator application, follow these steps:

1. From the Home screen, tap ➔ **AT&T Navigator** .
2. Read the **Terms of Service** and tap **Accept** to acknowledge the terms of use.

   The first time that you use AT&T Navigator, the necessary files will be downloaded. The AT&T Navigator main screen displays.
3. Tap an AT&T Navigator plan that you choose to purchase.
4. Follow the on-screen instructions.

AT&T Ready2Go

AT&T Ready2Go allows you to quickly and easily setup your phone by using the web browser on your PC. You can set-up email accounts, import contacts, set wallpaper, configure Wi-Fi and many more features. For more information, refer to *"Setting up your Phone with Ready2Go"* on page 12.

AT&T Smart Wi-Fi

With AT&T Smart Wi-Fi, you can maximize your battery performance, maximize your data, simplify access to AT&T Hot Spots and Wi-Fi networks, automate your Wi-Fi connections, and track your data use. For more information, refer to *"AT&T Smart Wi-Fi"* on page 148.

Browser

Open the web browser to start surfing the web. The browser is fully optimized and comes with advanced functionality to enhance the Internet browsing feature on your phone. For more information, refer to *"Internet"* on page 138.

Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. The Calculator also keeps a history of recent calculations.

1. From the Home screen, tap → **Calculator**.
2. Enter the first number using the on-screen numeric keys.
3. Enter the operation for your calculation by tapping the corresponding on-screen arithmetic function key.
4. Enter the second number.
5. To view the result, tap equals (=).
6. To view calculator history, tap located at the top of the calculator buttons. A history of your past calculations is displayed. Tap again to display the calculator keypad.
7. To clear the calculator history, press → **Clear history**.
8. To change the text size, press → **Text size**. Tap Small, Medium, or Large.
9. Turn your phone sideways to the landscape position to display the scientific calculator.

Calendar

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

To access the Calendar:

1. From the Home screen, tap ➔ **Calendar** .
2. Tap (**Show More**) to display these tabs:
   - **Year**: displays the Year view.
   - **Month**: displays the Month view.
   - **Week**: displays the Week view.
   - **Day**: displays the Day view.
   - **List**: displays the event list.
   - **Task**: allows you to search for tasks.
3. Tap (**Create event**) to create a new Calendar event.
4. Tap **Today** to display the current date indicated by a blue box.
5. Tap **Calendars** to select the calendar options that you want displayed.
6. Press and select one of the following options:
   - **Go to**: displays a specific date.
   - **Delete**: allows you to delete All events, All events before today, or an individual event.
   - **Search**: allows you to search within your current events.
   - **Sync**: allows you to synchronize your calendar.
   - **Settings**: displays a list of configurable settings.

Calendar Settings

1. From any Calendar view, press ➔ **Settings**.
2. Tap **Month view styles** and select an option.
3. Tap **Week view** and select a type: **Timeline** or **Analog**.
4. Tap **First day of week** and select either **Local default, Saturday, Sunday** or **Monday**.
5. Tap **Hide declined events** to activate this option. A check mark indicates selection.
6. Tap **Lock time zone** (to lock event time based on your current user-selected time zone). Select a time zone from within the **Select time zone** field.
7. Tap **Show week number** to display the week numbers along the side of the week entries.

8. Tap **Calendars** and select the type of general synchronization settings you want. A check mark indicates selection.
9. Tap **Set alerts & notifications** to adjust the event notification method. Choose from: **Alert**, **Status bar notification**, and **Off**.
10. Tap **Select ringtone** to assign a ringtone to a calendar event notification.
11. Tap **Vibration** to set the Event notification tone to vibrate.
12. Tap **Default reminder time** to assign a default time frame for event reminders.
13. Tap **Notifications while screen is off** to display notifications on the full screen while it is turned off.
14. Tap **Quick responses** to select quick responses to emailing guests.
15. Tap **Swipe with two fingers** to change the way events are displayed when swiped.

Camera

Use your 5.0 megapixel camera feature to produce photos in a JPEG format. Your phone also functions as a Camcorder to take videos.

For more information, refer to *"Camera"* on page 86.

Clock

The Clock application allows you to access alarms, view the World Clock, set a stopwatch, use a timer, and set up a Desk Clock.

Alarm

This feature allows you to set an alarm to ring at a specific time.

1. From the Home screen, tap ➔ **Clock** ➔ **Alarm** ➔ **Create alarm** . The following options display:
   - **Time**: tap (**Up**) or (**Down**) to set the new time for the alarm to sound. Tap AM or PM.
   - **Alarm repeat**: set the repeating status for the alarm by tapping one the days that you want the alarm to sound. Tap the Repeat weekly checkbox to have the alarm repeat weekly.

- **Alarm type**: set the way in which the alarm sounds when activated (Melody, Vibration, Vibration and melody, and Briefing).
- **More**: tap More to display the following options:
  - **Alarm volume**: drag the slider to adjust the alarm's volume.
  - **Alarm tone**: set the sound file that is played when the alarm is activated.
  - **Location alarm**: set the alarm to activate when you are at a specified location.
  - **Snooze**: Set a Duration (3, 5, 10, 15, or 30 Minutes) and Snooze repeat (1, 2, 3, 5, or 10 Times). Tap the ON/OFF slider to activate.
  - **Smart alarm**: track body movements and calculate the best time for sounding the alarm. Place the phone somewhere on your bed then the phone's movement sensor (also known as accelerometer) is sensitive enough to work from any part of the bed. Set the Duration and the Tone. Tap the ON/OFF slider to activate.
  - **Name**: Use a specific name for the alarm. The name will appear on the display when the alarm activates.

2. Tap **Save** to store the alarm details.

Turning Off an Alarm

- To stop an alarm when it sounds, touch and sweep the icon to the right.

Setting the Snooze Feature

- To activate the Snooze feature after an alarm sounds, touch and sweep the icon to the left. Snooze must first be set in the alarm settings. For more information, refer to *"Alarm"* on page 163.

Deleting Alarms

To delete an alarm, follow these steps:

1. From the Home screen, tap ➔ **Clock** ➔ **Alarm** ➔ ➔ **Delete**.
2. Tap the alarm or alarms you wish to delete. A green checkmark will appear next to each selection. Tap **Select all** to delete all alarms.
3. Tap **Delete**.

World Clock

World Clock allows you to view the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.

1. From the Home screen, tap ➔ **Clock** ➔ **World Clock**. The clock for your time zone is displayed.
2. Tap **Add city** to add another city to the World Clock.
3. Scroll through the list of cities to find the city you want to add, or tap the Search bar and use the keypad to enter a city to search for.
4. Tap the city you want to add. The clock for that city will display.
5. To set Daylight Savings time, press and hold a city, then tap **DST settings**.
6. Select **Automatic**, **Off**, or **1 hour**.
7. If Daylight Savings Time is selected, the sun symbol on the World Clock listing will appear orange.

Deleting a World Clock Entry

1. From the Home screen, tap ➔ **Clock** ➔ **World clock** ➔ ➔ **Delete**.
2. Tap the city clocks you wish to delete.
3. Tap **Done**.

Stopwatch

You can use this option to measure intervals of time.

1. From the Home screen, tap ➔ **Clock** ➔ **Stopwatch**.
2. Tap **Start** to start the stopwatch and tap **Lap** to mark a unit of time per lap.
3. Tap **Stop** to stop the stopwatch.
4. Tap **Restart** to continue or tap **Reset** to erase all times recorded.

Timer

You can use this option to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

1. From the Home screen, tap ➔ **Clock** ➔ **Timer**.
2. The **Minutes** field is highlighted and set to 1 minute. Use the keypad to set the number of minutes you want.
3. Tap the **Hours** field to set hours if desired. As you tap different fields, they will become highlighted.
4. Tap the **Seconds** field to set seconds.
5. Tap **Start** to begin the timer and tap **Stop** to pause the timer.

6. After stopping, tap **Restart** to continue or tap **Reset** to set the timer back to the original setting.

Desk clock

You can use the Desk clock when you have a desk dock and you want your phone to display the time, day, date, location, and weather conditions when it is docked.

1. From the Home screen, tap ➔ **Clock** ➔ **Desk clock**.

   The default Desk clock is displayed.
2. Tap to display the Desk clock in full-screen mode.
3. To make changes, tap ➔ **Settings**.
4. The following options are displayed while in full-screen mode:
   - **Calendar display**: when this is checked, the time, day, and date is displayed with the current month calendar. Tap to uncheck.
   - **Weather**: when this is activated, the location, temperature, and weather condition is displayed. Touch and slide the slider to the right to turn it on .

Contacts

You can manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group.

You can also synchronize your phone Address Book with AT&T Address Book, the network backup service.

For more information, refer to *"Contacts and Your Address Book"* on page 65.

DeviceHelp

DeviceHelp provides online information to help with your device questions.

1. From the Home screen, tap ➔ **DeviceHelp** .

   The **AT&T Device Help** screen is displayed.
2. Follow the on-screen instructions for accessing helpful information.

Downloads

The Downloads application allows you to manage all of your downloads from the Play Store and the Browser.

1. From the Home screen, tap ➔ **Downloads** .

   All of your downloads are listed.

2. Tap the **Internet Downloads** tab to see all of the downloads you have made from the Browser.
3. Tap the **Other Downloads** tab to see all other downloads.
4. Tap **Sort by size** to see your downloads sorted in size order.
5. Tap **Sort by date** to see your downloads sorted in time order.

Email

Email enables you to review and create email using various email services. You can also receive text message alerts when you receive an important email. For more information, refer to *"Using Email"* on page 100.

Facebook

You can use the Facebook app to go directly to your Facebook account rather than accessing it from the Browser.

1. From the Home screen, tap ➔ **Facebook** .
2. If you already have a facebook account, tap on the **Email** and **Password** fields and enter your information using the on-screen keyboard, then tap **Login**.

   – or –

   If you don't have a Facebook account, tap **Sign up for Facebook** and follow the on-screen instructions.

Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or contact image, and share as a picture message. For more information, refer to *"Gallery"* on page 84.

Gmail

Gmail is a web-based email service. Gmail is configured when you first set up your phone. Depending on your synchronization settings, Gmail can automatically synchronize with your Gmail account on the web. For more information, refer to *"Using Gmail"* on page 102.

Google

The Search application is the same on-screen Internet search engine that is on the Google Search Bar on your main Home screen. For more information, refer to *"Google Search Bar"* on page 29.

Google +

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+. For more information, refer to *"Google +"* on page 103.

Kies air

Kies air allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network. For more information, refer to *"Kies air"* on page 154.

Live TV

Live TV is a subscription service that allows you to watch your favorite TV shows using your handset. For more information, refer to *"Live TV"* on page 83.

Local

Local is an application that uses Google Maps and your location to help you find Restaurants, Cafes, Bars, Attractions, and other businesses. You can also add your own locations.

1. From the Home screen, tap ➔ **Local** .
2. Tap on one of the business categories to search for a particular business.

   All of the business categories that are close to you will be displayed on a map.
3. Tap on a business that you want to see the details for.
4. The business details such as address, phone, website, address, location are displayed. You can also see reviews from around the web and from Google users.

Maps

Depending on your location, you can view basic, custom, and satellite maps and local business information, including locations, contact information, and driving directions. You can also post public messages about a location and track your friends.

Important! Before using Google Maps you must have at least an active data (3G) connection. The Maps application does not cover every country or city.

Enabling a Location Source

Before you use Google Maps and find your location or search for places of interest, you must enable a location source. To enable the location source you must enable the wireless network, or enable the GPS satellites.

1. From the Home screen, tap → **Settings** → **Location services**.
2. Tap the **Use GPS satellites** field. A green checkmark will display next to the field.

Note: Selecting **Use GPS satellites** allows you to locate places of interest at the street-level. However, this also requires a clear view of the sky and uses more battery power.

To receive better GPS signals, avoid using your device in the following conditions:

- inside a building or between buildings
- in a tunnel or underground passage
- in poor weather
- around high-voltage or electromagnetic fields
- in a vehicle with tinted windows

Using Maps

1. From the Home screen, tap → **Maps**.
   A map will display with your location in the very center.
2. Press to display the following options:
   - **Clear Map**: allows you to remove all markings and layers from the map.
   - **Make available offline**: allows you to save a selected area to you My places folder where you can view it later.
   - **Settings**: the following Map options are available:
     - **Display**: allows you to display the Zoom Buttons and Scale Bar on the screen.
     - **Offline and cache**: allows you to set options to pre-fetch map tiles when not using WiFi and to clear the cache that holds the map tiles.
     - **Location settings**: allows you to manage the settings for your Background location reporting, Location history, Latitude location sharing, and Check-ins.
     - **Sign In**: allows you to sign onto your Google account. This option only displays if you have not already signed on to your Google account.

– **Labs**: this is a testing ground for experimental features that aren't ready for primetime. They may change, break or disappear at any time. Click on a Lab to enable or disable it.
– **What's New**: allows you to see the latest changes in Play Store and update your app.
– **About**: displays general information about Google maps such as Version, Platform, Locale, Total data sent, Total data received, Free memory, etc.
– **Feedback**: allows you to send feedback to Google.
– **Terms, Privacy & Notices**: displays the Terms and Conditions, Privacy Policy, o r Legal Notices information. Select the desired information from the pop-up menu.

- **Help**: displays the Google Mobile Help web page where you can receive help on Google Maps.

Memo

This feature allows you to create a memo and send it via Bluetooth, Email, Messaging, or Wi-Fi Direct.

1. From the Home screen, tap ➔ **Memo** .
2. To create a new memo, tap .
3. Type your Memo using the keypad and tap **Save**. The memo will display in the memo list.
4. To send a Memo, touch and hold the Memo in the Memo list.
5. Tap **Send**.
6. Tap **Bluetooth**, **Email**, **Messaging**, or **Wi-Fi Direct**.

Note: Email will appear as an option only after you have setup your Email account. For more information, refer to *"Using Email"* on page 100.

7. Enter the recipient information and tap **Send**.
8. To modify a Memo, tap the pencil icon in the top right corner of the Memo. Edit the Memo then tap **Save**.
9. From the Memo list, press to display the following options:
   - **Search**: allows you to search your memos for a particular word or words.
   - **Delete**: allows you to delete one or all of your memos.
   - **Send**: allows you to send one or several of your memos at one time. You can send via Bluetooth, Email, Messaging, or Wi-Fi Direct.
   - **Sort by**: allows you to sort by Date or Color.

- **Sync memo**: allows you to sync your memos Google Docs or send individual memos.
- **PIN lock**: allows you to set a PIN lock so that a PIN must be entered before reading a memo.

Messages

The AT&T Messages app brings your texts, calls, and voicemail messages together into a single conversation thread and is accessible by phone or computer. For more information, refer to *"Messages App"* on page 104.

Messaging

You can send and receive different types of messages. For more information, refer to *"Messaging"* on page 93.

Messenger

Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone. For more information, refer to *"Messenger"* on page 104.

Mobile Hotspots

This application allows you to share your phones's mobile data connection via USB or as a portable Wi-Fi hotspot. For more information, refer to *"Tethering & portable hotspot"* on page 110.

Music Player

Music Player allows you to play music files that you have stored on your phone and memory card. You can also create playlists. For more information, refer to *"Music Player"* on page 78.

My Files

My Files allows you to manage your sounds, images, videos, bluetooth files, Android files, and other memory card data in one convenient location.

1. From the Home screen, tap ➔ **My Files** .
2. Tap **All files** to see the contents of your internal SD card.
3. The following folders may display:
   - **Alarms**: this folder contains any alarm files you may have.
   - **Android**: the Android folder stores files that are used in Android applications.

- **Bluetooth**: this folder stores files sent via a Bluetooth device.
- **DCIM**: this is the default location for pictures and videos taken by the device. Tap **DCIM** ➔ **Camera** to view the picture or video files. For more information, refer to *"Viewing Pictures"* on page 84. Also, see *"Viewing Videos"* on page 85.
- **Download**: this folder contains downloads you have made.
- **Movies**: this folder contains your Video and Movie files.
- **Music**: this folder contains your Music files.
- **Notifications**: this folder contains all of the notifications you have received.
- **Pictures**: this folder contains your photos.
- **Podcasts**: this folder contains all of your podcasts.
- **Ringtones**: this folder contains any ringtones you have purchased.

4. If you have an external SD card inserted, tap **My Files** at the top left corner of the screen.
5. Tap **extSdcard** to see the contents of your external SD card (memory card).

Note: Different folders may appear depending on how your phone is configured.

myAT&T

The myAT&T application allows you to manage your own AT&T account. You can review and pay your bill, check minutes and data usage, upgrade to a new device, or change your rate plan.

Note: The first time you use myAT&T, you will need to download the updated application from the Play Store. When the Play Store page displays, tap **Update**. For more information, refer to *"Play Store"* on page 176.

Initial Setup

1. From the Home screen, tap ➔ **myAT&T** .
2. Sign into your Google Account. If you haven't set up an account, see *"Creating a New Google Account"* on page 13.
3. After signing into your Google Account, the Play Store displays the **myAT&T** application. Tap the application.
4. Tap **Update**.
5. Follow the on-screen instructions.

Using myAT&T

1. From the Home screen, tap ➔ **myAT&T** .

The **myAT&T** page is displayed.

2. Read the Terms and Conditions and tap **Accept** to continue.
3. Enter your **User ID** and **Password** using the onscreen keypad, then tap **Login**.
4. Follow the on-screen instructions.

Navigation

Navigation is an internet-connected GPS navigation system with voice guidance. You can type or speak your destination.

Note: For voice-guided navigation, you need to install text-to-speech support from the Play Store.

To receive better GPS signals, avoid using your device in the following conditions:

- inside a building or between buildings
- in a tunnel or underground passage
- in poor weather
- around high-voltage or electromagnetic fields
- in a vehicle with tinted windows

Launching Navigation

1. From the Home screen, tap → **Navigation** .
2. Read the Navigation information page and tap **Accept** to continue or **Don't accept** to exit.
3. Select one of the following options:
   - **Speak destination**: allows you to speak your destination.
   - **Type destination**: allows you to use the keypad to enter your destination.
   - **Go home**: takes you to your home address. The first time you are prompted to enter it.
   - **Map**: takes you to the map location of your present location using GPS.
   - **Recent Destinations**: allows you to access information on previous destinations you have used. This option only appears after you have entered one or more destinations.

Navigation Options

- The map displays with your location in the center. Press for the following options:
  - **Set Destination**: displays the Choose Destination screen where you can speak or type your destination.

- **Search**: allows you to speak or type a destination, place, or service to search for.
- **Layers**: are additional items that you can have displayed on your map. They include:
  - **Traffic view**: displays real-time traffic conditions so you can plan the fastest route.
  - **Satellite**: allows you to see you the map as a satellite image.
  - **Parking**: allows you to see registered parking areas.
  - **Gas stations**: allows you to see registered gas stations.
  - **ATMs & banks**: allows you to see registered ATMs and Banks.
  - **Restaurants**: allows you to see registered restaurants.
- **Settings**: includes the following options:
  - **Screen Dimming**: set this option to dim the screen between instructions in order to conserve battery power.
  - **Terms, privacy & notices**: displays Terms and Conditions for Google mobile products, the Google Privacy Policy, and Google legal notices.
- **Exit Navigation**: exits the Navigation application and returns you to the Application Menu screen.
- **Help**: takes you to the Google Mobile Help web page.

Obtaining Driving Directions

Your phone's built-in GPS hardware allows you to get real-time driving directions to selected locations or establishments based on your current location.

Using a Physical Address

1. From the Home screen, tap → **Navigation** .
2. Tap either **Speak Destination** or **Type Destination**.
3. If typing in the address, enter the address, City, and State using the keypad. As you type, possible addresses will be displayed. Tap on one when you see the address you want.

   The route will be displayed.
4. If speaking the address, the Voice guidance screen is displayed. For voice-guided navigation you need to install text-to-speech support from the Play Store. Tap **Install** to install the application or tap **Skip** to exit.

Note: You will need to be signed on to your Google account before downloading applications from the Play Store. For more information, refer to *"Creating a New Google Account"* on page 13.

5. As you drive the route display will be updated and you will receive voice-guided navigation directions.

Phone

The Phone application allows you to access the dialer keypad, call logs, and favorites. For more information, refer to *"Call Functions"* on page 43.

Play Books

With Google Play Books, you can find more than 3 million free e-books and hundreds of thousands more to buy in the eBookstore.

1. From the Home screen, tap → **Play Books** .
2. Log on to your Google account. For more information, refer to *"Creating a New Google Account"* on page 13.
3. Follow the on-screen instructions for using the Play Books application.

Play Magazines

With Google Play Magazines, you can subscribe to your favorite magazines and have them available to read on your phone at any time or any place.

1. From the Home screen, tap → **Play Magazines** .
2. Log on to your Google account if you have not already done so. For more information, refer to *"Creating a New Google Account"* on page 13.
3. At the Welcome! display, tap the shop icon to browse the full catalog.
4. Read the Google Play Terms of Service and tap **Accept**.
5. Sweep the screen to the left or right to view Categories, Featured, Top Selling, and New Arrivals.
6. Tap a magazine to see more information and subscribe.
7. Follow the on-screen instructions to subscribe to a magazine.

Play Movies & TV

With Google Play Movies & TV, you can rent thousands of different movies and television shows. You can watch instantly, or download your movie or show for offline viewing at a later time. For more information, refer to *"Play Movies & TV"* on page 83.

Play Music

With Google Play Music, you can play music that you have added to your music file as well as any music you copied from your PC. While offline, you can listen to music you have copied from your PC. For more information, refer to *"Google Play Music"* on page 81.

Play Store

Play Store provides access to downloadable applications and games to install on your phone. Play Store also allows you to provide feedback and comments about an application, or flag an application that might be incompatible with your phone.

Before using the Play Store you must have a Google Account. For more information, refer to *"Using Gmail"* on page 102.

1. From the main Home screen, tap **Play Store** .
2. Sign in to your Google account.
3. The first time you sign in, the Play Store Terms of Service will be displayed. Tap **Accept** to continue or **Decline** to exit.
4. Tap **Apps**, **Games**, or **AT&T** to download or purchase games or applications. You can also download updates to existing applications.
5. Follow on the on-screen instructions.

S Voice

Use your voice to perform operations that you would normally have to do by hand such as dialing a phone number, texting a message, playing music, etc.

1. From the Home screen, tap → **S Voice** .
2. Read the Samsung Disclaimer. Tap **Confirm** to continue.
3. Read the Vlingo Terms of Service. To continue, tap **Agree**.
4. Read the information on the **About S Voice** screen. Tap **Next**.
5. Read the information on the **Say what you want** screen. Tap **Next**.
6. Read the information on the **Wake up S Voice** screen. Tap **Next**.
7. Read the information on the **Edit what you said** screen. Tap **Next**.
8. Read more information from the Help screen options. Tap **Finish**.
9. At the S Voice screen, say "Hi Galaxy" to wake up S voice.

10. Speak into the phone and follow the on-screen instructions.

Settings

This widget navigates to the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone. For more information, refer to *"Changing Your Settings"* on page 106.

Talk

Google Talk is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts. For more information, refer to *"Google Talk"* on page 103.

Video Player

The Video Player application plays video files stored on your memory card. For more information, refer to *"Video Player"* on page 82.

Voice Recorder

The Voice Recorder allows you to record an audio file up to one minute long and then immediately share it using AllShare Play, Messaging, Gmail, or via Bluetooth. Recording time will vary based on the available memory within the phone.

1. From the Home screen, tap ➔ **Voice Recorder** .
2. To start recording, tap **Record** and speak into the microphone.
3. During the recording process you can either tap **Stop** to stop and save the recording or **Pause** to temporarily halt the recording. After pausing, tap **Record** to resume recording. Once the audio recording has stopped, the message is automatically saved.
4. Press to display the following options:
   - **Share via**: allows you to share your recording using Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.
   - **Delete**: allows you to delete 1 or more voice recordings. Tap the recordings to delete and tap **Delete**.
   - **Settings**: the following settings are available:

– **Storage**: allows you to choose where your recordings will be saved. Select between Phone or memory card.
– **Recording quality**: allows you to set the recording quality to High or Normal.
– **Limit for MMS**: allows you to select On or Off. If you Limit for MMS by selecting On, you will be assured that the recording can be sent in a message.
– **Contextual filename**: (requires GPS tagging) allows you to adjust the filename based on contextual information such as your current GPS location.
– **Default name**: allows you to choose the name prefix for your recordings. For example, if your Default name is Voice, your recordings would be named Voice 001, Voice 002, Voice 003, etc.

- **End**: allows you to close the application.

Voice Search

The Google Voice Search application allows you to search the web using only your voice.

1. From the Home screen, tap ➔ **Voice Search** .
2. When the Google Voice Search screen displays, speak the word or words that you would like to search for on the internet.
3. If the timer expires and the microphone icon changes from red to gray, tap the microphone icon and speak the word or words that you would like to search for on the internet.

   Results are displayed on your phone.
4. The following options are available at the bottom of your screen:
   - **Web**: After selecting a different option, tap Web to return to the original search results.
   - **Images**: Displays images for your search.
   - **Places**: Displays places and businesses in your local area pertaining to your search.
   - **More**: After tapping More, sweep your screen to the left to see additional options such as News, Shopping, Videos, Blogs, Discussions, and Books.

YouTube

YouTube™ is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

Note: YouTube is a data-intensive feature. It is recommended that you upgrade to a large data plan to avoid additional data charges.

1. From the Home screen, tap ➔ **YouTube** .
2. Tap the search field to search for specific videos, scroll down to browse through the main page thumbnails, or scroll to the bottom to explore additional options.
3. To view a video, tap an available preview thumbnail or tap the title link.

To watch a high quality video:

- Press and then tap **Settings** ➔ **General** ➔ **High quality on mobile**.

To configure YouTube Settings:

- Press and then tap **Settings** and configure the following parameters:
  - **General**
    - **High quality on mobile**: Enable this option start all videos in high quality mode while you are connected to a mobile network.
    - **Caption font size**: Set the font size used by on-screen captions. Choose Small, Medium, Large, or Huge.
    - **Uploads**: Specifiy network preferences for uploads.
    - **Content localization**: Prioritize channels and videos from a specific country or region.
  - **Search**
    - **Clear search history**: Clear previous YouTube searches from showing up in the YouTube search box.
    - **Never remember history**: Enable this option to prevent the storing of YouTube search history.
    - **SafeSearch filtering**: Configure block settings for videos containing restricted content. This option blocks these videos from appearing within your search results. Choose Don't filter, Moderate, or Strict blocking.
  - **Preloading**

– **Preload subscriptions** Preload (or go get videos while on Wi-Fi and charging) your subscription videos.
– **Preload watch later** Enable the preload function on selected videos so you can watch them later. Read the data usage information and tap **OK** to accept the terms.

Note: Preloading YouTube videos will use some of your device's storage space and may result in additional charges if your Wi-Fi plan is not unlimited.

- **About**
  – **Help**: Obtain answers to most YouTube questions.
  – **Feedback**: Provide user feedback to YouTube.
  – **Google Mobile Terms of Service**: Display the Google Mobile Terms of Service.
  – **YouTube Terms of Service**: Display the YouTube terms of Service.
  – **Google Mobile Privacy Policy**: Display the Google Mobile Privacy Policy.
  – **YouTube Privacy Policy**: Display the YouTube Privacy Policy.
  – **Open source licenses**: Display the Open source licenses
  – **App version**: Display the software version for the current YouTube application.

Note: It is not necessary to sign in to the YouTube site to view content. However, if you wish to sign in to access additional options, access the page via the Web browser and tap **Sign in** at the top right corner, enter your YouTube or Google username and password, and tap **Sign in**.

YPmobile

The Yellowpages Mobile application provides quick and ready access to businesses, map locations, and storage of your favorite searches. This application allows you to tap into local businesses, locations, and events, connecting you to your search in real-time.

Note: The first time you use YP, you will need to download the updated application from the Play Store. When the Play Store page displays, tap **Update** or **Install** then follow the onscreen instructions. For more information, refer to *"Play Store"* on page 176.

1. From the Home screen, tap ➔ **YPmobile** .

2. Sign on to your Google account if you have not already done so. For more information, refer to *"Creating a New Google Account"* on page 13.
3. Read the End-User License Agreement (EULA) and tap **Accept** to continue.
4. Your location is found using GPS. Tap **OK** to allow YPmobile to use your current location.
5. Tap the **Find a business nearby!** field.
6. Enter information in the **What:** and **Near:** fields and tap **Search**.

   – or –

   Tap the microphone icon to enter your information by voice.
7. Results will be displayed.
8. Tap to see the locations marked with pins on the map.
9. Pinch the map screen inwards to zoom out or pinch it outwards to zoom in.
10. Tap a pin to read information about the location.
11. Tap to display additional options.

Section 11: Health and Safety Information

This section outlines the safety precautions associated with using your phone. The terms “mobile device” or “cell phone” are used in this section to refer to your phone. **Read this information before using your mobile device**.

Exposure to Radio Frequency (RF) Signals

The U.S. Food and Drug Administration (FDA) has published information for consumers relating to Radio Frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

Do cell phones pose a health hazard?

Many people are concerned that cell phone radiation will cause cancer or other serious health hazards. The weight of scientific evidence has not linked cell phones with any health problems.

Cell phones emit low levels of Radio Frequency (RF) energy. Over the past 15 years, scientists have conducted hundreds of studies looking at the biological effects of the radio frequency energy emitted by cell phones. While some researchers have reported biological changes associated with RF energy, these studies have failed to be replicated. The majority of studies published have failed to show an association between exposure to radio frequency from a cell phone and health problems.

The low levels of RF cell phones emit while in use are in the microwave frequency range. They also emit RF at substantially reduced time intervals when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects.

The biological effects of radio frequency energy should not be confused with the effects from other types of electromagnetic energy.

Very high levels of electromagnetic energy, such as is found in X-rays and gamma rays, can ionize biological tissues. Ionization is a process where electrons are stripped away from their normal locations in atoms and molecules. It can permanently damage biological tissues including DNA, the genetic material.

The energy levels associated with radio frequency energy, including both radio waves and microwaves, are not great enough to cause ionization of atoms and molecules. Therefore, RF energy is a type of non-ionizing radiation. Other types of non-ionizing radiation include visible light, infrared radiation (heat), and other forms of electromagnetic radiation with relatively low frequencies.

While RF energy does not ionize particles, large amounts can increase body temperatures and cause tissue damage. Two areas of the body, the eyes and the testes, are particularly vulnerable to RF heating because there is relatively little blood flow in them to carry away excess heat.

Research Results to Date: Is there a connection between RF and certain health problems?

The results of most studies conducted to date say no. In addition, attempts to replicate and confirm the few studies that have shown a connection have failed.

The scientific community at large therefore believes that the weight of scientific evidence does not show an association between exposure to Radio Frequency (RF) from cell phones and adverse health outcomes. Still the scientific community has supported additional research to address gaps in knowledge. Some of these studies are described below.

Interphone Study

Interphone is a large international study designed to determine whether cell phones increase the risk of head and neck cancer. A report published in the International Journal of Epidemiology (June, 2010) compared cell phone usage for more than 5,000 people with brain tumors (glioma and meningioma) and a similar number of healthy controls.

Results of this study did NOT show that cell phones caused brain cancer. In this study, most people had no increased risk of brain cancer from using cell phones. For people with the heaviest use of cell phones (an average of more than ½ hour per day, every day, for over 10 years) the study suggested a slight increase in brain cancer. However, the authors determined that biases and errors prevented any conclusions being drawn from this data. Additional information about Interphone can be found at http://www.iarc.fr/en/media-centre/pr/2010/pdfs/pr200_E.pdf.

Interphone is the largest cell phone study to date, but it did not answer all questions about cell phone safety. Additional research is being conducted around the world, and the FDA continues to monitor developments in this field.

International Cohort Study on Mobile Phone Users (COSMOS)

The COSMOS study aims to conduct long-term health monitoring of a large group of people to determine if there are any health issues linked to long-term exposure to radio frequency energy from cell phone use. The COSMOS study will follow approximately 300,000 adult cell phone users in Europe for 20 to 30 years. Additional information about the COSMOS study can be found at http://www.ukcosmos.org/index.html.

Risk of Brain Cancer from Exposure to Radio Frequency Fields in Childhood and Adolescence (MOBI-KIDS)

MOBI-KIDS is an international study investigating the relationship between exposure to radio frequency energy from communication technologies including cell phones and brain cancer in young people. This is an international multi-center study involving 14 European and non-European countries. Additional information about MOBI-KIDS can be found at http://www.creal.cat/programes-recerca/en_projectes-creal/view.php?ID=39.

Surveillance, Epidemiology, and End Results (SEER) Program of the National Cancer Institute

The National Cancer Institute (NCI) actively follows cancer statistics in the United States to detect any change in rates of new cases for brain cancer. If cell phones play a role in risk for brain cancer, rates should go up, because heavy cell phone use has been common for quite some time in the U.S. Between 1987 and 2005, the overall age-adjusted incidence of brain cancer did not increase. Additional information about SEER can be found at http://seer.cancer.gov/.

Cell Phone Industry Actions

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the cell phone industry to take a number of steps, including the following:

- Support-needed research on possible biological effects of RF for the type of signal emitted by cell phones;
- Design cell phones in a way that minimizes any RF exposure to the user; and
- Cooperate in providing users of cell phones with the current information on cell phone use and human health concerns.

The FDA also is working with voluntary standard-setting bodies such as the Institute of Electrical and Electronics Engineers (IEEE), the International Commission on Non-Ionizing Radiation Protection (ICNIRP), and others to assure that safety standards continue to adequately protect the public.

Reducing Exposure: Hands-Free Kits and Other Accessories

Steps to Reduce Exposure to Radio Frequency Energy

If there is a risk from being exposed to radio frequency energy (RF) from cell phones - and at this point we do not know that there is - it is probably very small. But, if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your RF exposure.

- Reduce the amount of time spent using your cell phone;
- Use speaker mode or a headset to place more distance between your head and the cell phone.

Hands-Free Kits

Hands-free kits may include audio or Bluetooth® headsets and various types of body-worn accessories such as belt-clips and holsters. Combinations of these can be used to reduce RF energy absorption from cell phones.

Headsets can substantially reduce exposure because the phone is held away from the head in the user's hand or in approved body-worn accessories. Cell phones marketed in the U.S. are required to meet RF exposure compliance requirements when used against the head and against the body.

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used for convenience and comfort. They are also required by law in many states if you want to use your phone while driving.

Cell Phone Accessories that Claim to Shield the Head from RF Radiation

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that accessories which claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone.

Studies have shown that these products generally do not work as advertised. Unlike “hands-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption.

Children and Cell Phones

The scientific evidence does not show a danger to any users of cell phones from RF exposure, including children and teenagers. The steps adults can take to reduce RF exposure apply to children and teenagers as well.

- Reduce the amount of time spent on the cell phone;
- Use speaker mode or a headset to place more distance between the head and the cell phone.

Some groups sponsored by other national governments have advised that children be discouraged from using cell phones at all. For example, The Stewart Report from the United Kingdom made such a recommendation in December 2000. In this report, a group of independent experts noted that no evidence exists that using a cell phone causes brain tumors or other ill effects. Their recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (updated 10/1/2010):

- FCC RF Safety Program: http://www.fcc.gov/oet/rfsafety/.
- Environmental Protection Agency (EPA): http://www.epa.gov/radtown/wireless-tech.html.
- Occupational Safety and Health Administration (OSHA): http://www.osha.gov/SLTC/radiofrequencyradiation/. (Note: This web address is case sensitive.)
- National Institute for Occupational Safety and Health (NIOSH): http://www.cdc.gov/niosh/.
- World Health Organization (WHO): http://www.who.int/peh-emf/en/.
- International Commission on Non-Ionizing Radiation Protection: http://www.icnirp.de.
- Health Protection Agency: http://www.hpa.org.uk/Topics/Radiation/.

- US Food and Drug Administration: http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm.

Specific Absorption Rate (SAR) Certification Information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government.

These FCC RF exposure limits are derived from the recommendations of two expert organizations: the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The RF exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC SAR limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum reported value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the SAR limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body-worn operation, this phone has been tested and meets

FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the mobile device a minimum of 1.0 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines. The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

- Head: 1.42 W/kg.
- Body: 1.11 W/kg.

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID: A3LSGHI547

More information on the phone's SAR can be found from the following FCC website:

http://www.fcc.gov/oet/ea/.

SAR information on this and other model phones can be accessed online on the FCC's website through http://transition.fcc.gov/oet/rfsafety/sar.html. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional SAR information can also be obtained at http://www.fcc.gov/encyclopedia/specific-absorption-rate-sar-cellular-telephones.

FCC Part 15 Information to User

Pursuant to part 15.21 of the FCC Rules, you are cautioned that changes or modifications not expressly approved by Samsung could void your authority to operate the device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and

can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Smart Practices While Driving

On the Road - Off the Phone

The primary responsibility of every driver is the safe operation of his or her vehicle.

Responsible drivers understand that no secondary task should be performed while driving whether it be eating, drinking, talking to passengers, or talking on a mobile phone - unless the driver has assessed the driving conditions and is confident that the secondary task will not interfere with their primary responsibility. **Do not engage in any activity while driving a moving vehicle which may cause you to take your eyes off the road or become so absorbed in the activity that your ability to concentrate on the act of driving becomes impaired**. Samsung is committed to promoting responsible driving and giving drivers the tools they need to understand and address distractions.

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. For example, only hands-free use may be permitted in certain areas.

Before answering calls, consider your circumstances. Let the call go to voicemail when driving conditions require. Remember, driving comes first, not the call!

If you consider a call necessary and appropriate, follow these tips:

- Use a hands-free device;
- Secure your phone within easy reach;
- Place calls when you are not moving;
- Plan calls when your car will be stationary;
- Do not engage in stressful or emotional conversations;

- Let the person with whom you are speaking know that you are driving and will suspend the call if necessary;
- Do not take notes or look up phone numbers while driving;

Notice regarding legal restrictions on mounting this device in an automobile:

Laws in some states may prohibit mounting this device on or near the windshield of an automobile. In other states, the law may permit mounting this device only in specific locations in the automobile. Be sure to consult the state and local laws or ordinances where you drive before mounting this device in an automobile. Failure to comply with these restrictions could result in fines, penalties, or other damages.

Never mount this device in a manner that will obstruct the driver's clear view of the street and traffic.

Never use wireless data services such as text messaging, Web browsing, or e-mail while operating a vehicle.

Never watch videos, such as a movie or clip, or play video games while operating a vehicle.

For more information, go to http://www.ctia.org.

Battery Use and Safety

Important! Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of batteries and, particularly, from the continued use of damaged batteries.

- **Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery**. Do not put a high degree of pressure on the battery. This can cause leakage or an internal short-circuit, resulting in overheating.
- **Do not let the phone or battery come in contact with liquids.** Liquids can get into the phone's circuits, leading to corrosion. Even when the phone appears to be dry and appears to operate normally, the circuitry could slowly corrode and pose a safety hazard. If the phone and/or battery get wet, have them checked by your service provider or contact Samsung, even if they appear to be working properly.

- **Do not place your battery in or near a heat source**. Excessive heating can damage the phone or the battery and could cause the phone or the battery to explode. Do not dry a wet or damp battery with an appliance or heat source such as a microwave oven, hair dryer, iron, or radiator. Avoid leaving your phone in your car in high temperatures.
- **Do not dispose of the phone or the battery in a fire**. The phone or the battery may explode when overheated.
- **Do not handle a damaged or leaking battery**. Do not let leaking battery fluid come in contact with your eyes, skin or clothing. For safe disposal options, contact your nearest Samsung-authorized service center.
- **Avoid dropping the cell phone**. Dropping the phone or the battery, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- **Never use any charger or battery that is damaged in any way**.
- **Do not allow the battery to touch metal objects**. Accidental short-circuiting can occur when a metallic object (coin, key, jewelry, clip, or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

Important! Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers which are specifically designed for your phone.

WARNING!

Use of a non-Samsung-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard. Samsung's warranty does not cover damage to the phone caused by non-Samsung-approved batteries and/or chargers.

- **Do not use incompatible cell phone batteries and chargers**. Some websites and second-hand dealers not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier-recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- **Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, or leakage, leading to serious injuries, damages to your phone, or other serious hazard**.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile devices and genuine Samsung accessories.

Proper disposal of your mobile device and its battery is not only important for safety, it benefits the environment. Batteries must be recycled or disposed of properly.

Recycling programs for your mobile device, batteries, and accessories may not be available in your area.

We've made it easy for you to recycle your old Samsung mobile device by working with respected take-back companies in every state in the country.

Drop It Off

You can drop off your Samsung-branded mobile device and batteries for recycling at one of our numerous Samsung Recycling Direct (SM) locations. A list of these locations may be found at: http://pages.samsung.com/us/recyclingdirect/usactivities_environment_samsungrecyclingdirect_locations.jsp.

Samsung-branded devices and batteries will be accepted at these locations for no fee.

Consumers may also recycle their used mobile device or batteries at many retail or carrier-provided locations where mobile devices and batteries are sold. Additional information regarding specific locations may be found at: http://www.epa.gov/epawaste/partnerships/plugin/cellphone/index.htm or at http://www.call2recycle.org/.

Mail It In

The Samsung Mobile Take-Back Program will provide Samsung customers with a free recycling mailing label. Just go to http://www.samsung.com/us/aboutsamsung/citizenship/usactivities_environment_samsungrecyclingdirect.html?INT=STA_recyle_your_phone_page and follow the instructions to print out a free pre-paid postage label and then send your old mobile device or battery to the address listed, via U.S. Mail, for recycling.

Dispose of unwanted electronics through an approved recycler.

To find the nearest recycling location, go to our website:

www.samsung.com/recyclingdirect

Or call, (877) 278-0799.

Follow local regulations regarding disposal of mobile devices and batteries

Dispose of your mobile device and batteries in accordance with local regulations. In some areas, the disposal of these items in household or business trash may be prohibited. Help us protect the environment - recycle!

Warning! Never dispose of batteries in a fire because they may explode.

UL Certified Travel Charger

The Travel Charger for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines:

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Display / Touch-Screen

Please note the following information when using your mobile device:

WARNING REGARDING DISPLAY

The display on your mobile device is made of glass or acrylic and could break if your mobile device is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

WARRANTY DISCLAIMER: PROPER USE OF A TOUCH-SCREEN MOBILE DEVICE

If your mobile device has a touch-screen display, please note that a touch-screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch-screen may damage the tempered glass surface and void the warranty. For more information, please refer to the “Standard Limited Warranty”.

GPS

Certain Samsung mobile devices can use a Global Positioning System (GPS) signal for location based applications. A GPS uses satellites controlled by the U.S. Government that are subject to changes implemented in accordance with the Department of Defense policy and the 2008 Federal Radio navigation Plan (FRP). Changes may affect the performance of location-based technology on your mobile device.

Even with GPS, when you make an emergency call:

- Always tell the emergency responder your location to the best of your ability; and

- Remain on the mobile device for as long as the emergency responder instructs you.

Navigation

Maps, directions, and other navigation-data, including data relating to your current location, may contain inaccurate or incomplete data, and circumstances can and do change over time. In some areas, complete information may not be available. **Therefore, you should always visually confirm that the navigational instructions are consistent with what you see before following them. All users should pay attention to road conditions, closures, traffic, and all other factors that may impact safe driving or walking. Always obey posted road signs.**

Emergency Calls

This mobile device, like any wireless mobile device, operates using radio signals, wireless and landline networks, as well as user-programmed functions, which cannot guarantee connection in all conditions, areas, or circumstances.

Therefore, you should never rely solely on any wireless mobile device for essential communications (medical emergencies, for example). Before traveling in remote or underdeveloped areas, plan an alternate method of contacting emergency services personnel. Remember, to make or receive any calls, the mobile device must be switched on and in a service area with adequate signal strength.

Emergency calls may not be possible on all wireless mobile device networks or when certain network services and/or mobile device features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. From the Home screen, tap . The dialer is displayed.
3. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
4. Tap the key.

If certain features are in use (call blocking, for example), you may first need to deactivate those features before you can make an emergency call. Consult your User Manual and your local cellular service provider. When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your mobile device

may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Care and Maintenance

Your mobile device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years:

Keep your Samsung Mobile Device away from:

Liquids of any kind

Keep the mobile device dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits. If the mobile device does get wet, do not accelerate drying with the use of an oven, microwave, or dryer, because this may damage the mobile device and could cause a fire or explosion.

Do not use the mobile device with a wet hand. Doing so may cause an electric shock to you or damage to the mobile device.

Extreme heat or cold

Avoid temperatures below 0°C / 32°F or above 45°C / 113°F.

Microwaves

Do not try to dry your mobile device in a microwave oven. Doing so may cause a fire or explosion.

Dust and dirt

Do not expose your mobile device to dust, dirt, or sand.

Cleaning solutions

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the mobile device. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

Shock or vibration

Do not drop, knock, or shake the mobile device. Rough handling can break internal circuit boards.

Paint

Do not paint the mobile device. Paint can clog the device's moving parts or ventilation openings and prevent proper operation.

Responsible Listening

Caution! Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cell phones, at high volume settings for long durations may lead to permanent noise-induced hearing loss.

This includes the use of headphones (including headsets, earbuds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing. Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings, and equipment.

You should follow some common sense recommendations when using any portable audio device:

- Always turn the volume down before plugging the earphones into an audio source.
- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- Be aware that you can adapt to higher volume settings over time, not realizing that the higher volume may be harmful to your hearing.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.

- Limit the amount of time you listen. As the volume increases, less time is required before you hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech, or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300
Reston, VA 20190

Voice: (800) 222-2336
Email: info@audiology.org

Internet:
http://www.audiology.org/Pages/default.aspx

National Institute on Deafness and Other Communication Disorders

National Institutes of Health
31 Center Drive, MSC 2320
Bethesda, MD 20892-2320

Email: nidcdinfo@nih.gov

Internet:
http://www.nidcd.nih.gov/

National Institute for Occupational Safety and Health (NIOSH)

395 E Street, S.W., Suite 9200
Patriots Plaza Building
Washington, DC 20201

Voice: 1-800-35-NIOSH
(1-800-356-4674)
1-800-CDC-INFO (1-800-232-4636)
Outside the U.S. 513-533-8328

Email: cdcinfo@cdc.gov

Internet:
http://www.cdc.gov/niosh/topics/noise/default.html

1-888-232-6348 TTY

Operating Environment

Remember to follow any special regulations in force in any area, and always switch your mobile device off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the mobile device or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

Using Your Mobile Device Near Other Electronic Devices

Most modern electronic equipment is shielded from Radio Frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless mobile device. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless mobile device and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the mobile device more than six (6) inches from their implantable medical device when the mobile device is turned ON;
- Should not carry the mobile device in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the mobile device OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless mobile device with an implantable medical device, consult your health care provider.

For more information see: http://www.fcc.gov/oet/rfsafety/rf-faqs.html#.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your mobile device off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle before using your mobile device in a motor vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your mobile device off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your mobile device off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch the mobile device off while at a refueling point (service station).

Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

When your Device is Wet

Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service center.

FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices

The U.S. Federal Communications Commission (FCC) has established requirements for digital wireless mobile devices to be compatible with hearing aids and other assistive hearing devices.

When individuals employing some assistive hearing devices (hearing aids and cochlear implants) use wireless mobile devices, they may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and mobile devices also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless mobile devices to assist hearing device users find mobile devices that may be compatible with their hearing devices. Not all mobile devices have been rated. Mobile devices that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated mobile device successfully. Trying out the mobile device with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Wireless mobile devices rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. M4 is the better/higher of the two ratings. M-ratings refer to enabling acoustic coupling with hearing aids that do not operate in telecoil mode.

T-Ratings: Mobile devices rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. T4 is the better/higher of the two ratings. T-ratings refer to enabling inductive coupling with hearing aids operating in telecoil mode.

Hearing devices may also be rated. Your hearing aid manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise.

Under the current industry standard, American National Standards Institute (ANSI) C63.19, the hearing aid and wireless mobile device rating values are added together to indicate how usable they are together. For example, if a

hearing aid meets the M2 level rating and the wireless mobile device meets the M3 level rating, the sum of the two values equals M5.

Under the standard, this should provide the hearing aid user with normal use while using the hearing aid with the particular wireless mobile device. A sum of 6 or more would indicate excellent performance.

However, these are not guarantees that all users will be satisfied. T ratings work similarly.

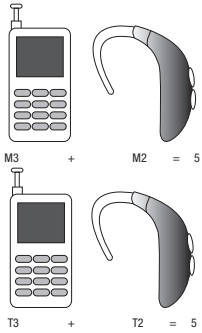

The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

HAC for Newer Technologies

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids.

It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Restricting Children's Access to Your Mobile Device

Your mobile device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the mobile device, or make calls that increase your mobile device bill.

Keep the mobile device and all its parts and accessories out of the reach of small children.

FCC Notice and Cautions

FCC Notice

The mobile device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the mobile device if such interference cannot be eliminated. Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association.

Cautions

Any changes or modifications to your mobile device not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and void the mobile device warranty if said accessories cause damage or a defect to the mobile device.

Although your mobile device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the mobile device or install the mobile device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Check regularly that all wireless mobile device equipment in your vehicle is mounted and operating properly.
- When using a headset in dry environments, static electricity can build up in the headset and cause a small quick static electrical shock. To minimize the risk of electrostatic discharge from the headset avoid using the headset in extremely dry environments or touch a grounded unpainted metal object to discharge static electricity before inserting the headset.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the mobile device, its parts, or accessories.

- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment near or in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your mobile device off before boarding an aircraft. The use of wireless mobile devices in aircraft is illegal and may be dangerous to the aircraft's operation. Check with appropriate authorities before using any function of a mobile device while on an aircraft.
- Failure to observe these instructions may lead to the suspension or denial of cell phone services to the offender, or legal action, or both.
- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing games for extended periods. If you feel any discomfort, stop using the device immediately.
- Reduce risk of repetitive motion injuries. When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop use and see a physician.
- If your device has a camera flash or light, do not use the flash or light close to the eyes of people or pets. [122011]

Section 12: Warranty Information

Standard Limited Warranty

What is covered and for how long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants that SAMSUNG's handsets and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase by the first consumer purchaser and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Case/Pouch/Holster	90 Days
Other Phone Accessories	1 Year

What is not covered?

This Limited Warranty is conditioned upon proper use of the Product.

This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to liquid, moisture, dampness, sand or dirt, neglect, or unusual physical, electrical or electromechanical stress; (b) scratches, dents and cosmetic damage, unless caused by SAMSUNG; (c) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (d) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (e) ordinary wear and tear; (f) defects or damage resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (g) defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (h) defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source; (i) defects or damage resulting from cellular signal reception

or transmission, or viruses or other software problems introduced into the Product; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's obligations?

During the applicable warranty period, provided the Product is returned in accordance with the terms of this Limited Warranty, SAMSUNG will repair or replace the Product, at SAMSUNG's sole option, without charge. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product, or may replace the Product with a rebuilt, reconditioned or new Product.

Repaired/replaced cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Products will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for ninety (90) days, whichever is longer. All replaced Products, parts, components, boards and equipment shall become the property of SAMSUNG. Except to any extent expressly allowed by applicable law, transfer or assignment of this Limited Warranty is prohibited.

What must you do to obtain warranty service?

To obtain service under this Limited Warranty, you must return the Product to an authorized phone service facility in an adequate container for shipping, accompanied by the sales receipt or comparable proof of sale showing the original date of purchase, the serial number of the Product and the seller's name and address.

To obtain assistance on where to deliver the Product, please call SAMSUNG Customer Care at 1-888-987-4357. If SAMSUNG determines that any Product is not covered by this Limited Warranty, you must pay all parts, shipping, and labor charges for the repair or return of such Product.

You should keep a separate backup copy of any contents of the Product before delivering the Product to SAMSUNG for warranty service, as some or all of the contents may be deleted or reformatted during the course of warranty service.

What are the limits on SAMSUNG's liability?

THIS LIMITED WARRANTY SETS OUT THE FULL EXTENT OF SAMSUNG'S RESPONSIBILITIES, AND THE EXCLUSIVE REMEDY REGARDING THE PRODUCTS.

ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SAMSUNG BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR FOR, WITHOUT LIMITATION, COMMERCIAL LOSS OF ANY SORT; LOSS OF USE, TIME, DATA, REPUTATION, OPPORTUNITY, GOODWILL, PROFITS OR SAVINGS; INCONVENIENCE; INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES; OR DAMAGES ARISING FROM THE USE OR INABILITY TO USE THE PRODUCT. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU.

SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT USED IN CONJUNCTION WITH THE PRODUCT, OR THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE. RESPONSIBILITY FOR THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT RESTS SOLELY WITH THE USER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT.

Nothing in the Product instructions or information shall be construed to create an express warranty of any kind with respect to the Products. No agent, employee, dealer, representative or reseller is authorized to modify or extend this Limited Warranty or to make binding representations or claims, whether in advertising, presentations or otherwise, on behalf of SAMSUNG regarding the Products or this Limited Warranty.

This Limited Warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

What is the procedure for resolving disputes?

ALL DISPUTES WITH SAMSUNG ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCTS SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY.

Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action. The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted according to the American Arbitration Association (AAA) Commercial Arbitration Rules applicable to consumer disputes. This arbitration provision is entered pursuant to the Federal Arbitration Act. The laws of the State of Texas, without reference to its choice of laws principles, shall govern the interpretation of the Limited Warranty and all disputes that are subject to this arbitration provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty.

For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are $5,000.00 or less ("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part of any award, but may not grant SAMSUNG its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or $50.00 of such fees, whichever is less, and SAMSUNG shall pay the remainder of such fees. Administrative, facility and arbitrator fees for arbitrations in which your total damage claims, exclusive of attorney fees and expert witness fees, exceed $5,000.00 ("Large Claim") shall be determined according to AAA rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction.

This arbitration provision also applies to claims against SAMSUNG's employees, representatives and affiliates if any such claim arises from the Product's sale, condition or performance.

You may opt out of this dispute resolution procedure by providing notice to SAMSUNG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product. To opt out, you must send notice by e-mail to optout@sta.samsung.com, with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the Product was purchased; (c) the Product model name or model number; and (d) the IMEI or MEID or Serial Number, as applicable, if you have it (the IMEI or MEID or Serial Number can be found (i) on the Product box; (ii) on the Product information screen, which can be found under "Settings;" (iii) on a label on the back of the Product beneath the battery, if the battery is removable; and (iv) on the outside of the Product if the battery is not removable). Alternatively, you may opt out by calling 1-888-987-4357 no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty.

Severability

If any portion of this Limited Warranty is held to be illegal or unenforceable, such partial illegality or unenforceability shall not affect the enforceability of the remainder of the Limited Warranty.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Important! Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Samsung Telecommunications America, LLC
1301 E. Lookout Drive
Richardson, Texas 75082

Phone: 1-800-SAMSUNG
Phone: 1-888-987-HELP (4357)

©2012 Samsung Telecommunications America, LLC. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice. [111611]

End User License Agreement for Software

IMPORTANT. READ CAREFULLY: This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. ("Samsung Electronics Co.") for software, owned by Samsung Electronics Co. and its affiliated companies and its third party suppliers and licensors, that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software"). **Samsung Electronics Co. is a separate company from the company that provides the limited warranty for this mobile device, Samsung Telecommunications America, LLC.**

This device requires the use of preloaded software in its normal operation. BY USING THE DEVICE OR ITS PRELOADED SOFTWARE, YOU ACCEPT THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THESE TERMS, **DO NOT USE** THE DEVICE OR THE SOFTWARE. INSTEAD, RETURN THE DEVICE TO THE RETAILER FOR A REFUND OR CREDIT.

1. GRANT OF LICENSE. Samsung Electronics Co. grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.

2. RESERVATION OF RIGHTS AND OWNERSHIP. Samsung Electronics Co. reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Samsung Electronics Co. or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

3. LIMITATIONS ON END USER RIGHTS. You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law not withstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.

4. CONSENT TO USE OF DATA. You agree that Samsung Electronics Co. and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any. Samsung Electronics Co. and its affiliates may use this information solely to improve their products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.

5. UPGRADES. This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung Electronics Co. may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung Electronics Co. as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

6. SOFTWARE TRANSFER. You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.

7. EXPORT RESTRICTIONS. You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. TERMINATION. This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung Electronics Co. if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you must cease all use of the Software and destroy all copies, full or partial, of the Software.

9. Disclaimer of Warranty. ALL SOFTWARE PROVIDED BY SAMSUNG ELECTRONICS CO. WITH THIS MOBILE DEVICE IS PROVIDED "AS IS" AND ON AN "AS AVAILABLE" BASIS, WITHOUT WARRANTIES OF ANY KIND FROM SAMSUNG ELECTRONICS CO., EITHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT POSSIBLE PURSUANT TO APPLICABLE LAW, SAMSUNG ELECTRONICS CO. DISCLAIMS ALL WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, FITNESS FOR A PARTICULAR PURPOSE, RELIABILITY OR AVAILABILITY, ACCURACY, LACK OF VIRUSES, QUIET ENJOYMENT, NON INFRINGEMENT OF THIRD PARTY RIGHTS OR OTHER VIOLATION OF RIGHTS. SOME JURISDICTIONS DO NOT ALLOW EXCLUSIONS OR LIMITATIONS OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY YOU FROM SAMSUNG ELECTRONICS CO. OR ITS AFFILIATES SHALL BE DEEMED TO ALTER THIS DISCLAIMER BY SAMSUNG ELECTRONICS CO. OF WARRANTY REGARDING THE SOFTWARE, OR TO CREATE ANY WARRANTY OF ANY SORT FROM SAMSUNG ELECTRONICS CO.

10. THIRD-PARTY APPLICATIONS. Certain third party applications may be included with, or downloaded to this mobile device. Samsung Electronics Co. makes no representations whatsoever about any of these applications. Since Samsung Electronics Co. has no control over such applications, you acknowledge and agree that Samsung Electronics Co. is not responsible for the availability of such applications and is not responsible or liable for any content, advertising, products, services, or other materials on or available from such applications. You expressly acknowledge and agree that use of third party applications is at your sole

risk and that the entire risk of unsatisfactory quality, performance, accuracy and effort is with you. It is up to you to take precautions to ensure that whatever you select to use is free of such items as viruses, worms, Trojan horses, and other items of a destructive nature. References on this mobile device to any names, marks, products, or services of any third-parties are provided solely as a convenience to you, and do not constitute or imply an endorsement, sponsorship, or recommendation of, or affiliation with the third party or its products and services. You agree that Samsung Electronics Co. shall not be responsible or liable, directly or indirectly, for any damage or loss caused or alleged to be caused by, or in connection with, use of or reliance on any such third party content, products, or services available on or through any such application. You acknowledge and agree that the use of any third-party application is governed by such third party application provider's Terms of Use, License Agreement, Privacy Policy, or other such agreement and that any information or personal data you provide, whether knowingly or unknowingly, to such third-party application provider, will be subject to such third party application provider's privacy policy, if such a policy exists. SAMSUNG ELECTRONICS CO. DISCLAIMS ANY RESPONSIBILITY FOR ANY DISCLOSURE OF INFORMATION OR ANY OTHER PRACTICES OF ANY THIRD PARTY APPLICATION PROVIDER.

11. Disclaimer of Warranty Regarding Third Party Applications. SAMSUNG ELECTRONICS CO. DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE AVAILABILITY, USE, TIMELINESS, SECURITY, VALIDITY, ACCURACY, OR RELIABILITY OF, OR THE RESULTS OF THE USE OF, OR OTHERWISE RESPECTING, THE CONTENT OF ANY THIRD PARTY APPLICATION WHETHER SUCH THIRD PARTY APPLICATION IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG ELECTRONICS CO., IS DOWNLOADED, OR OTHERWISE OBTAINED. USE OF ANY THIRD PARTY APPLICATION IS DONE AT YOUR OWN DISCRETION AND RISK AND YOU ARE SOLELY RESPONSIBLE FOR ANY DAMAGE TO THE MOBILE DEVICE OR LOSS OF DATA THAT RESULTS FROM THE DOWNLOADING OR USE OF SUCH THIRD PARTY APPLICATIONS. SAMSUNG ELECTRONICS CO. EXPRESSLY DISCLAIMS ANY WARRANTY REGARDING WHETHER YOUR PERSONAL INFORMATION IS CAPTURED BY ANY THIRD PARTY APPLICATION PROVIDER OR THE USE TO WHICH SUCH PERSONAL INFORMATION MAY BE PUT BY SUCH THIRD PARTY APPLICATION PROVIDER. ANY THIRD PARTY APPLICATIONS PROVIDED WITH THIS MOBILE DEVICE

ARE PROVIDED "AS IS" AND ON AN "AS AVAILABLE" BASIS, WITHOUT WARRANTIES OF ANY KIND FROM SAMSUNG ELECTRONICS CO., EITHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT POSSIBLE PURSUANT TO APPLICABLE LAW, SAMSUNG ELECTRONICS CO. DISCLAIMS ALL WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, FITNESS FOR A PARTICULAR PURPOSE, RELIABILITY OR AVAILABILITY, ACCURACY, LACK OF VIRUSES, QUIET ENJOYMENT, NON INFRINGEMENT OF THIRD PARTY RIGHTS OR OTHER VIOLATION OF RIGHTS. SAMSUNG ELECTRONICS CO. DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE THIRD PARTY APPLICATION, THAT THE FUNCTIONS CONTAINED IN THE THIRD PARTY APPLICATION WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE THIRD PARTY APPLICATION WILL BE UNINTERRUPTED OR ERROR FREE, OR THAT DEFECTS IN THE THIRD PARTY APPLICATION WILL BE CORRECTED. YOU ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR, OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW EXCLUSIONS OR LIMITATIONS OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY YOU FROM SAMSUNG ELECTRONICS CO. OR ANY OTHER PERSON OR ENTITY SHALL BE DEEMED TO ALTER THIS DISCLAIMER OF WARRANTY REGARDING THIRD PARTY APPLICATIONS, OR TO CREATE ANY WARRANTY BY SAMSUNG ELECTRONICS CO.

12. Limitation of Liability. SAMSUNG ELECTRONICS CO. WILL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND ARISING OUT OF OR RELATING TO THE USE OR THE INABILITY TO USE THE SOFTWARE OR ANY THIRD PARTY APPLICATION, ITS CONTENT OR FUNCTIONALITY, INCLUDING BUT NOT LIMITED TO DAMAGES CAUSED BY OR RELATED TO ERRORS, OMISSIONS, INTERRUPTIONS, DEFECTS, DELAY IN OPERATION OR TRANSMISSION, COMPUTER VIRUS, FAILURE TO CONNECT, NETWORK CHARGES, IN-APP PURCHASES, AND ALL OTHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES EVEN IF SAMSUNG ELECTRONICS CO. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. NOTWITHSTANDING THE FOREGOING, SAMSUNG ELECTRONIC CO.'S TOTAL LIABILITY TO YOU FOR ALL

LOSSES, DAMAGES, CAUSES OF ACTION, INCLUDING BUT NOT LIMITED TO THOSE BASED ON CONTRACT, TORT, OR OTHERWISE, ARISING OUT OF YOUR USE OF THE SOFTWARE OR THIRD PARTY APPLICATIONS ON THIS MOBILE DEVICE, OR ANY OTHER PROVISION OF THIS EULA, SHALL NOT EXCEED THE AMOUNT PURCHASER PAID SPECIFICALLY FOR THIS MOBILE DEVICE OR ANY SUCH THIRD PARTY APPLICATION THAT WAS INCLUDED WITH THIS MOBILE DEVICE. THE FOREGOING LIMITATIONS, EXCLUSIONS, AND DISCLAIMERS (INCLUDING SECTIONS 9, 10, 11 AND 12) SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

13. U.S. Government End Users Restricted Rights. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein. All Products are provided only with "restricted rights" with only those rights as are granted to all other end users pursuant to the terms and conditions herein. All Software and Products are provided subject to Federal Acquisition Regulation (FAR) 52.227.19.

14. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded.

15. DISPUTE RESOLUTION.

(a) Non-United States residents. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

(b) United States residents. ALL DISPUTES WITH SAMSUNG ELECTRONICS CO. ARISING IN ANY WAY FROM THIS EULA OR YOUR USE OF THE SOFTWARE SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY. Any such dispute shall not be combined or consolidated with any other person's or entity's claim or dispute, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action. The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The

arbitration shall be conducted according to the American Arbitration Association (AAA) Commercial Arbitration Rules applicable to consumer disputes. This arbitration provision is entered pursuant to the Federal Arbitration Act. The laws of the State of Texas, without reference to its choice of laws principles, shall govern the interpretation of the EULA and all disputes that are subject to this arbitration provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the EULA. For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are $5,000.00 or less ("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part of any award, but may not grant Samsung Electronics Co. its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or $50.00 of such fees, whichever is less, and Samsung Electronics Co. shall pay the remainder of such fees. Administrative, facility and arbitrator fees for arbitrations in which your total damage claims, exclusive of attorney fees and expert witness fees, exceed $5,000.00 ("Large Claim") shall be determined according to AAA rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction. This arbitration provision also applies to claims against Samsung Electronics Co.'s employees, representatives and affiliates if any such claim arises from the licensing or use of the Software. You may opt out of this dispute resolution procedure by providing notice to Samsung Electronics Co. no later than 30 calendar days from the date of the first consumer purchaser's purchase of this device. To opt out, you must send notice by e-mail to optout@sta.samsung.com, with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the device was purchased; (c) the device model name or model number; and (d) the IMEI or MEID or Serial Number, as applicable, if you have it (the IMEI or MEID or Serial Number can be found (i) on the device box; (ii) on the device information screen, which can be found under "Settings;" (iii) on a label on the back of the device beneath the battery, if the battery is removable; and (iv) on the outside of the device if the battery is not removable). Alternatively, you may opt out by calling 1-888-987-4357 no later than 30 calendar days from the date of

the first consumer purchaser's purchase of the device and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect your use of the device or its preloaded Software, and you will continue to enjoy the benefits of this license.

16. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung Electronics Co. relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect. [101212]

Sign Up Now

Customize your Samsung device experience

- Activate product warranty
- Access to a personalized My Samsung Mobile account
- No monthly fees

Get More

- Latest info on promotions, events and special offers on related products
- Review Samsung products and share your opinion
- Great deals on downloads

Register now at
www.samsung.com/register

Scan this code to go
directly to the registration page.

SAMSUNG
mobile

Index

A

Abc mode 61
About Device 136
Adding a New Contact
Idle Screen 66
Address Book 65
Adding a New Contact 66
Adding Pauses to Contact Numbers 67
Copying a contact to the Phone 77
Copying Contacts to Phone 76
Copying Contacts to SIM Card 76
Deleting Address Book Entries 77
Deleting Contacts from SIM card 77
Dialing a Number 68
Favorites 75
Finding an Address Book Entry 68
Group Settings 74
Managing Address Book Contacts 76
Service Dialing Numbers 77
Using Contacts List 68
Address Book Options 72
Airplane mode 108, 115
Alarm 163
AllShare Play 155
Configuring Settings 156
Sharing Media 157
Web Storage Setup 157
Amazon Kindle 158
Application manager 119
Applications
Using the Camcorder 90
Using the Camera 86
World Clock 164
Applications settings
allow mock locations 135
managing 119
running services 120
AT&T Code Scanner 158
AT&T DriveMode 159
AT&T Music
Playlists 80
AT&T Navigator 160
AT&T Smart Wi-Fi 148

B

Back key 29
Battery
Charging 10
Installing 7
Low Battery Indicator 11
Battery Use & Safety 190
Bigger Font
Setting 134
Blocking Mode 114
On 114
Bluetooth
Outgoing Headset Condition 56
Sending contacts 152
Books
Play Books 175

C

Calculator 161
Calendar 162
Call Functions 43

3-Way Calling
(Multi-Party Calling) 52
Address Book 45
Adjusting the Call Volume 50
Answering a Call 46
Call Back Missed Call 48
Call Duration 50
Call Log 47
Call Waiting 54
Correcting the Number 44
Dialing a Recent Number 44
Ending a Call 44
International Call 43
Making a Call 43
Manual Pause Dialing 43
Options During a Call 50
Putting a Call on Hold 51
Saving a recent call number to Address Book 48
Searching for a Number in Address Book 54
Using the Speakerphone 53
Viewing All Calls 47
Viewing Missed Calls 47
Camcorder 90
Camcorder Options 91
Shooting Video 90
Camcorder Options
Camcorder Options after a Video is Taken 92
Camera 86
Camera Options 87
Lock Screen Shortcut 121
Taking Pictures 86
Care and Maintenance 196
Changing Your Settings 106
Charging battery 10
Children and Cell Phones 186
Clock 121, 163
Code Scanner 158
Contacts 65
Cookies
Emptying 142
Creating a Playlist 80
Customizable key 30, 117

D

Date and Time 133
Developer Options 134
Dialing Options 47
Display
Icons 19
Using Negative Colors 134
Display / Touch-Screen 194
Do cell phones pose a health hazard? 182
Downloads 166
Draft Messages 94
DriveMode 159

E

Email 100
Creating a Corporate Email Account 100
Creating Additional Email Accounts 101
Switching Between Email Accounts 101
Emergency Calls 195
Making 44
With SIM 44
Without SIM 44

Entering Text 60
Changing the Text Entry Mode 61
Using 123Sym Mode 62
Using Abc Mode 61
Using Swype 63
Using Symbol/Numeric Mode 62
Exposure to Radio Frequency (RF) Signals 182

F

Facebook
Swpe Connect 129
FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices 201
FCC Notice and Cautions 203
Featured Apps 167
Font Size
Caption 179
Changing 134

G

Gallery 84
viewing pictures 84
viewing videos 85
Gestures
Overview 30
Shake to Update 31, 132
Getting Started 6
Setting Up Your Phone 6
Voice mail 14
Gmail 102
Personalize Swype 129
Google Maps 168
Google Play Music 81
Google Voice Typing 63
Google Voice Typing settings 126
GPS 194
Group
Adding a contact 74
Editing 75
Removing a contact 74
Group Settings
Editing a Caller Group 75

H

Health and Safety Information 182
Home City
Setting 121
Home key 29
Hotspot Guru 149
Hotspots 149

I

Icons
Application 22
Indicator 19
Icons, description 19
In-Call Options 50
Incognito 140
Create Window 140
Exit Window 140
Information Ticker 121
International Call 43
Internet 138

J

Joining Contacts 70

K

Keyboard Input Methods 126
Keyboard settings 126
Keypad
Changing Text Input 61
Kies via Wi-Fi 114
Kindle 158

L

Landscape 60
Language and keyboard settings
select locale 125
Live TV 83
Local 168
Location services settings 120
Lock Screen
Clock 121
Dual Clock 121
Say Wake-Up Command 122
Shortcuts 121
Ticker 121
Weather 122

M

Maps 168
Memo 170
Memory Card 41
Memory Card Installation 8
Menu
key 29
Menu Navigation 29
Message Options 94
Message Search 98
Messaging
Adding a Signature 100
Block Unknown Senders 100
Creating and Sending Text Messages 93
Deleting a message 97
Draft 94
Gmail 102
Locked 94
Options 94
Settings 98
Signing into Email 100
Signing into Gmail 102
Spam 94
Types of Messages 93
Messenger 104, 171
microSD card 8, 41
Installing 8
Removing 8
microSDHC card 8, 41
Mobile Hotspot 110
Mobile Web 138
Entering Text in the Mobile Web Browser 139
Navigating with the Mobile Web 138
Using Bookmarks 140
Mono
Audio Setup 134
Motion 132
Movies 83
Multimedia 78
Music File Extensions
3GP 78
AAC 78
AAC+ 78
eAAC+ 78
M4A 78
MP3 78
MP4 78
WMA 78
Music Player 78
adding music 80
creating a playlist 80
removing music 81
Mute 51, 54
My Files 171
myAT&T 172

N

Navigation 173
- command keys 29
- context-sensitive menus 30
- terms used 30
- touch gestures 30

Navigation Options 173
Navigator 160
Negative Colors 134
NFC 154

O

Operating Environment 199
Other Important Safety Information 203
Owner information 122

P

Password
- change 123

PC Connections 153
Phone
- Front View 16
- icons 19
- Rear View 18
- Switching On/Off 12

Phone information 136
Pictures 84
- Gallery 84

Play Books 175
Play Movies & TV 83
Play Music 81
Play Store 176
Powering
- Off 12
- On 12

Privacy settings
- factory data reset 131

Q

QWERTY keypad 60

R

Ready2Go 12
Reducing Exposure
- Hands-Free Kits and Other Accessories 185

Reject list 50
Reset
- factory data 131

Responsible Listening 197
Restricting Children's Access to Your Mobile device 202

S

S Voice 176
- Set Wake-Up Command 122

SafeSearch
- Filtering 179

Samsung Mobile Products and Recycling 192
Scientific calculator 161
SD Card 41
Security settings
- device administration 123
- trusted credentials 124

Service Dialing Numbers 77
Settings 106
Shortcuts 19
SIM card
- installation 7
- Installing 7

SIM card lock 123
Smart Practices While Driving 189
Smart Wi-Fi 148
Snooze 164

Software Update 137
Spam
Block Unknown Senders 100
Manually Register a Number 100
Register a Phrase 100
Settings 100
Spam Messages 94
Assigning 94
Speakerphone Key 53
Specific Absorption Rate (SAR) Certification Information 187
Standard Limited Warranty 205
Stopwatch 165
SugarSync
Setup 157
Swap 52
SWYPE
entering text using 63
Swype
Cellular Data 129
Connect 128
Contribute Data Usage 129
Preferences 128
Updates 129
Swype Keypad Settings 128
Swype Settings 64
Symbol/Numeric mode 62
Synchronization settings
auto-sync 120

T

T9 Trace 126
Tethering 110
Text Input
Abc mode 61
Methods 60
numeric mode 62
symbol mode 62
Time 133
Timer 165
Automatic Answering 56
Touch Screen 12
Lock/Unlock 12
Travel Charger 10
Using 10
TTY Mode 59
TV 83
Twitter
Personalize Swype 129

U

UL Certified Travel Charger 193
Understanding Your Phone 15
Features of Your Phone 15
Front View 16
Rear View 18
Top, Bottom, Side Views 17
Unmute 51
USB settings
mass storage device 153
USB Tethering 110
Using Favorites
Adding Favorites 141
Deleting a Favorite 142
Editing Favorites 141

V

Video Player 82
Voice Mail
Accessing 14
From Another Phone 14
Setup 14
Voice Recorder 177
Volume 115

W

Warranty Information 205
Weather
Setting 122
Web 138
Web Browser
Internet 161
Widgets
Calculator 24
Camera 24
Email 25
Gmail 25, 167
Memo 26
Settings 28, 177
Video Player 28
Voice Recorder 28, 177
YouTube 28
Wi-Fi 145
using Kies via Wi-Fi 114
Wi-Fi Direct 106, 147
World Clock
Deleting an Entry 165
World clock 164

Y

YouTube 179
High Quality 179
SafeSearch Filtering 179
Settings 179
YPmobile (Yellowpages mobile) 180